

Falcon™ 4-CLHS Series

Camera User's Manual

CLHS True High Performance Area Scan

sensors | cameras | frame grabbers | processors | software | vision solutions



P/N: 03-032-20295-04
www.teledynedalsa.com



Notice

© 2021-2022 Teledyne Digital Imaging, Inc.

Teledyne DALSA believes all information provided in this manual to be accurate and reliable. Teledyne DALSA assumes no responsibility for its use. We reserve the right to make changes to this information without notice. We prohibit the reproduction of this manual in whole or in part by any means without prior permission obtained from Teledyne DALSA.

Microsoft and Windows are registered trademarks of Microsoft Corporation in the United States and other countries. Windows, Windows 10 are trademarks of Microsoft Corporation.

All other trademarks or intellectual properties mentioned herein belong to their respective owners.

Document Date: 2022-12-05

Document Number: 03-032-20295-04

About Teledyne DALSA

Teledyne DALSA, a business unit of Teledyne Digital Imaging Inc., is an international high-performance semiconductor and Electronics Company that designs, develops, manufactures, and markets digital imaging products and solutions, in addition to providing wafer foundry services.

Teledyne DALSA offers the widest range of machine vision components in the world. From industry-leading image sensors through powerful and sophisticated cameras, frame grabbers, vision processors and software easy-to-use vision appliances and custom vision modules.

Contact Teledyne DALSA

Teledyne DALSA's headquarters are in Waterloo, Ontario, Canada. We have sales offices in the USA, Europe and Asia, plus a worldwide network of representatives and agents to serve you efficiently.

Contact information for sales, support inquiries and directions to our offices are found on our web site:

Sales Offices:

<http://www.teledynedalsa.com/corp/contact/offices/>

Technical Support:

<http://www.teledynedalsa.com/imaging/support/>

This document does not contain information whose export/transfer/disclosure is restricted by the Canadian Export Control regulation.

Contents

SERIES OVERVIEW	5
DESCRIPTION	5
<i>Falcon4-CLHS Overview</i>	5
MODEL PART NUMBERS	6
<i>Monochrome Cameras</i>	6
<i>Supported Teledyne DALSA Frame Grabbers</i>	6
<i>Camera Firmware</i>	6
<i>Accessories</i>	7
HARDWARE AND SOFTWARE ENVIRONMENTS	8
<i>Mounting</i>	8
<i>Frame Grabbers and Cabling</i>	8
<i>Software Platforms</i>	8
<i>Development Software for Camera Control</i>	8
FALCON4-CLHS SPECIFICATIONS	9
COMMON SPECIFICATIONS	9
<i>Sensor Cosmetic Specifications</i>	10
FALCON4-CLHS SPECIFICATIONS: M4480, M4400	11
<i>Quantum Efficiency Curves M4480, M4400</i>	12
Spectral Responsivity	12
Effective Quantum Efficiency	12
FALCON4-CLHS SPECIFICATIONS: M8200	13
<i>Quantum Efficiency Curves M8200</i>	14
Spectral Responsivity	14
Effective Quantum Efficiency	14
INSTALLATION	15
REQUIREMENTS	15
<i>Frame Grabber and Cables</i>	15
Camera Link HS Cables	15
Camera Power	15
<i>Software, firmware and device driver downloads</i>	16
QUICK START (USING A TELEDYNE DALSA FRAME GRABBER)	17
INSTALLATION DETAILS	18
<i>Sapera LT Installation</i>	18
<i>Board Driver Installation</i>	18
TESTING ACQUISITION	19
<i>Start CamExpert</i>	19
<i>Upload Camera Firmware</i>	19
<i>Verify Basic Acquisition</i>	20
FALCON4-CLHS CONNECTORS AND STATUS LED	21
<i>Connectors</i>	21
<i>LED Indicators</i>	22
Camera Status LED Indicator	22
PREVENTING OPERATIONAL FAULTS DUE TO ESD	23
OPERATIONAL REFERENCE	24
USING CAMEXPERT WITH FALCON4-CLHS	24
<i>CamExpert Panes</i>	24
CamExpert View Parameters Option	25

CAMERA FEATURE CATEGORIES	26
CAMERA INFORMATION CATEGORY	27
<i>Camera Information Feature Descriptions</i>	27
<i>Power-up Configuration Dialog</i>	30
Camera Power-up Configuration	30
Load / Save Configuration	30
CAMERA CONTROL CATEGORY	31
<i>Camera Control Feature Descriptions</i>	31
<i>Long Exposure Mode, Time Exposure, Fast Readout Mode, and Gain</i>	33
DIGITAL IO CONTROL CATEGORY	34
<i>Digital IO Control Feature Descriptions</i>	35
I/O Module Block Diagram	37
Trigger Mode Details	38
Trigger Source Types (Trigger Mode = On)	38
Trigger Overlap: Feature Details	39
DATA PROCESSING CATEGORY	40
<i>Data Processing Feature Descriptions</i>	41
<i>FPN Correction</i>	42
<i>Performing an FPN Setup via Spera CamExpert</i>	43
FPN Correction	43
<i>Defective Pixel Replacement</i>	47
Example User Defective Pixel Map XML File	47
Monochrome Defective Pixel Replacement Algorithm Description	48
LENS SHADING CORRECTION CATEGORY	49
<i>Lens Shading Correction Feature Descriptions</i>	49
<i>Lens Shading Calibration</i>	50
LUT CATEGORY	51
<i>LUT Feature Description</i>	51
<i>Lookup Table (LUT) Overview</i>	52
LUT Size vs. Pixel Format	52
IMAGE FORMAT CONTROL CATEGORY	53
<i>Image Format Control Feature Description</i>	54
<i>Width and Height Features for Partial Scan Control</i>	56
Vertical Cropping (Partial Scan)	56
Maximum Frame Rate Examples	57
Horizontal Cropping (Partial Scan)	57
<i>Multiple ROIs</i>	59
<i>Binning Function</i>	60
<i>Internal Test Pattern Generator</i>	61
TRANSPORT LAYER CATEGORY	62
<i>Transport Layer Feature Descriptions</i>	62
ACQUISITION AND TRANSFER CONTROL CATEGORY	63
<i>Acquisition and Transfer Feature Descriptions</i>	63
Acquisition Buffering	64
<i>Features that cannot be changed during a Transfer</i>	64
DEVICE COUNTER AND TIMER CONTROL CATEGORY	65
<i>Device Counter and Timer Control Feature Descriptions</i>	66
Counter and Timer Group Block Diagram	69
Example: Counter Start Source = OFF	70
Example: Counter Start Source = CounterEnd (itself)	70
Example: CounterStartSource = EVENT and Signal (Edge Base)	71
Example: CounterStartSource = Line (Edge Base) Example	71
CYCLING PRESET CATEGORY	72
<i>Cycling Preset Mode Feature Description</i>	72
<i>Using Cycling Presets—a Simple Example</i>	75

Multi-Exposure Cycling Example Setup	75
<i>Cycling Reset Timing Details</i>	76
Case 1: Cycling with Internal Synchronous Increment	76
Case 2: Cycling with External Asynchronous Increment	77
<i>Using Cycling Presets with Output Controls</i>	78
Feature Settings for this Example	78
<i>Cycling Mode Constraints with Changing ROIs</i>	79
METADATA CONTROLS CATEGORY	80
<i>Metadata Controls Feature Description</i>	80
<i>Extracting Metadata Stored in a Sapera Buffer</i>	81
<i>Metadata Structure</i>	81
<i>Metadata Availability</i>	83
<i>Digital Gain (raw)</i>	83
<i>Analog Gain (raw)</i>	84
FILE ACCESS CONTROL CATEGORY	85
<i>File Access Control Feature Descriptions</i>	85
<i>Updating Firmware via File Access in CamExpert</i>	87
IMPLEMENTING TRIGGER-TO-IMAGE RELIABILITY	88
OVERVIEW	88
<i>T2IR with Falcon4-CLHS</i>	88
FEATURES FOR T2IR MONITORING	89
TECHNICAL SPECIFICATIONS	90
FALCON4-CLHS IDENTIFICATION AND MECHANICAL	90
<i>Temperature Management</i>	90
MECHANICAL SPECIFICATIONS WITH M42 MOUNT	91
SENSOR ALIGNMENT SPECIFICATION	93
CONNECTORS	94
<i>Camera Link HS (CX4)</i>	94
<i>10-pin I/O Connector Details</i>	94
Pinout Details for FA-HM00-M4485	95
Pinout Details for FA-HM10-M4485, FA-HM11-M4405, FA-HM10-M8205	95
Camera DC Power Characteristics	95
I/O Mating Connector Specifications & Sources	96
<i>Input Signals Electrical Specifications</i>	98
External Input Details	98
External Input DC Characteristics	98
External Input AC Timing Characteristics	99
External Inputs: Using TTL/LVTTL Drivers	99
External Inputs: Using Common Collector NPN Drivers	100
External Inputs: Using Common Emitter NPN Driver	100
External Inputs: Using a Balanced Driver	101
<i>Output Signals Electrical Specifications</i>	101
External Output Details and DC Characteristics	101
External Output AC Timing Characteristics	102
External Outputs: Using External TTL/LVTTL Drivers	104
External Outputs: Using External LED Indicators	104
Using Falcon4 Outputs to drive other Falcon4 Inputs	106
DECLARATIONS OF CONFORMITY	107
<i>FCC Statement of Conformance</i>	107
FCC Class A Product	107
<i>EU and UKCA Declaration of Conformity</i>	107

ADDITIONAL REFERENCE INFORMATION	108
CHOOSING A LENS WITH THE CORRECT IMAGE CIRCLE	108
<i>Lens Options for Models with M42 Mounts</i>	108
<i>Additional Lens Parameters (application specific)</i>	109
OPTICAL CONSIDERATIONS	110
<i>Illumination</i>	110
<i>Light Sources</i>	110
Back Focal Variance when using any Filter	111
<i>Lens Modeling</i>	112
<i>Magnification and Resolution</i>	112
SENSOR HANDLING INSTRUCTIONS	113
<i>Electrostatic Discharge and the Sensor</i>	113
<i>Protecting Against Dust, Oil and Scratches</i>	113
<i>Cleaning the Sensor Window</i>	114
I/O CABLE ACCESSORIES	115
<i>Cable Manufacturers Contact Information</i>	115
<i>Cable Assembly G5-AIOC-BLUNT2M</i>	116
<i>Generic Power Supply with no I/O</i>	118
TROUBLESHOOTING	119
OVERVIEW	119
<i>Problem Type Summary</i>	119
Before Contacting Technical Support	119
DEVICE AVAILABLE WITH OPERATIONAL ISSUES	119
<i>Firmware Updates</i>	119
<i>Power Failure during a Firmware Update—Now What?</i>	120
<i>Cabling and Communication Issues</i>	120
<i>Camera is functional, frame rate is as expected, but image is black</i>	120
REVISION HISTORY	121
CONTACT INFORMATION	122
SALES INFORMATION	122
TECHNICAL SUPPORT	122

Series Overview

Description

The Falcon4-CLHS series provides affordable easy to use digital cameras specifically engineered for industrial imaging applications, starting with the industries' latest leading sensors such as the E2V Lince 11M series of global shutter high frame rate CMOS sensors. Cameras will be available in a number of models implementing different sensors, image resolutions and feature sets.

Falcon4-CLHS supports the Teledyne DALSA Trigger-to-Image-Reliability framework to dependably capture and transfer images from the camera to the host PC.

Falcon4-CLHS Overview

- CLHS 10 Gbps interface per lane
- Supports a power supply input of 10 to 30 Vdc
- Supports the CLHS device discovery methodology providing plug and play capability
- Implements GenICam and associated GenCP compatible with Teledyne DALSA or third party CLHS frame grabbers
- Acquisitions in 8 or 10-bit
- Optimized, rugged design with a wider operating temperature
- Available in multiple models of different resolutions and maximum frame rates
- Visual camera multicolor status LED on back plate
- Uses one CX4 cable connection
- Flexible general-purpose Counter and Timer functions available for internal and external controls
- Defective Pixel replacement & Flat Field correction available
- Lens Shading Correction maps for lens vignetting
- Horizontal and Vertical Binning
- Application development with the freely available Sapera™ LT software libraries
- Native Teledyne DALSA Trigger-to-Image Reliability design framework
- Refer to the Operation Reference and Technical Specifications section of the manual for full details
- Compliant with Camera Link HS (CLHS) specification version 1.0 (X-Protocol)
(visit <http://www.visiononline.org/vision-standards.cfm> for details on industry standards)

Model Part Numbers

This manual covers the released Falcon4-CLHS monochrome models summarized in the table below. See [Falcon4-CLHS Specifications](#) for details.

Monochrome Cameras

Falcon4 Model Full Resolution	Sensor / max FPS	Data Format	Lens Mount	Part Number
M4400 4480 x 2496	E2V Lince 11M (330 fps)	8-bit or 10-bit Mono	M42 mount	FA-HM11-M4405
M4480 4480 x 2496	E2V Lince 11M (600 fps)	8-bit or 10-bit Mono	M42 mount	FA-HM00-M4485 FA-HM10-M4485
M8200 8192 x 8192	E2V Emerald 67M (90 fps)	8-bit or 10-bit Mono	M42 mount	FA-HM10-M8205

Supported Teledyne DALSA Frame Grabbers

Falcon4 Model	Teledyne DALSA Frame Grabber	Part Number
M4400	Xtium2 CLHS PX8	OR-A8S0-PX870
	Xtium2 CLHS PX8 LC	OR-A8S0-PX840
M4480	Xtium2 CLHS PX8	OR-A8S0-PX870
M8200	Xtium2 CLHS PX8	OR-A8S0-PX870


Camera Firmware

Teledyne DALSA Falcon4-CLHS camera firmware contains open-source software provided under different open-source software licenses. More information about these open-source licenses can be found in the documentation that accompanies the firmware, which is available on the Teledyne DALSA website at www.teledynedalsa.com.

Firmware updates are available for download from the Teledyne DALSA web site www.teledynedalsa.com/imaging/support/downloads.

When using Sopera LT, update the camera firmware using CamExpert (see [Updating Firmware via File Access in CamExpert](#)). The firmware can also be easily upgraded within your own application via the API. The camera has a failsafe scheme which prevents unrecoverable camera errors even in the case of a power interruption.

Accessories

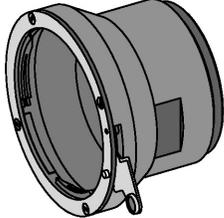Falcon4 Accessories & Cables (sold separately)		Order Number
<p>I/O Breakout Cable (2 meter Screw Retention to Euroblock connector)</p>		<p>G5-AIOC-BRKOUT2M</p>
<p>Generic 12 volt power supply for the I/O & Power connector (Samtec 10-Pin) – 4 Meter length</p>		<p>G3-APWS-S10S04M</p>
<p>M42 to F-mount (Nikon) adapter <i>Note that there is no support for Nikon lens features such as focus and aperture motor controls.</i></p>		<p>G2-AM42-MOUNT4</p>
<p>Heatsink compatible to Falcon4 casing, 51mm x 28mm x 15mm (screws included)</p>		<p>G3-AHSK-51X28</p>
<p>Mounting Bracket Plate, with 1/4 inch screw mount (tripod mount) 28 mm or 35mm of depth</p>		<p>G3-AMNT-BRA02</p>
<p>Active Optical Cable (AOC) cable 10 meters, with screw lock CX4 connector</p>		<p>AC-CA-00007-00-R</p>

Hardware and Software Environments

The following describes suggested hardware and supported software for successful imaging systems using the Falcon4-CLHS.

Mounting

The camera requires a mounting platform which includes camera heatsinking. Thermal management and heat dissipation is mandatory to ensure the camera remains within the stated operating temperature specification. See section [Mechanical Specifications with M42 Mount](#) for the location of the camera mounting screw holes.

Frame Grabbers and Cabling

A Teledyne DALSA frame grabber, such as the Xtium2-CLHS PX8, is recommended for error free acquisitions with the Falcon4 camera (contact sales for additional information).

See [Cable Manufacturers Contact Information](#) for contact information for information on CLHS CX4 cable suppliers and various I/O assemblies for your imaging solution.

Software Platforms

Platform	Notes
Support of GenICam GenCP	Camera setting, acquisition and other controls
Support of GenICam File access implementation	File access support for firmware update
Support of GenICam XML schema version 1.1	
GenICam™ support — XML camera description file	Embedded within Falcon4

Development Software for Camera Control

Teledyne DALSA Software Platform for Microsoft Windows	
Sapera LT for Windows — <ul style="list-style-type: none">• M4480, M4400: version 8.65 or later• M8200 : version 8.70 or later Includes Sapera Runtime and CamExpert. Provides everything you will need to develop imaging applications Sapera documentation provided in compiled HTML help and Adobe Acrobat® (PDF)	Available for download http://www.teledynedalsa.com/imaging/support/
Third Party Software Platforms	
GenICam GenCP Compliant Software and Tools	Contact your supplier

Falcon4-CLHS Specifications

The common specifications listed first are followed by model specific tables of functional features and timing details.

Common Specifications

Camera Controls	
Communication Protocol	GenCP (GenICam GenCP compliant software), CLHS X Protocol
Synchronization Modes	Free running, Triggered (via CX4 cable or external I/O)
Exposure Control	Internal – Programmable via the camera API External – Timed Trigger or Trigger Width modes supported via I/O
Exposure Time Minimum / Maximum	5 μ s – 0.5 s (M4480, M4400) 8 μ s – 0.5 s (M8200)
Exposure Modes	Timed: Programmable in increments of 1 μ s (minimum time (in μ s) is model specific) Trigger Width: Pulse controlled via external Trigger pulse width
Input / Output Ports	2 input / 3 output ports (FA-HM00-M4485), opto-coupled 2 input / 4 output ports (FA-HM10-M4485, FA-HM11-M4405, FA-HM10-M8205), opto-coupled
Features	
Gain	In-sensor gain (sensor-specific), digital gain
Defective Pixel Replacement	Up to 1022 entries
Binning	2x2 (horizontal and vertical)
Lens Shading Correction	1 user coefficient set
LUT	Programmable LUT (lookup table) up to 10-bit
Counter and Timer	1 Counter and 1 Timer. User programmable, acquisition independent, with event generation, and can control Output I/O pins
Test image	Internal generator with choice of static patterns
Metadata	Metadata Output at the end of the Images (also known as GenICam Chunk Data)
Cycling Mode	Automatic cycling between 64 camera setups
Multi ROI	Multiple regions of interest (Max number of ROIs: 32 without cycling, 8 with cycling)
User settings	Select factory default or either of two user saved camera configurations
CLHS Link Speed	10.3 Gb/s per Lane 4 Data Lanes (FA-HM11-M4405) 7 Data Lanes (FA-HM10-M4485, FA-HM10-M4405, FA-HM10-M8205)
Back Focal Distance	
	12 mm (with M42 lens mount)
Optical Interface	
Sensor Alignment (Relative to sides of camera)	
Flatness	50 μ m
\ominus y	200 μ m (Parallelism vs. front plate)
x	\pm 100 μ m (Cross-Scan Direction)
y	\pm 100 μ m (In-Scan Direction)
z	\pm 300 μ m (Along optical axis)
\ominus z	\pm 1.0° (Rotation around optical axis)

Mechanical Interface	
Camera (H x W x L) see Mechanical Specifications	59 mm x 59 mm x 74.5 mm (M4480, M4400) 59 mm x 59 mm x 74.93 mm (M8200)
Mass	Small Case: ~ 317g
CX4 Connector Type	Camera Link HS
Power connector	Camera power via the power pins on the 10-pin I/O connector
Electrical Interface	
Input Voltage	+24 V nominal (+10 to +30 Volts DC maximum range)
Power Dissipation (typical)	<13 W @ 24 Vdc (M4480, M4400) <15 W @ 24 Vdc (M8200)
Environmental Conditions	
Operating Temperature (at camera front plate)	All Models: -20°C to +50°C (-4°F to +122°F). <i>Any metallic camera mounting provides heat sinking, thereby reducing the internal temperature</i>
Operating Relative Humidity	5% to 90% non-condensing
Storage	-40°C to +80°C (-4°F to +176°F) temperature at 20% to 80% non-condensing relative humidity
Conformity	GenIcam compliant CE, FCC, RoHS, KC EU RoHS2, EU REACH, China RoHS2
IP Rating	IEC60529 IP40 (Protected against foreign object of 1 mm diameter, no protection against water.)

Sensor Cosmetic Specifications

After Factory Calibration and/or Corrections are applied (if applicable — dependent on sensor)

Blemish Specifications	Maximum Number of Defects	Blemish Description
Hot/Dead Pixel defects	Typical 0.0025% Max 0.005%	Any pixel that deviates by $\pm 15\%$ from the average of neighboring pixels at 80% saturation including pixel stuck at 0 and maximum saturated value.
Spot defects	none	Grouping of more than 5 pixel defects within a sub-area of 3x3 pixels, to a maximum spot size of 5x5 pixels.
Clusters defects	none	Grouping of more than 5 single pixel defects in a 3x3 kernel.
Column defects	none	Vertical grouping of more than 10 contiguous pixel defects along a single column.
Row defects	none	Horizontal grouping of more than 10 contiguous pixel defects along a single row.

- **Test conditions**
 - Nominal light = illumination at 80% of saturation
 - Temperature of camera is 45°C
 - At exposures lower than 0.25 seconds
 - At nominal sensor gain (1x)

Falcon4-CLHS Specifications: M4480, M4400


Model specific specifications and response graphics for the Lince 11M series are provided here.

Supported Features	M4480	M4400
Resolution	4480 x 2496	4480 x 2496
Sensor	E2V Lince 11M	E2V Lince 11M
Pixel Size	6 μm x 6 μm	
Shutter Type	Full frame electronic global shutter function	
Full Well charge	> 38 ke	
Maximum Frame Rate (8-bit)	600 fps (burst acquisition)	330 fps
CLHS configuration (X-Protocol)	7-Lanes	4-Lanes
Pixel Format (Mono) 	Monochrome 8 or 10-bit	
Sensor Synchronization	Synchronous mode via external trigger signal or free running	
Trigger to Exposure Minimum delay (<i>Synchronous Exposure</i>)	9 μs (8-bit)	
Trigger to Exposure Minimum delay (<i>Reset Exposure</i>)	9 μs (8-bit)	
Trigger to Exposure Start jitter (<i>Synchronous Exposure</i>)	Up to 1 line time	
Trigger to Exposure Start jitter (<i>Reset Exposure</i>)	0 μs	
Exposure Time Minimum (see "exposureTimeActual" in Sensor Control)	5 μs	
Horizontal Line Time	0.655 μs	
Min. Time from End of Exposure to Start of Next Exposure	4.47 μs	
Readout Time (full frame size)	Number of rows must be a multiple of 8	
	8-bit / fast readout active: $20.3e-9 \cdot (128) \cdot (\text{number of rows} + 16) / 4 + 20.3e-9 \cdot (128)$	
	8-bit / fast readout off: $20.3e-9 \cdot (137) \cdot (\text{number of rows} + 16) / 4 + 20.3e-9 \cdot (137)$	
	10-bit / fast readout active: $20.3e-9 \cdot (154) \cdot (\text{number of rows} + 16) / 4 + 20.3e-9 \cdot (154)$	
	10-bit / fast readout off: $20.3e-9 \cdot (165) \cdot (\text{number of rows} + 16) / 4 + 20.3e-9 \cdot (165)$	
Black offset control	Yes (in DN)	
Gain Control	In-sensor Analog Gain (1x to 4x), FPGA Digital Gain	
Defective Pixel Replacement	Yes, up to 1022 pixel positions	
Multi-ROI Support	Yes	
Output Dynamic Range (dB)	> 59.5	
SNR (dB)	46	


Quantum Efficiency Curves M4480, M4400

The response curves describe the sensor, excluding lens and light source characteristics.

Spectral Responsivity

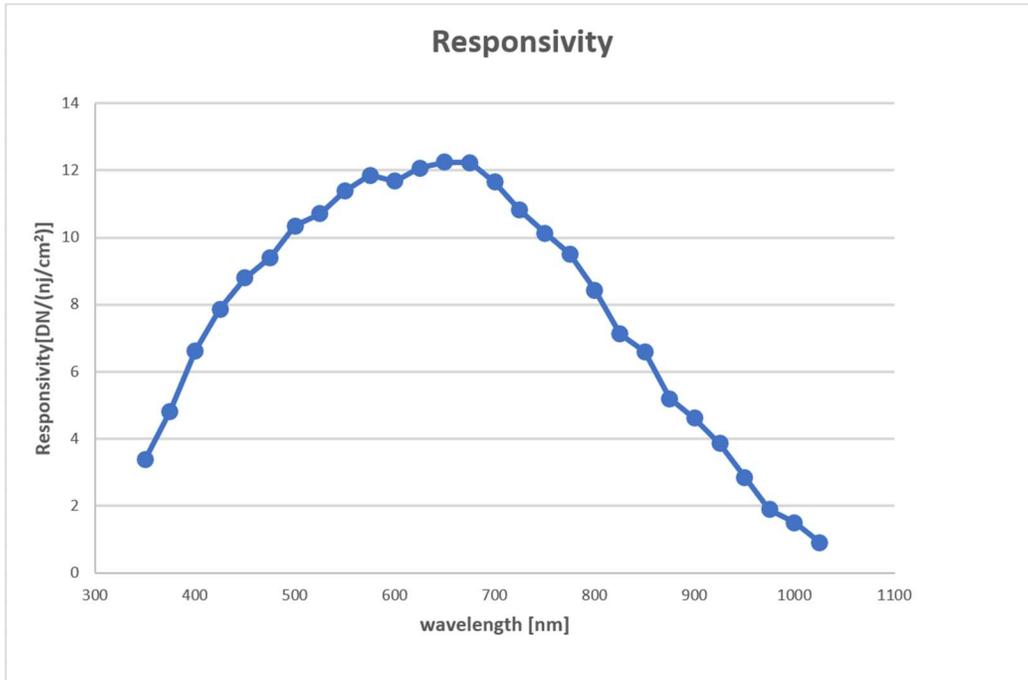

Effective Quantum Efficiency

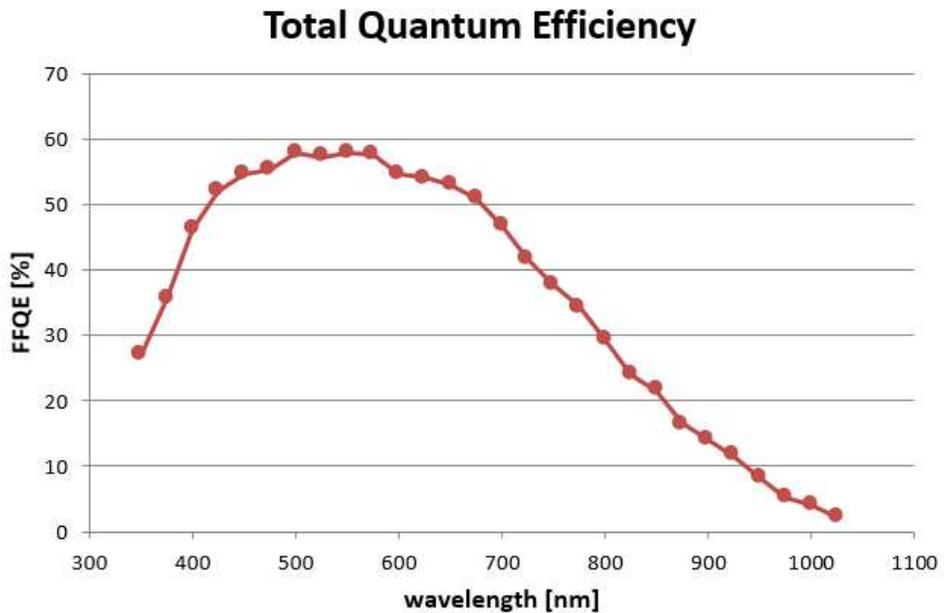

Falcon4-CLHS Specifications: M8200


Model specific specifications and response graphics for the Emerald 67M series are provided here.

Supported Features	M8200
Resolution	8192 x 8192
Sensor	E2V Emerald 67M
Pixel Size	2.5 μm x 2.5 μm
Shutter Type	Full frame electronic global shutter function
Full Well charge	> 5 ke
Maximum Frame Rate (8-bit)	90 fps
CLHS configuration (X-Protocol)	7-Lanes
Pixel Format (Mono) 	Monochrome 8-bit or 10-bit
Sensor Synchronization	Synchronous mode via external trigger signal or free running
Trigger to Exposure Minimum delay (<i>Synchronous Exposure</i>)	8 μs (8-bit)
Trigger to Exposure Minimum delay (<i>Reset Exposure</i>)	8 μs (8-bit)
Trigger to Exposure Start jitter (<i>Synchronous Exposure</i>)	Up to 1 line time
Trigger to Exposure Start jitter (<i>Reset Exposure</i>)	0 μs
Exposure Time Minimum (see "exposureTimeActual" in Sensor Control)	8 μs
Horizontal Line Time	2.68 μs
Min. Time from End of Exposure to Start of Next Exposure	7.5 μs
Readout Time (full frame size)	Number of rows must be a multiple of 2
	10 980 μs (8-bit) 12 148 μs (10-bit)
Black offset control	Yes (in DN)
Gain Control	In-sensor Analog Gain (1x to 4x), FPGA Digital Gain
Defective Pixel Replacement	Yes, up to 6132 pixel positions
Multi-ROI Support	Yes
Output Dynamic Range (dB)	> 52.25
SNR (dB)	36


Quantum Efficiency Curves M8200

The response curves describe the sensor, excluding lens and light source characteristics.

Spectral Responsivity

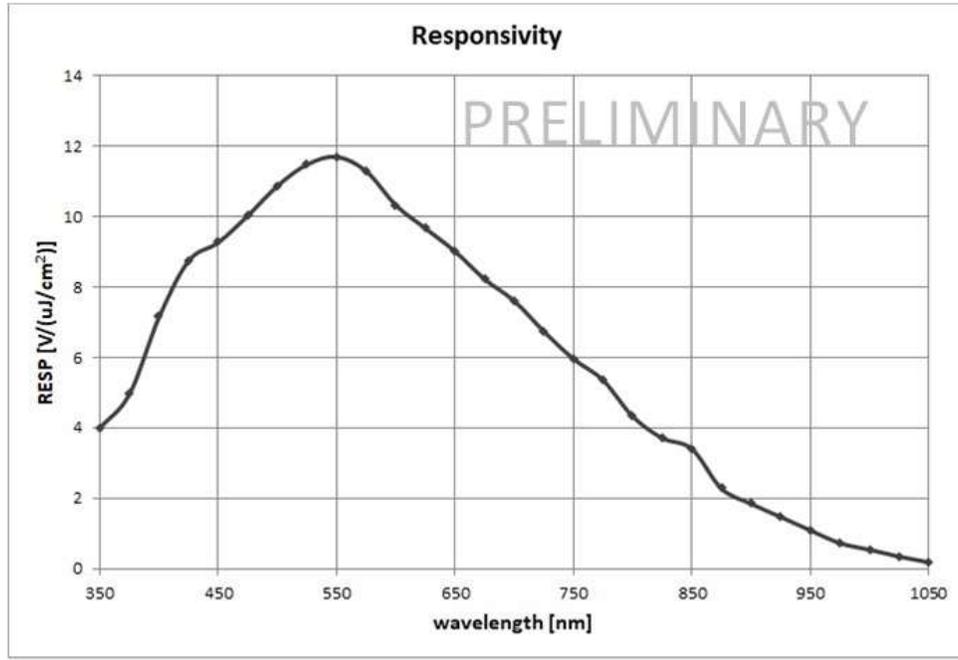

Effective Quantum Efficiency

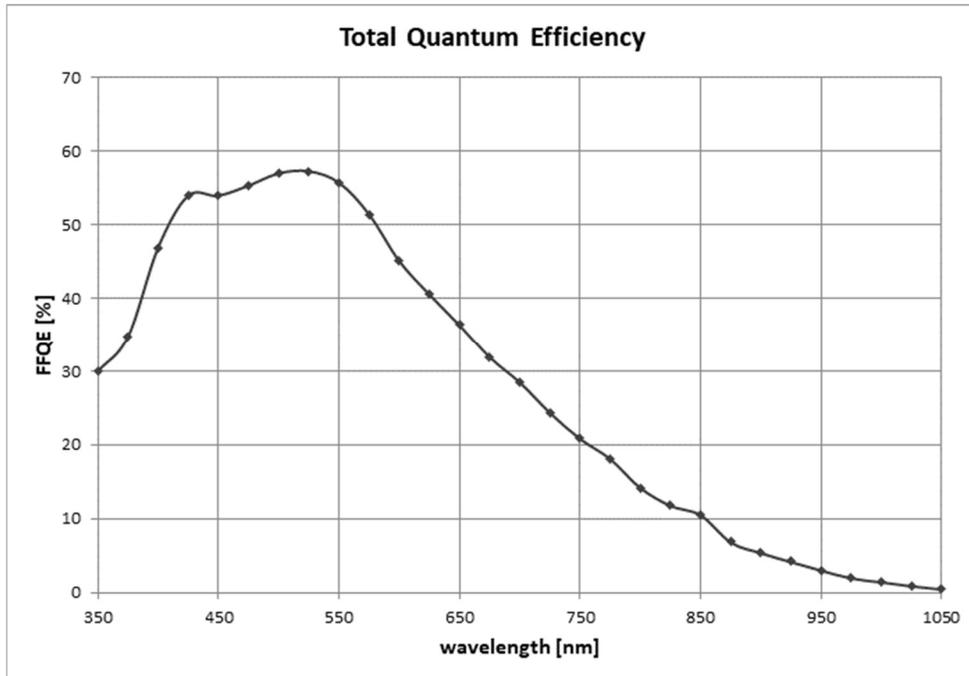

Installation

If you are familiar with CLHS cameras and Teledyne DALSA frame grabbers follow the [Quick Start](#) section to quickly install and acquire images with the Falcon4-CLHS and the CamExpert tool provided with Sapera LT.

If using CLHS cameras with frame grabbers is new to you, review the [Requirements](#) section for what you need before you start. See [Installation Details](#) for additional information on Sapera LT installation. Refer to your frame grabber's user manual for instructions related to the board installation.

Note that you need administrator rights for installation and updates.

Requirements

Frame Grabber and Cables

A frame grabber board such as the Teledyne DALSA Xtium2-CLHS PX8 / PX8 LC is the recommended computer interface.

Falcon4 Model	Teledyne DALSA Frame Grabber	Part Number
M4400	Xtium2 CLHS PX8	OR-A8S0-PX870
	Xtium2 CLHS PX8 LC	OR-A8S0-PX840
M4480 M8200	Xtium2 CLHS PX8	OR-A8S0-PX870

Camera Link HS Cables

The camera uses a Camera Link HS SFF-8470 (CX4) cable; AOC (Active Optical Connectors) cables are recommended due to the high-bandwidth CLHS X-Protocol (C3 copper cables < 2m may work but are not recommended). See [Falcon4-CLHS Connectors and Status LED](#).



Note: CX4 AOC cables are directional; ensure that the connector labelled "Camera" and "FG" are attached accordingly to the camera and frame grabber.

Visit our web site for additional information on the CLHS interface:

www.teledynedalsa.com/en/learn/knowledge-center/clhs/

Camera Power

Cameras with part number FA-HMxx-xxxxx support Power via the Auxiliary Connector (12 to 24 Volt DC). See [Falcon4-CLHS Connectors and Status LED](#).



The frame grabber PoCL (Power-over-Cable) powers the electronics in the Active Optical Cable (AOC) module. This frame grabber feature should not be disabled for normal operation.

Software, firmware and device driver downloads

Download the appropriate camera firmware, software and board driver from the Teledyne DALSA website. If the required version is not available, contact your Teledyne DALSA representative.

FALCON4-CLHS Model	Falcon4-CLHS Firmware Design	Software SDK	Xtium2-CLHS PX8/PX8 LC Board Driver
M4480 M4400	Falcon4-CLHS_e2v_11M_STD_Firmware_256.101.cbf or higher	Sapera LT 8.65 (or higher)	Version 1.31 or higher
M8200	Falcon4-CLHS_e2v_37-67M_STD_Firmware_xx.xx.cbf or higher	Sapera LT 8.70 (or higher)	Version 1.40 or higher

Falcon4-CLHS Firmware can be downloaded from the Teledyne DALSA website:

www.teledynedalsa.com/en/support/downloads-center/firmware

Sapera LT SDK (full version) is the image acquisition and control software development kit (SDK) for Teledyne DALSA cameras. It includes the CamExpert application, which provides a graphical user interface to access camera features for configuration and setup. Sapera LT is available for download from the Teledyne DALSA website:

www.teledynedalsa.com/en/products/imaging/vision-software/sapera-lt/download/

Xtium2-CLHS PX8/PX8 LC Board Drivers are available from the Teledyne DALSA website. Follow the installation instructions from the board's User Manual for the computer requirements, installation, and update.

www.teledynedalsa.com/en/support/downloads-center/device-drivers/

Quick Start (using a Teledyne DALSA Frame Grabber)

The following steps summarize the installation procedure. You need administrator rights for installation and updates.

- Turn off computer.
- Install the Xtium2-CLHS PX8 (or PX8 LC) into an available PCI Express x8 Gen3 slot.
- Turn on the computer.
- [Download and install the Sapera LT SDK or its runtime library:](#)
 - version 8.60 or newer required for Models M4480, M4400
 - version 8.70 or newer required for Model M8200
- [Download and install the Xtium2-CLHS PX8/PX8 LC board driver:](#)
 - version 1.31 or newer required for Models M4480, M4400
 - version 1.40 or newer required for Model M8200
- Update the board firmware, if required (a dialog will open in that case).
- Reboot the computer.
- Connect the Falcon4-CLHS with a CLHS camera cable to the CLHS frame grabber.
- Power the camera using an appropriate power supply. The Falcon4-CLHS status LED will indicate power and the Device / Host connection with a steady green color when connected. See section [Camera Status LED Indicator](#) for a complete list of Status LED indicators.


Once installed, upload new camera firmware and test acquisition:

- Start **CamExpert**. The plug-and-play feature of the frame grabber and camera will automatically configure frame buffer, data lanes, and frame rate parameters to match the Falcon4 model being used. At this time do not configure for an external trigger.
- Upload new camera firmware. See [Updating Firmware via File Access in CamExpert](#).
- From the Falcon4 Image Format Feature Category, select a test pattern from the *Test Image Selector* Parameter.
- Click grab. You will see the pattern in the CamExpert display window.
- If a camera lens is attached, turn off the test pattern and grab live again. Adjust the lens aperture plus focus, and/or adjust the camera [Exposure Time and frame rate](#) as required.

Installation Details

Sapera LT Installation

Start the Sapera LT installer and follow instructions. On the Acquisition Components page, select the *Teledyne DALSA frame grabbers and CameraLink GenCP compatible cameras* option.

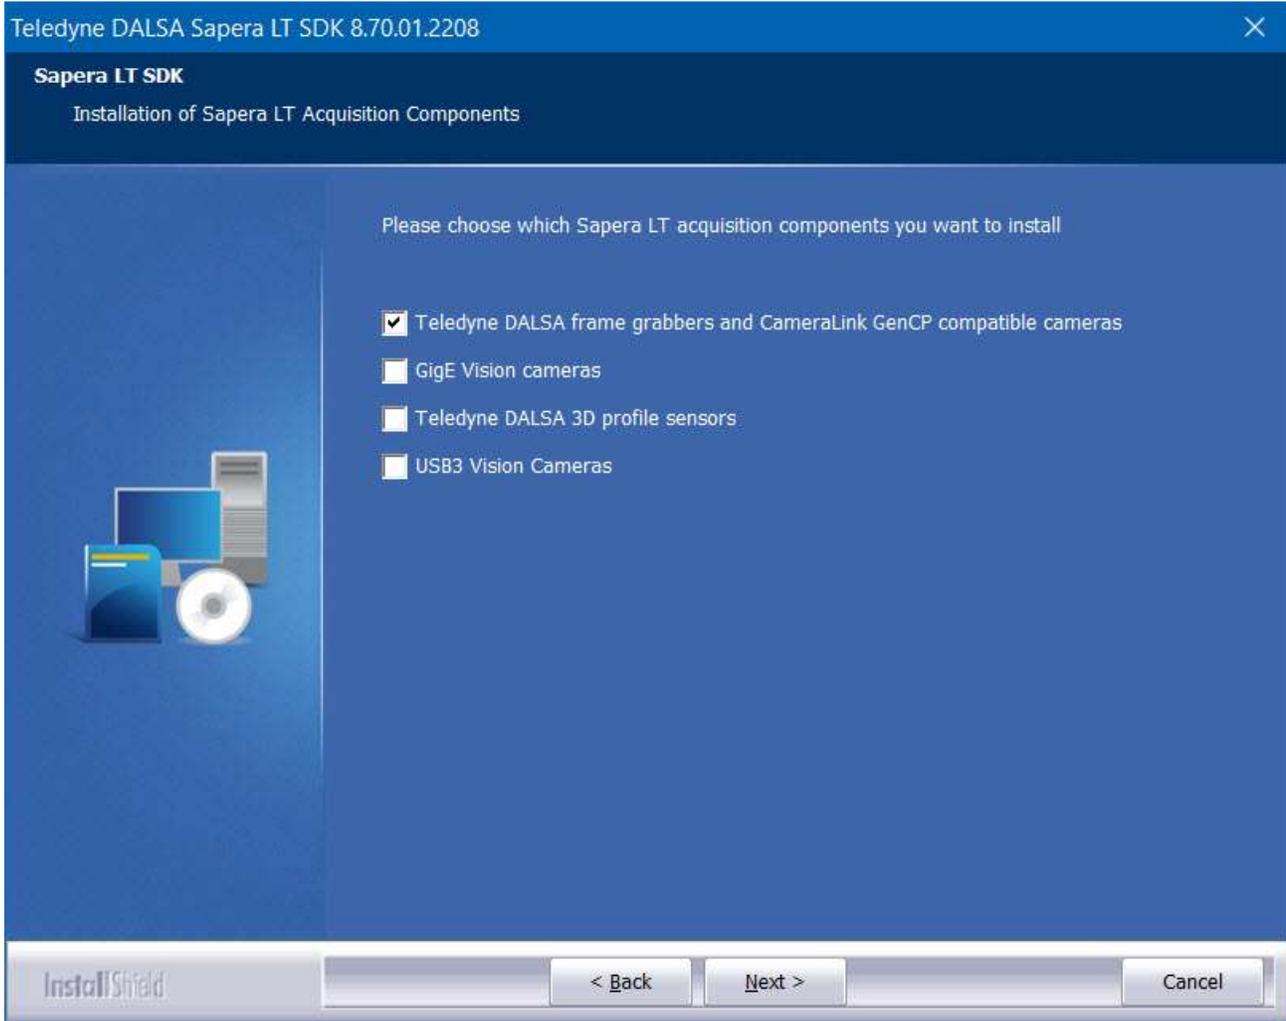

The installation program will prompt to reboot the computer. It is not necessary to reboot the computer between the installation of Sapera LT and the installation of the board driver. Reboot will be required after software and board driver are installed.

Board Driver Installation


Follow instructions in the frame grabber's user manual for installation of the frame grabber and board driver.

Testing Acquisition

Start CamExpert

CamExpert application is included as part of the Sopera LT SDK. It is Teledyne DALSA's camera and frame grabber interfacing tool that allows you to quickly validate hardware setup, change parameter settings, and test image acquisition. It is available from the Windows **Start** menu under **Teledyne DALSA Sopera LT > Sopera CamExpert**, or from the desktop shortcut (created at installation).

If there is only one Teledyne DALSA frame grabber, the **Device** list automatically has the Xtium2-CLHS PX8 selected and the connected Falcon4-CLHS is also automatically detected as shown in the image below.

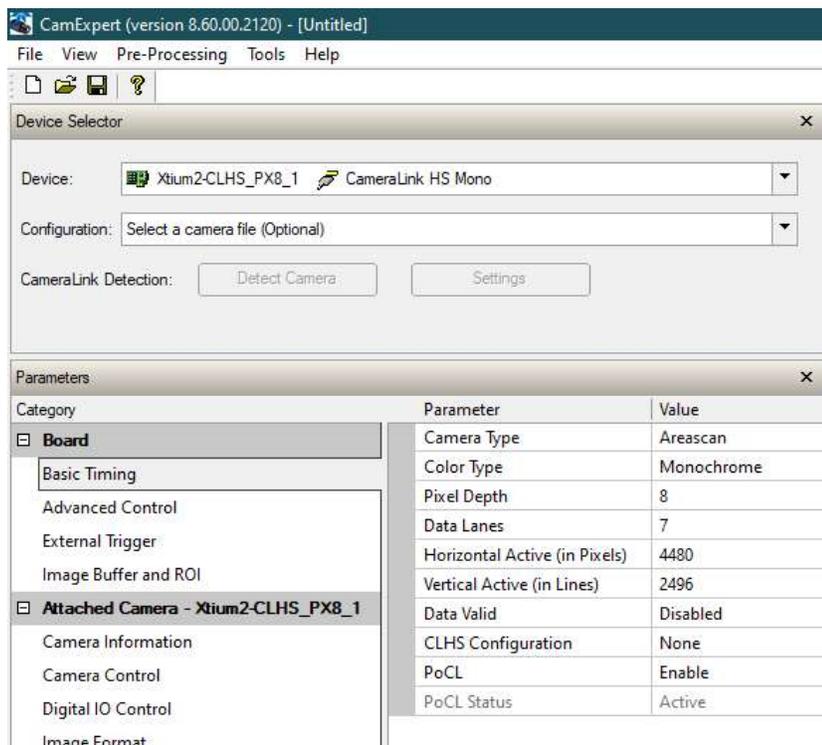

If the camera is not automatically detected, verify that the camera is properly powered and that the fiber optic cable is connected correctly to the appropriate connectors on the frame grabber and camera; cables are uni-directional and connectors are labelled "Camera" and "F G" (frame grabber).

See also [Using CamExpert with Falcon4-CLHS](#).


Upload Camera Firmware

Under Windows, the user can upload new firmware using the Upload/Download File feature in the [File Access Control](#) category provided by the Sopera CamExpert tool. See [Updating Firmware via File Access in CamExpert](#).


Verify Basic Acquisition

To verify basic acquisition, the camera can output a test pattern to validate that parameter settings are correctly configured between the camera and frame grabber.

- In the Image Format category, select Test Pattern – *Grey Diagonal Ramp Moving*.

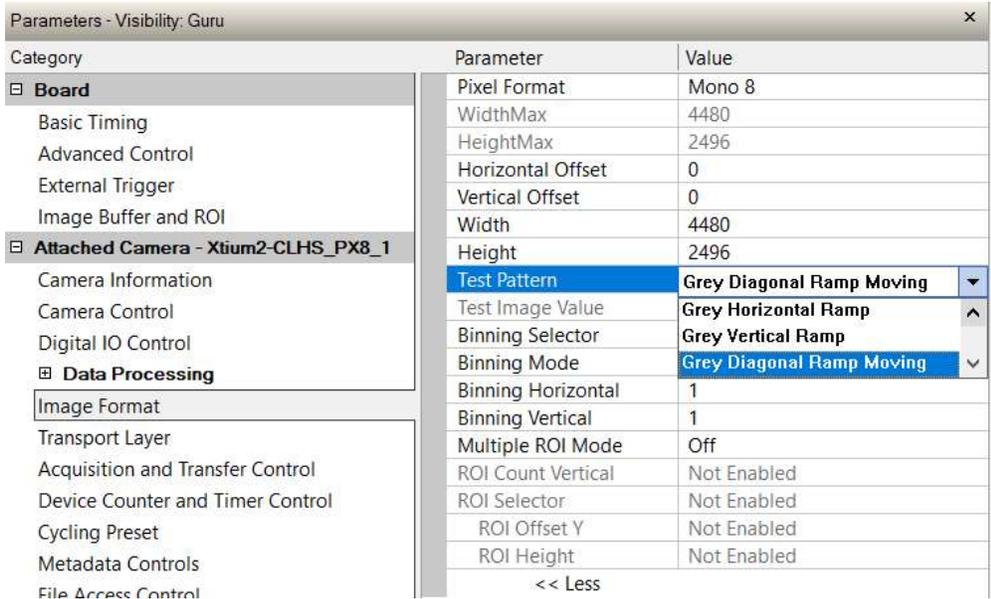


- (For model M8200 only) In the Basic Timing board category, click the Camera Sensor Geometry Setting value, and select *1X-2YE Two Channel Converge* as depicted.

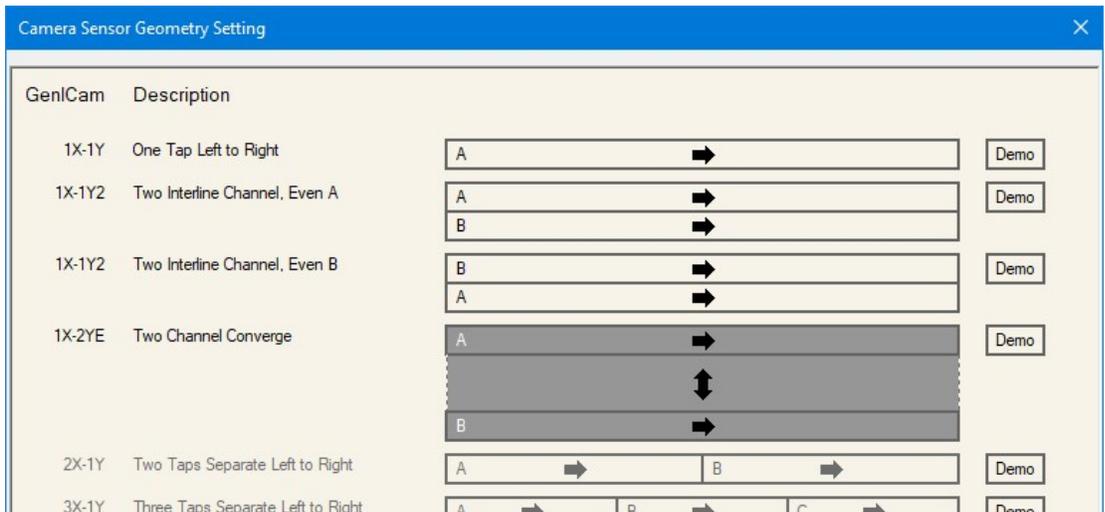

- On the Display toolbar, click **Fit to Screen** to view the complete acquisition in the display window (the actual acquisition data is unmodified).



- Click **Grab** to view the diagonal ramp acquisition.

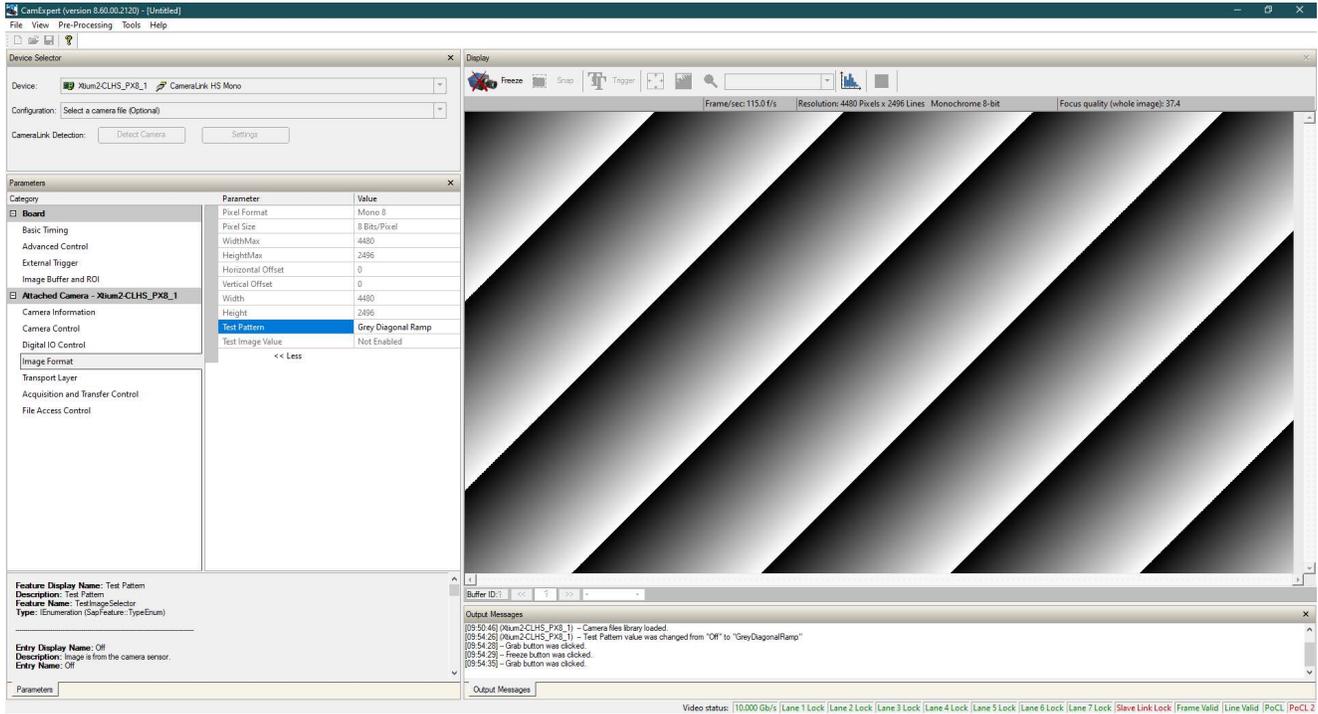

Falcon4-CLHS Connectors and Status LED

Connectors

The Falcon4-CLHS has connectors for CX4 data/control and I/O:

- A **10 pin I/O** (Samtec) connector for camera power, trigger, strobe and general I/O signals. The connector supports a retention latch, while additionally the case supports an I/O cable with locking thumbscrews. Teledyne DALSA provides optional cables for purchase (see [I/O Cable Accessories](#)). Also see [10-pin I/O Connector Details](#) for pin out specifications.
- A CX4 cable connector supporting the CLHS data output and control signals. See [Cable Manufacturers Contact Information](#) for a variety of CX4 cables.

The following figure of the Falcon4-CLHS back shows connector and LED locations along with identification labels. See [Mechanical Specifications](#) for details on the connectors and camera mounting dimensions.



Falcon4-CLHS – Rear View

LED Indicators

The Falcon4-CLHS has one multicolor LED to provide a simple visible indication of camera state, as described below. The CX4 connector does not have any status LED indicator.

Camera Status LED Indicator

The camera is equipped with one LED to display its operational status. When more than one condition is active, the LED color indicates the condition with the highest priority. The following table summarizes the LED states.

LED State	Definition
LED is off	No power to the camera
Flashing Orange	Camera initialization sequence in progress.
Flashing Green	Looking for link; hardware is fine but connection not established.
Steady Green	Link established. Device and host connected and data transfer may take place.
Fast Flashing Blue	File Access Feature is transferring data such as a firmware update, etc.
Constant Red	System error (for example, internal error).

Preventing Operational Faults due to ESD



Camera installations which do not protect against ESD (electrostatic discharge) may exhibit operational faults. Problems such as random data loss, random camera resets and other non-reoccurring control issues may all be solved by proper ESD management.

Teledyne DALSA has performed ESD testing on cameras using an 8 kilovolt ESD generator without any indication of operational faults.

To help prevent ESD problems, mount the camera on a metallic platform with a good connection to earth ground.

Operational Reference

Using CamExpert with Falcon4-CLHS

The Spera CamExpert tool allows a user to test the camera and frame grabber combination and their functions. CamExpert saves the Teledyne DALSA frame grabber user settings as individual camera parameter files on the host system (*.ccf). The camera settings are saved within the camera as a user set.

An important component of CamExpert is its live acquisition display window which allows immediate verification of timing or control parameters without the need to run a separate acquisition program.

CamExpert Panes


The various areas of CamExpert are summarized in the figure below.

The screenshot shows the CamExpert (version 8.60.00.2120) interface. The main window is titled "CamExpert (version 8.60.00.2120) - [Untitled]". The interface is divided into several panes:

- Device Selector:** Located at the top left, it shows the selected device as "Xtium2-CLHS_PX8_1" and the camera type as "CameraLink HS Mono".
- Parameters:** A table listing various camera parameters and their values. The "Acquisition Frame Rate" parameter is highlighted in blue. A callout box explains that parameters in black are user-changeable, while those in gray are read-only, and some features may become active based on other settings.
- Feature Categories:** A list of categories on the left side of the Parameters pane, including "Board", "Basic Timing", "Advanced Control", "External Trigger", "Image Buffer and ROI", "Attached Camera - Xtium2-CLHS_PX8_1", "Camera Information", "Camera Control", "Digital IO Control", "Image Format", "Transport Layer", "Acquisition and Transfer Control", and "File Access Control".
- Feature Values Quick Guide:** A section at the bottom left providing details for the "Acquisition Frame Rate" feature, including its description, name, type, and current values (Min: 0.05, Max: 457.85, Inc: 0).
- Display:** The central area showing a live acquisition display. It includes a toolbar with buttons for "Freeze", "Snap", and "Trigger". The display area shows a "Pixel data not available" message and a "Resolution: 4480 Pixels x 2496 Lines Monochrome" status. A callout box points to the "Acquisition Display" area.
- Message Window:** Located at the bottom right, it displays a log of system messages and errors, such as "Error: Frame(s) Lost - Bandwidth is too low to sustain image(s) acquired."
- CamExpert Control Buttons:** A callout box pointing to the top toolbar area.

At the bottom of the interface, a status bar shows "Video status: 10.000 Gb/s | Lane 1 Lock | Lane 2 Lock | Lane 3 Lock | Lane 4 Lock | Lane 5 Lock | Lane 6 Lock | Lane 7 Lock | Slave Link Lock | Frame Valid | Line Valid | PoCL | PoCL 2".

- **Device Selector pane:** View and select from any installed Sopera acquisition device if more than one is installed in the computer. After a device is selected CamExpert will only present parameters applicable to that device.
- **Parameters pane:** Allows viewing or changing all acquisition parameters supported by the acquisition device or frame grabber. This avoids confusion by eliminating parameter choices when they do not apply to the hardware in use. When using a Teledyne DALSA frame grabber and camera, CamExpert groups all frame grabber parameters under the **Board** heading, and the supported camera features under the **Attached Camera** heading.
- **Display pane:** Provides a live or single frame acquisition display. Frame buffer parameters are shown in an information bar above the image window.
 - **Control Buttons:** The **Display** pane includes CamExpert control buttons. These are:

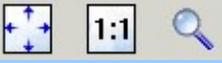	<p>Acquisition control button: Click once to start the frame grabber live grab mode, click again to stop. The Falcon4 is always in free running acquisition mode unless configured to use an external trigger.</p>
	<p>Single frame grab: Click to acquire one frame from the frame grabber device.</p>
	<p>Software trigger button: With the I/O control parameters set to Trigger Enabled / Software Trigger type, click to send a single software trigger command.</p>
	<p>CamExpert display controls: (these do not modify the frame buffer data) Stretch (or shrink) image to fit, set image display to original size, or zoom the image to any size and ratio. Note that under certain combinations of image resolution, acquisition frame rate, and host computer speed, the CamExpert screen display may not update completely due to the host CPU running at near 100%. This does not affect the acquisition.</p>
	<p>Histogram / Profile tool: Select to view a histogram or line/column profile during live acquisition.</p>

- **Output Messages pane:** Displays messages from CamExpert, camera or the interface driver.
- **Link Signals:** Displays the status of various Link.

CamExpert View Parameters Option

While the **Board** section shows all frame grabber parameters, the **Attached Camera** section shows camera features filtered by a Visibility attribute that selects the targeted user. These vary from Beginner (features required for basic operation of the device) to Guru (optional features required only for complex operations).

Choose parameter visibility via the [<< Less More >>] control below each feature list. You can also choose the visibility level from the **View > Parameters Options > Visibility** options menu.

Camera Feature Categories

The following sections describe the available categories and their features in detail.

Many of the features shown in CamExpert may be changed directly in CamExpert or programmatically via an imaging application. Their availability may depend on other feature settings, and while some features are read only, others may be changed during acquisition. Note that features shown by CamExpert may change with different Falcon4 models implementing different sensors and image resolutions; that is, a specific camera model may not support the full feature set defined in a category.

The tables found in each category describe the features and their possible values, along with their view attribute (beginner, expert, guru) and the device version in which the feature was introduced. A device version number represents the camera software functional group, not a firmware revision number. As Falcon4 capabilities evolve, the device version increases, identifying the supported function package. New features for a major device version release are indicated by **green text** for easy identification. For each feature, the device version may differ for each camera sensor available.

The last column also indicates whether the parameter is a member of the DALSA Features Naming Convention (DFNC), or of the GenICam Standard Features Naming Convention (SFNC—tag not shown). Features tagged as *Invisible* are usually for Teledyne DALSA or third party software usage—not typically needed by end user applications.

Camera Information Category

Camera information can be retrieved via a controlling application. Parameters such as camera model, firmware version, etc., are read to uniquely identify the connected Falcon4-CLHS device. These features are typically read-only.

Category	Parameter	Value
Board	Manufacturer Name	Teledyne DALSA
Basic Timing	Device Family Name	FALCON4-CLHS
Advanced Control	Model Name	M4480
External Trigger	Device Version	1.02
Image Buffer and ROI	Manufacturer Part Number	FA-HM00-M4485
Attached Camera - Xtium2-CLHS_PX8_1	Manufacturer Info	Standard Design
Camera Information	Firmware Version	256.242
Camera Control	Serial Number	12220499
Digital IO Control	Device User ID	
Data Processing	Temperature	40.3
Image Format	Input Voltage	23.9
Transport Layer	Device Built-In Self Test Status	Passed
Acquisition and Transfer Control	Device Built-In Self Test Status All	0
Device Counter and Timer Control	Refresh BIST	Press...
Cycling Preset	Device Reset	Press...
Metadata Controls	Power-up Configuration	Setting...
File Access Control	<< Less	

Camera Information Feature Descriptions


Display Name	Feature & Values	Description	Device Version & View
Manufacturer Name	DeviceVendorName	Displays the device vendor name.	1.00 Beginner
Device Family Name	DeviceFamilyName	Displays the device family name.	1.00 Beginner
Model Name	DeviceModelName	Displays the device model name.	1.00 Beginner
Device Version	DeviceVersion	Displays the device version. This tag will also highlight if the firmware is a beta or custom design.	1.00 Beginner
Manufacturer Part Number	deviceManufacturerPartNumber	Displays the device manufacturer part number.	1.00 DFNC Beginner

Manufacturer Info	DeviceManufacturerInfo	This feature provides extended manufacturer information about the device. Falcon4 cameras show which firmware design is currently loaded.	1.00 Beginner
Firmware Version	DeviceFirmwareVersion	Displays the currently loaded firmware version number. Firmware files have a unique number and have the .cbf file extension.	1.00 Beginner
Serial Number	DeviceSerialNumber	Displays the device's factory set serial number.	1.00 Beginner
Device User ID	DeviceUserID	This feature stores a user-programmable identifier.	1.00 Beginner
Temperature	DeviceTemperature	Internal temperature in degrees Celsius	1.00 Beginner
Input Voltage	deviceInputVoltage	Voltage at power connector (V)	1.00 DFNC Beginner
Device Built-In Self Test Status	deviceBISTStatus	List the BIST status. Display the most critical error if there are multiple errors. <i>Passed</i> <i>I2C</i> <i>SENSOR_CAL</i> <i>SENSOR_SPI</i> <i>FPGA_ECHO_BACK</i> <i>FLASH_TIMEOUT</i> <i>FLASH_ERROR</i> <i>NO_FPGA_CODE</i> <i>NO_COMMON_SETTINGS</i> <i>NO_FACTORY_SETTINGS</i> <i>OVER_TEMPERATURE</i> <i>SENSOR_PATTERN</i> <i>CLHS_TXRDY_RETRY</i> <i>INVALID_UPGRADE</i> <i>NO_USER_SETTINGS</i> <i>NO_SCRIPT</i> <i>FACT_CODE</i> <i>NO_FATFS</i> <i>WRONG_DAC</i>	1.00 Beginner
Device Built-In Self Test Status All	deviceBISTStatusAll	Result of Basic Internal Self-Test	1.00 DFNC Beginner
Refresh BIST	deviceBIST	Refresh Basic Internal Self-Test	1.00 Beginner
Device Reset	DeviceReset	Write to this feature to reset the device to its power up state.	1.00 Beginner
Power-on User Set <i>Factory Setting</i> <i>User Set 1</i> <i>User Set 2</i>	UserSetDefaultSelector <i>Default</i> <i>UserSet1</i> <i>UserSet2</i>	Selects the feature User Set to load at camera reset. Select the default camera feature settings saved by the Factory. Select the user defined configuration UserSet 1 as the Power-up Configuration. Select the user defined configuration UserSet 2 as the Power-up Configuration.	1.00 Beginner
User Set Selector <i>Factory Setting</i>	UserSetSelector <i>Default</i>	Selects the camera configuration set to load feature settings from or save current feature settings to. The Factory set contains default camera feature settings. Select the default camera feature settings saved by the factory.	1.00 Beginner

<i>UserSet 1</i>		<i>UserSet1</i>	<i>Select the User Defined Configuration space UserSet1 to save to or load from features settings previously saved by the user.</i>	
<i>UserSet 2</i>		<i>UserSet2</i>	<i>Select the User Defined Configuration space UserSet2 to save to or load from features settings previously saved by the user.</i>	
Load User Set	UserSetLoad		Loads the camera configuration set specified by the User Set Selector feature, to the camera and makes it active.	1.00 Beginner
Save User Set	UserSetSave		Saves the current camera configuration to the user set specified by the User Set Selector feature.	1.00 Beginner
Serial Number	DeviceID		Displays the device's factory set camera serial number.	1.00 Invisible
Device TL Version Major	DeviceTLVersionMajor		Major version of the device's Transport Layer.	1.00 Invisible
Device TL Version Minor	DeviceTLVersionMinor		Minor version of the device's Transport Layer.	1.00 Invisible
Temperature Monitor	temperatureMonitorON		Turn on/off the temperature monitor function.	1.00 DFNC Invisible
DFNC Major Rev	deviceDFNCVersionMajor		Major revision of Dalsa Feature Naming Convention which was used to create the device's XML.	1.00 DFNC Invisible
DFNC Minor Rev	deviceDFNCVersionMinor		Minor revision of Dalsa Feature Naming Convention which was used to create the device's XML.	1.00 DFNC Invisible
SFNC Major Rev	DeviceSFNCVersionMajor		Major Version of the Genicam Standard Features Naming Convention which was used to create the device's XML.	1.00 DFNC Invisible
SFNC Minor Rev	DeviceSFNCVersionMinor		Minor Version of the Genicam Standard Features Naming Convention which was used to create the device's XML.	1.00 DFNC Invisible
SFNC SubMinor Rev	DeviceSFNCVersionSubMinor		SubMinor Version of the Genicam Standard Features Naming Convention which was used to create the device's XML.	1.00 Invisible

Power-up Configuration Dialog

CamExpert provides a dialog box which combines the features to select the camera power-up state and for the user to save or load a Falcon4 camera state.

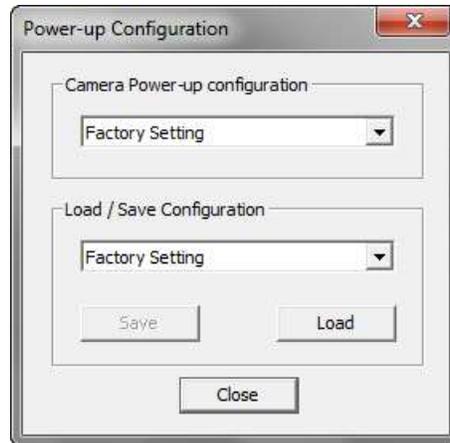

Camera Power-up Configuration

The first drop list selects the camera configuration state to load on power-up (see feature *UserSetDefaultSelector*). The user chooses from one factory data set or one of two possible user saved states.

Load / Save Configuration

The second drop list allows the user to change the camera configuration any time after a power-up (see feature *UserSetSelector*). To reset the camera to the factory configuration, select *Factory Setting* and click Load. To save a current camera configuration, select UserSet 1 or 2 and click Save. Select a saved user set and click Load to restore a saved configuration.

Camera Control Category

The Falcon4-CLHS Camera Control category, as shown by CamExpert, groups sensor specific parameters. This group includes controls for frame rate, exposure time, gain, etc.

Parameters		
Category	Parameter	Value
Board	Device Scan Type	Areascan
Basic Timing	Sensor Color Type	Monochrome
Advanced Control	Input Pixel Size	10 Bits/Pixel
External Trigger	Sensor Width	4480
Image Buffer and ROI	Sensor Height	2496
Attached Camera - Xtium2-CLHS_PX8_1	Acquisition Frame Rate (in Hz)	100.0
Camera Information	Exposure Mode	Timed
Camera Control	Exposure Alignment	Synchronous
Digital IO Control	Exposure Delay	9.0
Data Processing	Long Exposure Mode	Off
Image Format	Exposure Time	2000.0
Transport Layer	Exposure Time Actual	2000.0
Acquisition and Transfer Control	Shutter Mode	Global
Device Counter and Timer Control	Gain Selector	Analog
Cycling Preset	Gain	1.0
Metadata Controls	Black Level Selector	Black Level
File Access Control	Black Level	0.0
	Fast Readout Mode	Off
	<< Less	

Camera Control Feature Descriptions

Display Name	Feature & Values	Description	Device Version & View
Device Scan Type <i>Areascan</i>	DeviceScanType <i>Areascan</i>	Scan type of the sensor. <i>2D Area-scan sensor</i>	1.00 Beginner
Sensor Color Type <i>Monochrome</i>	sensorColorType <i>Monochrome</i>	Sensor color type. <i>Monochrome.</i>	1.00 DFNC Beginner
Input Pixel Size <i>10 Bits/Pixel</i>	pixelSizeInput <i>Bpp10</i>	Size of the image input pixels, in bits per pixel. <i>Sensor output data path is 10 bits per pixel.</i>	1.00 DFNC Guru
Sensor Width	SensorWidth	Defines the sensor width in active pixels.	1.00 Expert

Sensor Height	SensorHeight	Defines the sensor height in active lines.	1.00 Expert
Acquisition Frame Rate	AcquisitionFrameRate	Specifies the camera frame rate in 0.1 fps steps.	1.00 Beginner
Exposure Mode	ExposureMode	Selects the exposure control operating mode.	1.00 Beginner
<i>Timed</i>	<i>Timed</i>	<i>The length of the exposure is controlled with the "Exposure Time" feature. The exposure starts with the trigger event.</i>	
<i>Trigger Width</i>	<i>TriggerWidth</i>	<i>Uses the width of the trigger signal pulse to control the exposure duration. Use the Trigger Activation feature to set the polarity of the trigger. The Trigger Width setting is applicable with Trigger Selector = Single Frame Trigger(Start). Available when using Line1 or Line2 as trigger.</i>	
		 Note: the actual exposure time is 3 μ s longer than the trigger width. That is, the pulse width is always 3 μ s shorter than the required exposure time.	
Long Exposure Mode	longExposureMode	Selects the sensor's exposure time mode.	1.02 Beginner
<i>Off</i>	<i>Off</i>	<i>For exposure times up to 50 000 μs.</i>	
<i>Active</i>	<i>Active</i>	<i>For exposure times above 10 000 μs.</i>	
Exposure Alignment	exposureAlignment	Specifies how the exposure is executed in relationship to the sensor capabilities and current frame trigger.	1.00 DFNC Guru
<i>Synchronous</i>	<i>Synchronous</i>	<i>Exposure is synchronous to the internal timing of the sensor. The readout is concurrent to the exposure for the fastest possible frame rate. When a valid trigger is received and the ExposureTime is shorter than the readout period, the ExposureStart event is latched in the previous frame's readout. That is, the ExposureStartEvent is delayed and is initiated when the actual exposure starts such that the exposure ends and readout begins as soon as the previous readout has completed.</i>	
<i>Reset</i>	<i>Reset</i>	<i>Sensor timing is reset to initiate exposure when a valid trigger is received. Readout is sequential to exposure, reducing the maximum achievable frame rates. A trigger received during exposure or readout is ignored since data would be lost by performing a reset.</i>	
Exposure Delay	exposureDelay	Specifies the delay in microseconds to apply after the FrameStart event before starting the ExposureStart event.	1.00 Guru DFNC
Exposure Time	ExposureTime	Sets the exposure time of the sensor in microseconds (μ s).	1.00 Beginner
Exposure Time Actual	exposureTimeActual	Measured Exposure Time in microseconds (μ s).	1.00 DFNC Guru
Shutter Mode	SensorShutterMode	Select the sensor shutter mode.	1.00 DFNC Guru
<i>Global</i>	<i>Global</i>	<i>Select sensor global shutter mode.</i>	
Gain Selector	GainSelector	Selects which gain and offset to control.	1.00 Beginner
<i>Analog</i>	<i>AnalogAll</i>	<i>Analog Gain and offset applied to the sensor.</i>	
<i>Digital</i>	<i>DigitalAll</i>	<i>Apply a digital gain adjustment to the entire image. This independent gain factor is applied to the image after the sensor.</i>	1.02
Gain	Gain	Video signal multiplier.	1.00 Beginner
Black Level Selector	BlackLevelSelector	Selects which offset to control.	1.00 Beginner

Black Level	BlackLevel	A signed offset added to the output. $DN_out = (DN_in + Black_Level) * Gain$	1.00 Beginner
Fast Readout Mode	fastReadoutMode	Selects the sensor's readout mode. When this mode is off, the sensor is operated in low noise mode; row timing and/or row readout are normal. When this mode is active, the sensor is operated in high speed mode; row timing and/or row readout are shorter.	1.00 DFNC Guru
Off	Off		
Active	Active		

Long Exposure Mode, Time Exposure, Fast Readout Mode, and Gain


The setting of the Long Exposure Mode feature affects other feature settings as described in the table below.

Model	Long Exposure Mode	Exposure Time (range, in μs)	Analog Gain	Fast Readout Mode
All	Off	5 - 50 000	1x to 4x	Off/Active
M4480, M4400	Active	10 000 - 500 000	Minimum 1.5x	Off
M8200	Active	10 000 - 16 000 000	Minimum 1.5x	n/a*

* Fast Readout Mode is not available on the M8200.

Note that Fast Readout and Long Exposure cannot be both active; setting Long Exposure Mode to *Active* will automatically set Fast Readout Mode to *Off*.

The following diagram depicts the effect of Long Exposure Mode and Fast Readout Mode on the frame rate and exposure (integration) time. (Provided as an example, does not reflect the specific exposure time range of this model.)

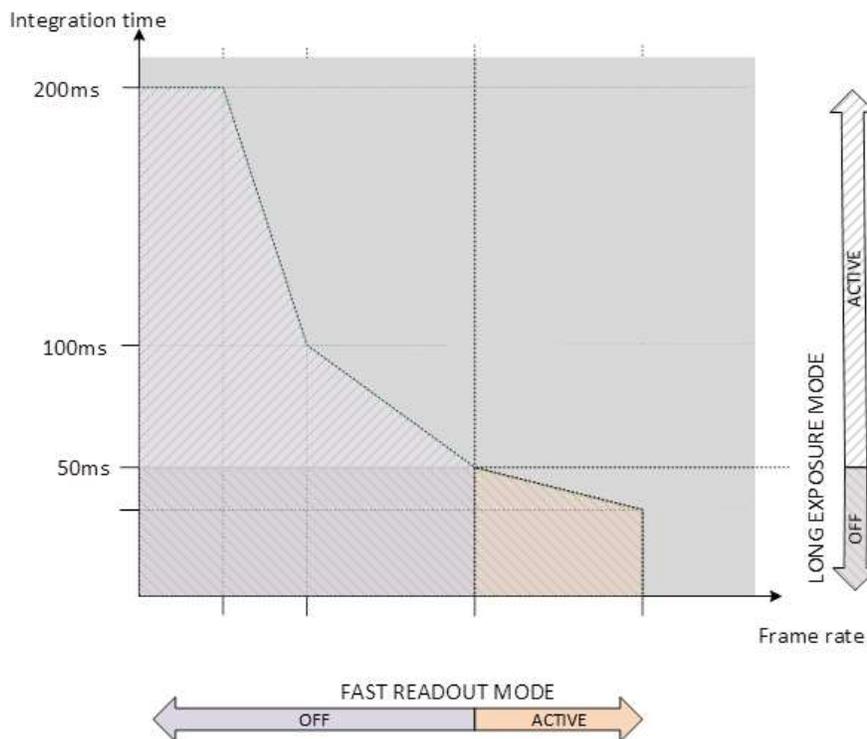

Digital IO Control Category

The Digital IO Control category, as shown by CamExpert, groups features used to configure acquisition actions based on those inputs.

Parameters		
Category	Parameter	Value
Board	Trigger Selector	Single Frame Trigger(Start)
Basic Timing	Trigger Mode	Off
Advanced Control	Trigger Frames Count	Not Enabled
External Trigger	Trigger Source	Not Enabled
Image Buffer and ROI	Software Trigger	Press...
	Trigger Input Line Activation	Rising Edge
Attached Camera - Xtium2-CLHS_PX8_1	Trigger Delay	Not Enabled
Camera Information	Trigger Overlap	Readout
Camera Control	Line Selector	Line 1
Digital IO Control	Line Name	Input 1
Data Processing	Line Format	Opto-Coupled
Image Format	Line Mode	Input
Transport Layer	Line Status	Low
Acquisition and Transfer Control	Line Status All	0x0000000000000001C
Device Counter and Timer Control	Line Inverter	Off
Cycling Preset	Input Line Detection Level	Threshold for TTL
Metadata Controls	Input Line Debouncing Period	0
File Access Control	Output Line Source	Not Enabled
	Output Line Pulse Activation	Not Enabled
	Output Line Pulse Delay	Not Enabled
	Output Pulse Duration	Not Enabled
	Output Line Value	Not Enabled
	<< Less	


Digital IO Control Feature Descriptions

Display Name	Feature & Values	Description	Device Version & View
Trigger Selector <i>Single Frame Trigger(Start)</i> <i>MultiFrame Trigger(Start)</i>	TriggerSelector <i>FrameStart</i> <i>FrameBurstStart</i>	Selects which type of trigger to configure with the various Trigger features. <i>Selects a trigger starting the capture of a single frame.</i> <i>Selects a trigger to capture multiple frames. The number of frames is specified by the "triggerFrameCount" feature.</i>	1.00 Guru
Trigger Mode <i>Off</i> <i>On</i>	TriggerMode <i>Off</i> <i>On</i>	Controls whether the external trigger is active. <i>Line rate is controlled with "Acquisition Line Rate" feature.</i> <i>Trigger comes from CLHS (frame grabber) or GPIO.</i>	1.00 Beginner
Trigger Frames Count	triggerFrameCount	Sets the total number of frames to acquire when a valid trigger is received. This feature is available when Trigger Selector = MultiFrame Trigger(Start).	1.00 Guru DFNC
Trigger Source <i>Line 1</i> <i>Line 2</i> <i>CLHS In</i> <i>Timer1 End</i> <i>Counter1 End</i> <i>Software</i>	TriggerSource <i>Line1</i> <i>Line2</i> <i>LinkTrigger0</i> <i>Timer1End</i> <i>Counter1End</i> <i>Software</i>	Specifies the source of the external trigger. TriggerMode must be set to On. <i>Trigger comes from frame grabber over Line1.</i> <i>Trigger comes from frame grabber over Line2.</i> <i>Trigger comes from frame grabber over LinkTrigger0.</i> <i>Trigger comes from frame grabber over Timer1End.</i> <i>Trigger comes from frame grabber over Counter1End.</i> <i>The trigger source will be generated by software using the TriggerSoftware command.</i>	1.00 Guru
Software Trigger	TriggerSoftware	Generates an internal trigger. The TriggerSource feature must be set to Software.	1.00 Guru
Trigger Input Line Activation <i>Rising Edge</i> <i>Falling Edge</i> <i>Any Edge</i>	TriggerActivation <i>RisingEdge</i> <i>FallingEdge</i> <i>AnyEdge</i>	Edge of the input signal that will trigger camera. <i>Specifies that the trigger is considered valid on the rising edge of the source signal.</i> <i>Specifies that the trigger is considered valid on the falling edge of the source signal.</i> <i>Specifies that the trigger is considered valid on the falling or rising edge of the source signal.</i>	1.00 Guru
Trigger Delay	TriggerDelay	Specifies the delay in microseconds to apply after receiving the trigger and before activating the trigger event.	1.00 Guru
Trigger Overlap <i>Off</i> <i>ReadOut</i>	TriggerOverlap <i>Off</i> <i>ReadOut</i>	States if a trigger overlap is permitted with the Active Frame readout signal. This feature defines if a new valid trigger will be accepted (or latched) for a new frame. <i>No trigger overlap is permitted.</i> <i>Trigger is accepted immediately after the start of the readout.</i>	1.00 Guru
Line Selector <i>Line 1</i> <i>Line 2</i> <i>Line 3</i> <i>Line 4</i> <i>Line 5</i> <i>Line 6</i>	LineSelector <i>Line1</i> <i>Line2</i> <i>Line3</i> <i>Line4</i> <i>Line5</i> <i>Line6</i>	Selects the physical line (or pin) of the external device connector to configure. <i>Selects Line 1 (input 1)</i> <i>Selects Line 2 (input 2)</i> <i>Selects Line 3 (output 1)</i> <i>Selects Line 4 (output 2)</i> <i>Selects Line 5 (output 3)</i> <i>Selects Line 6 (output 4)</i>	1.00 Beginner

Line Name	lineName	Description of the physical Pin associated with the logical line.	1.00 Beginner DFNC
<i>Input 1</i>	<i>Input1</i>	<i>Associated with the logical line Input 1</i>	
<i>Input 2</i>	<i>Input2</i>	<i>Associated with the logical line Input 2</i>	
<i>Output 1</i>	<i>Output1</i>	<i>Associated with the logical line Output 1</i>	
<i>Output 2</i>	<i>Output2</i>	<i>Associated with the logical line Output 2</i>	
<i>Output 3</i>	<i>Output3</i>	<i>Associated with the logical line Output 3</i>	
<i>Output 4</i>	<i>Output4</i>	<i>Associated with the logical line Output 4</i>	
Line Format	LineFormat	Specify the current electrical format of the selected physical input or output.	1.00 Beginner
<i>Opto-Coupled</i>	<i>OptoCoupled</i>	<i>The line is opto-coupled.</i>	
Line Mode	LineMode	Reports if the physical Line is an Input or Output signal.	1.00 Beginner
<i>Input</i>	<i>Input</i>	<i>The line is an input line.</i>	
<i>Output</i>	<i>Output</i>	<i>The line is an output line.</i>	
Line Status	LineStatus	Returns the current status of the selected input line.	1.00 Expert
<i>Low</i>	<i>Low</i>	<i>Line level is low</i>	
<i>High</i>	<i>High</i>	<i>Line level is high</i>	
Line Status All	LineStatusAll	Returns the current status of all available line signals, at time of polling, in a single bitfield. The order is Line1, Line2, Line3, ...	1.01 Expert
Line Inverter	LineInverter	Controls whether to invert the polarity of the selected input or output line signal.	1.00 Beginner
<i>Off</i>	<i>Off</i>	<i>Leave signal unchanged</i>	
<i>On</i>	<i>On</i>	<i>Invert line signal</i>	
Input Line Detection Level	lineDetectionLevel	Specifies the voltage threshold required to recognize a signal transition on an input line.	1.00 Beginner DFNC
<i>Threshold for TTL</i>	<i>Threshold_for_TTL</i>	<i>A signal below 0.8V will be detected as a Logical LOW and a signal greater than 2.4V will be detected as a Logical HIGH on the selected input line.</i>	
Input Line Debouncing Period	lineDebouncingPeriod	Specifies the minimum delay before an input line voltage transition is recognized as a signal transition.	1.00 Beginner DFNC
Output Line Source	outputLineSource	Selects which internal signal, event driven pulse or software control state to output on the selected Line. LineMode must be Output.	1.00 Beginner DFNC
<i>Off</i>	<i>Off</i>	<i>Line output is disabled (Tri-State) or Open with Optocoupled output.</i>	
<i>Software Controlled</i>	<i>SoftwareControlled</i>	<i>The OutputLineValue feature changes the state of the output.</i>	
<i>Pulse On: Start of Frame</i>	<i>PulseOnStartofFrame</i>	<i>Generate a pulse on the start of the Frame Active event.</i>	
<i>Pulse On: Start to Exposure</i>	<i>PulseOnStartofExposure</i>	<i>Generate a pulse on the ExposureStart event.</i>	
<i>Pulse On: End of Exposure</i>	<i>PulseOnEndofExposure</i>	<i>Generate a pulse on the End of Exposure event.</i>	
<i>Pulse On: Start Of Readout</i>	<i>PulseOnStartOfReadout</i>	<i>Generate a pulse on the ReadoutStart event.</i>	
<i>Pulse On: End Of Readout</i>	<i>PulseOnEndOfReadout</i>	<i>Generate a pulse on the ReadoutEnd event.</i>	
<i>Pulse On: Valid Frame Trigger</i>	<i>PulseOnValidFrameTrigger</i>	<i>Generate a pulse on the FrameTrigger event.</i>	
<i>Pulse On: Invalid Frame Trigger</i>	<i>PulseOnInvalidFrameTrigger</i>	<i>Generate a pulse on the Invalid Frame(s)Trigger event.</i>	
<i>Pulse On: End of Timer1</i>	<i>PulseOnEndofTimer1</i>	<i>Generate a pulse on the end of timer1.</i>	
<i>Pulse On: End of Counter1</i>	<i>PulseOnEndofCounter1</i>	<i>Generate a pulse on the end of counter1.</i>	
<i>Pulse On: Input1</i>	<i>PulseOnInput1</i>	<i>Generate a pulse on the Input Signal 1 event.</i>	
<i>Pulse On: Input2</i>	<i>PulseOnInput2</i>	<i>Generate a pulse on the Input Signal 2 event.</i>	
<i>Pulse On: Link CLHS In Exposure Active</i>	<i>PulseOnLinkTrigger0 ExposureActive</i>	<i>Generate a pulse on LinkTrigger0 signal.</i> <i>Generate the Exposure Active state on specific output.</i>	

Output Line Pulse Activation	outputLinePulseActivation	Specifies the input line activation mode to trigger the OutputLine pulse.	1.00 Beginner DFNC
<i>Rising Edge</i>	<i>RisingEdge</i>	<i>Specifies that the trigger is considered valid on the rising edge of the source signal.</i>	
<i>Falling Edge</i>	<i>FallingEdge</i>	<i>Specifies that the trigger is considered valid on the falling edge of the source signal.</i>	
<i>Any Edge</i>	<i>AnyEdge</i>	<i>Specifies that the trigger is considered valid on the falling or rising edge of the source signal.</i>	
Output Line Pulse Delay	outputLinePulseDelay	Sets the delay (μ s) before the output line pulse duration signal.	1.00 DFNC Beginner
Output Pulse Duration	outputLinePulseDuration	Sets the width (duration) of the output line pulse in microseconds (μ s).	1.00 DFNC Beginner
Output Line Value	outputLineValue	Set the GPIO out value when outputLineSource is SoftwareControlled.	1.00 DFNC Expert
<i>Low</i>	<i>Low</i>	<i>Output line is low</i>	
<i>High</i>	<i>High</i>	<i>Output line is high</i>	

I/O Module Block Diagram

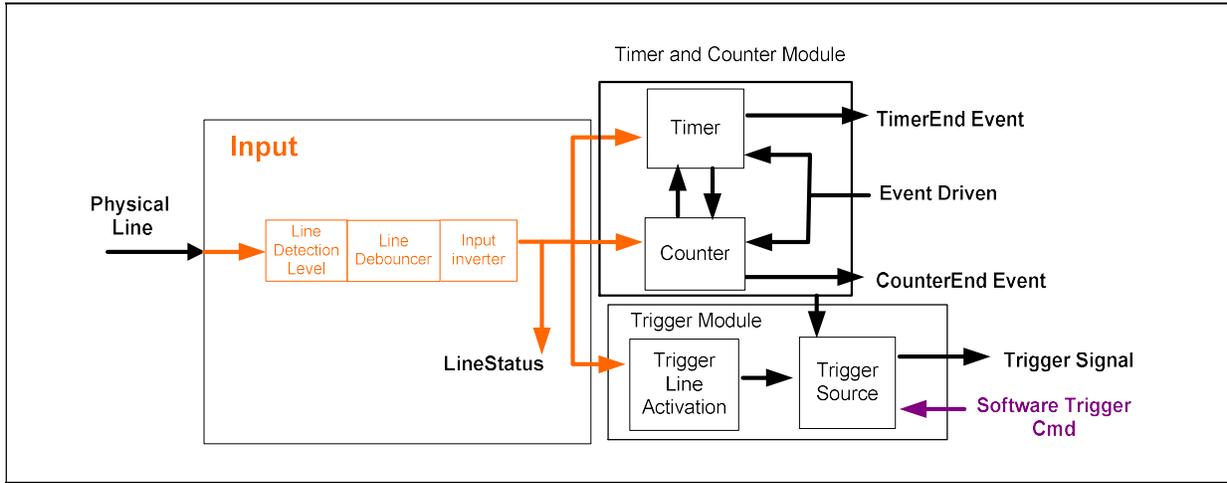

Trigger Mode Details

Falcon4-CLHS image exposures are initiated by an event. The trigger event is either the camera's programmable internal clock used in free running mode, an external input to the controlling frame grabber used for synchronizing exposures to external triggers, or a programmed function call message by the controlling computer. These triggering modes are described below.

- **Free running (Trigger Mode = Off):** The free-running mode has programmable internal timers for frame rate and exposure period. Frame rate minimums, maximums and increments supported are sensor specific. Maximum frame rates are dependent on the required exposure.
- **Trigger Source (Trigger Mode = On):** Exposures are controlled by an external trigger signal where the specific input line is selected by the **Trigger Source** feature.

Trigger Source Types (Trigger Mode = On)

- **Trigger Source = Line1:** The frame grabber initiates the exposure via the external line 1.
- **Trigger Source = Line2:** The frame grabber initiates the exposure via the external line 2.
- **Trigger Source = CLHS In:** The external trigger comes from frame grabber over LinkTrigger0.
- **Trigger Source = Timer1End Event:** The Timer1 End Event is used as the internal trigger source. Refer to [Counter and Timer Controls](#) for information on those features.
- **Trigger Source = Counter1End Event:** The Counter1 End Event is used as the internal trigger source.
- **Trigger Source = Software:** An exposure trigger is sent as a software command. Software triggers cannot be considered time accurate due to computer latency and sequential command jitter. But a software trigger is more responsive than calling a single-frame acquisition since the latter must validate the acquisition parameters and modify on-board buffer allocation if the buffer size has changed since the last acquisition.

Trigger Overlap: Feature Details


The Trigger Overlap feature defines how the Falcon4-CLHS handles triggers that might occur more frequently than the Frame Active period (an exposure plus readout period). If `TriggerOverlap = Off`, then triggers received before the end of the Frame Active period are ignored. Other `TriggerOverlap` values are dependent on the camera model and sensor used.

TriggerOverlap = Off

- No trigger overlap is permitted.

Diagram Conditions:

- `TriggerMode = On`
- `ExposureMode = Timed`
- `TriggerActivation = RisingEdge`
- `TriggerDelay = 0`
- `TriggerSelector = FrameStart`
- `ExposureAlignment = Synchronous`

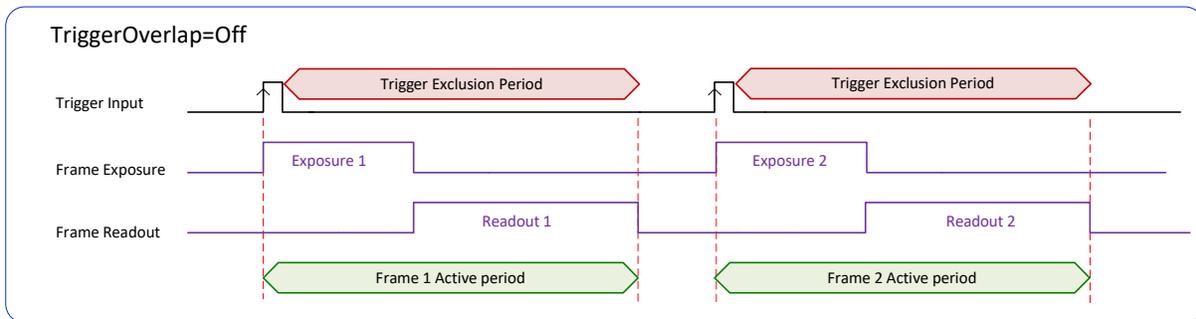


TriggerOverlap = ReadOut

- Trigger is accepted at the beginning of the frame Readout. The "End of Exposure to Start of Readout" time is sensor dependent.

Diagram Conditions:

- `TriggerMode = On`
- `ExposureMode = Timed`
- `TriggerActivation = RisingEdge`
- `TriggerDelay = 0`
- `TriggerSelector = FrameStart`
- `ExposureAlignment = Synchronous`

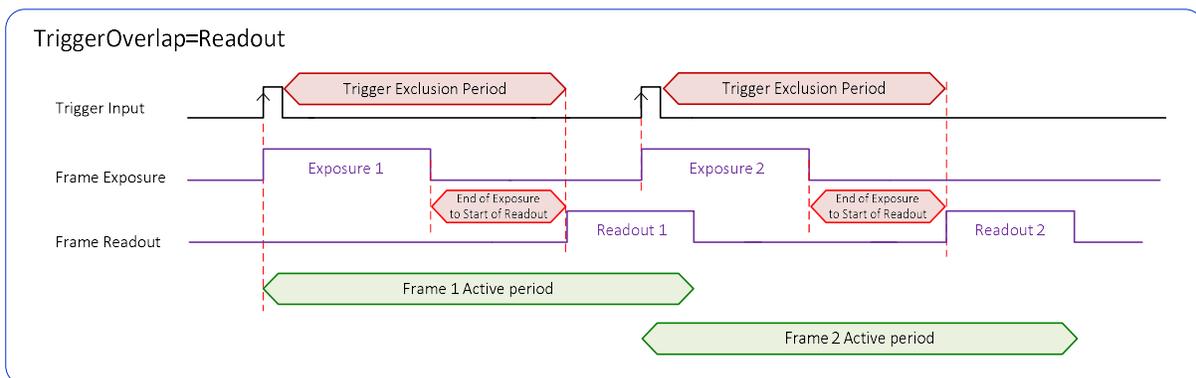

Data Processing Category

The Data Processing category, as shown by CamExpert, groups features used to configure fixed pattern noise (FPN) correction; it also includes the [Lens Shading Correction](#) subcategory.

Parameters		
Category	Parameter	Value
<ul style="list-style-type: none"> [-] Board <ul style="list-style-type: none"> Basic Timing Advanced Control External Trigger Image Buffer and ROI [-] Attached Camera - Xtium2-CLHS_PX8_1 <ul style="list-style-type: none"> Camera Information Camera Control Digital IO Control [-] Data Processing <ul style="list-style-type: none"> Lens Shading Correction LUT Image Format Transport Layer Acquisition and Transfer Control Device Counter and Timer Control Cycling Preset Metadata Controls File Access Control 	<ul style="list-style-type: none"> Processing Pixel Size FPN Correction Mode FPN Correction Active Set Target Exposure Range Min Target Exposure Range Max Optical Black Reference Optical Black Reference Calibration Offset Calibration FPN Save FPN Calibration Defective Pixel Replacement Mode Defective Pixel Replacement Map Current... 	<ul style="list-style-type: none"> 10 Bits/Pixel Off Factory 5 500000 Active 10 Not Enabled Not Enabled Off Not Enabled
	<< Less	

Data Processing Feature Descriptions

Display Name	Feature & Values	Description	Device Version & View
Processing Pixel Size <i>10 Bits/Pixel</i>	processingPathBpp <i>Bpp10</i>	Pixel size in bits per pixel during processing. <i>Sensor output data path is 10 bits per pixel.</i>	1.00 Guru DFNC
FPN Correction Mode <i>Off</i> <i>Active</i> <i>Calibration</i>	FPNCorrectionMode <i>Off</i> <i>Active</i> <i>Calibration</i>	Sets the mode for the FPN correction. <i>Optical Black Reference FPN correction applied if available in the current active set.</i> <i>FPN is enabled. If Optical Black Reference FPN correction is available in the current active set it is also applied.</i> <i>When selected, the camera is configured for FPN correction calibration.</i>	1.00 Expert DFNC
FPN Correction Active Set <i>Factory</i> <i>User Set 1</i> <i>User Set 2</i>	FPNCorrectionActiveSet <i>FPNFactory</i> <i>FPNUser1</i> <i>FPNUser2</i>	Specifies the current set of FPN coefficients to use. This feature cannot be changed during acquisition. <i>Sets the factory FPN coefficient table as the current FPN set.</i> <i>Sets User Set 1 coefficient table as the current FPN set.</i> <i>Sets User Set 2 coefficient table as the current FPN set.</i>	1.00 Expert DFNC
Target Exposure Range Min	FPNCalibrationTargetExposureMin	Sets the minimum exposure time, in μ s, for FPN calibration.	1.00 Guru DFNC
Target Exposure Range Max	FPNCalibrationTargetExposureMax	Sets the maximum exposure time, in μ s, for FPN calibration.	1.00 Guru DFNC
Optical Black Reference <i>Off</i> <i>Active</i>	FPNCalibrationOpticalBlackReference <i>Off</i> <i>Active</i>	Sets the enable state of dark current correction using values generated on a row-by-row basis using shielded pixels. <i>Row-by-row dark current correction is disabled. When the FPN Correction Mode is set to active only ADC related correction is applied.</i> <i>Row-by-row dark current correction coefficients are generated during calibration and included in the FPN correction for the selected user set.</i>	1.00 Guru DFNC
Optical Black Reference Calibration Offset	FPNCalibrationOpticalBlackReferenceOffset	Sets the offset to apply to the optical black reference correction to ensure that values are above 0.	1.00 Guru DFNC
Calibration FPN	FPNCalibrationCalibrate	Performs Fixed Pattern Noise (FPN) calibration by reducing to zero dark pixel current using a pixel offset.	1.00 Guru DFNC
Save FPN Calibration	FPNCalibrationSave	Save the calibration performed by FPNCalibrationCalibrate to the active set.	1.00 Guru DFNC
Defective Pixel Replacement Mode <i>Off</i> <i>Active</i>	defectivePixelReplacementMode <i>Off</i> <i>Active</i>	Sets the enable state for defective pixel replacement. <i>Disable defective pixel replacement.</i> <i>Enable defective pixel replacement.</i>	1.01 Expert DFNC
Defective Pixel Replacement Map Current Active Set <i>Factory Map</i> <i>User Set 1</i>	defectivePixelReplacementMapCurrentActiveSet <i>FactoryMap</i> <i>UserMap1</i>	Sets the defective pixel replacement map set to use. <i>Factory default defective pixel replacement map.</i> <i>User defective pixel replacement map.</i>	1.01 Expert DFNC

FPN Correction

The fixed pattern noise (FPN) correction compensates for dark current noise unique to each camera sensor.

The Falcon4 uses 2 stages of FPN correction:

- Row-by-row dark current correction using values generated with shielded reference pixels (Optical Black Reference and Optical Black Reference Calibration Offset features).
- ADC noise correction

Both stages can be enabled and disabled independently. The FPN Correction Mode, along with the Optical Black Reference enable state during calibration, determine which FPN correction are applied. When the Optical Black Reference feature is set to *Active*, during calibration these correction coefficients are generated and are always applied.

Optical Black Reference (during calibration)	FPN Correction Mode	Result
Active	Off	Only Optical Black Reference correction applied. (ADC correction disabled).
	Active	Both Optical Black Reference and ADC correction applied.
Off	Off	No FPN correction applied.
	Active	Only ADC correction applied.

FPN calibration is always performed using 10-bits (regardless of whether the Pixel Format is set to 8 or 10-bit).

With CMOS sensors, it is important to perform FPN calibration under the same operating conditions the camera will be used, otherwise sensor variations (over temperature and exposure) will make the FPN calibration invalid.

Falcon4 cameras has two FPN user memory spaces to store calibration data, allowing users to store FPN data for different optimized exposure setups. A user set can store coefficients for specific gain settings (gain = 1, 1.5, 2.0, 2.5, 3.0, 3.5 and 4); a calibration must be performed with each gain setting and saved to the same user set (gain settings which are not user calibrated use the factory default).

Performing an FPN Setup via Sapera CamExpert

The Sapera LT CamExpert tool provides an easy GUI based method for a user to perform a FPN Calibration. For FPN calibration the camera must acquire a suitable dark image.

FPN Correction

In general, factory FPN correction is sufficient for most applications. However, if a new FPN correction is required a user set FPN correction can be applied.



Important: Before calibration, the Falcon4 should be powered on long enough to achieve its nominal temperature (a minimum of 30 minutes). A low ambient temperature may increase the time required for the camera to reach a stable internal temperature.

Important: During calibration, no other Falcon4 features should be accessed or modified.

Calibration via CamExpert or via a User Application: Exposure and frame rates used during a Flat Field Calibration should be similar to the exposure settings used in the camera application.

To perform FPN Correction:

Step 1. Cover the lens (place the sensor in dark).


Step 2. Set the FPN Correction Mode to Off and check the histogram.

Using CamExpert, click **Grab** and then **Statistics**.



In the Statistics dialog, use the **Selected view** drop-down list to select Histogram.



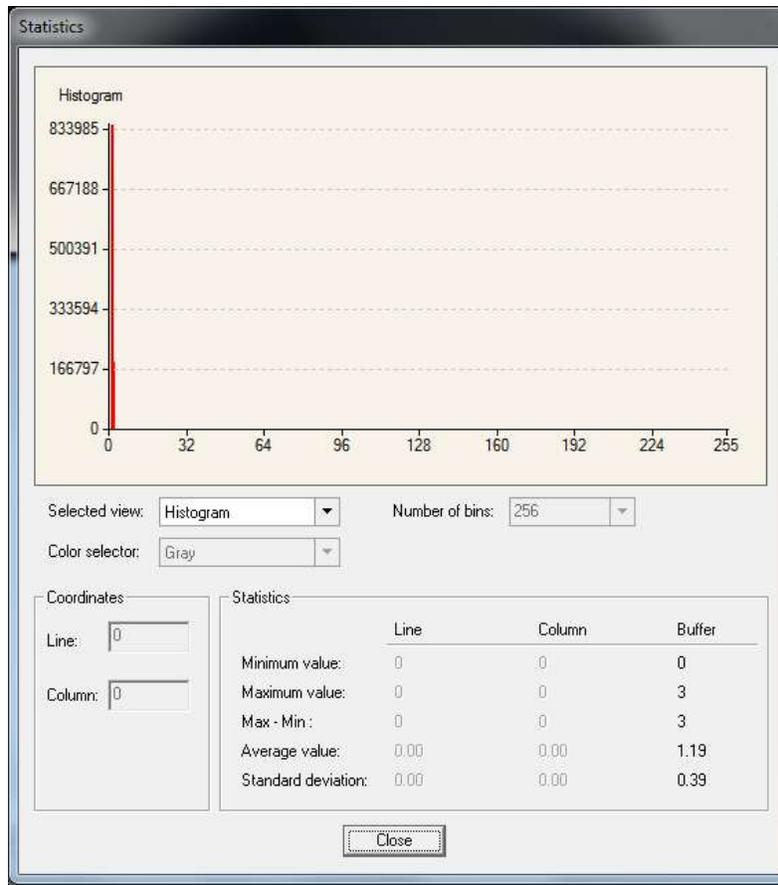

Pixel values should all be above zero. Note that the [Black Level](#) setting is not applied during calibration.

Step 3. Set the FPN Correction Mode to Calibration and select the required user set from FPN Correction Active Set drop-down menu.

Parameter	Value
Processing Pixel Size	10 Bits/Pixel
FPN Correction Mode	Calibration
FPN Correction Active Set	User Set 1
Target Exposure Range Min	Factory
Target Exposure Range Max	User Set 1
	User Set 2

Step 4. Set the Target Exposure Range Min and Target Exposure Range Max to values that correspond to the exposure range required for the camera's expected operating conditions.

Step 5. If Optical Black Reference correction is required, set the feature to Active.

Optical Black Reference	Active
Optical Black Reference Calibration Offset	Off
	Active

Step 6. In the Calibration FPN feature, click the *Press...* command to perform the calibration.

Optical Black Reference Calibration Offset	10
Calibration FPN	Press...
Save FPN Calibration	Press...

Step 7. If required, verify the Optical Black Reference Calibration Offset setting; set the FPN Correction Mode to Off and [Black Level](#) to 0.

Camera Control	Exposure Delay	9.0
Digital IO Control	Exposure Time	1828.0
Data Processing	Exposure Time Actual	1828.0
Image Format	Shutter Mode	Global
Transport Layer	Gain Selector	Analog
Acquisition and Transfer Control	Gain	1.0
Device Counter and Timer Control	Black Level Selector	Black Level
	Black Level	0

Grab an image and use a histogram to verify that pixel values are above zero; if necessary, adjust the Optical Black Reference Calibration Offset. Higher offset values may be required when the camera is operating at very high temperature and frame rates. Set the FPN Correction Mode to Calibration and use the Calibration FPN command to recalculate the calibration and adjust the offset until the result is satisfactory.

Step 8. If the calibration is satisfactory, in the Save FPN Calibration feature click the *Press...* command to save the calibration to the selected user set.

Calibration FPN	Press...
Save FPN Calibration	Press...
Reset FPN Correction	Not Enabled


For each gain setting required perform and save the calibration; coefficients for each gain setting are saved in the user set (gain settings for which no calibration is done use default coefficients).

Camera Control	Exposure Delay	9.0
Digital IO Control	Exposure Time	1828.0
Data Processing	Exposure Time Actual	1828.0
Image Format	Shutter Mode	Global
Transport Layer	Gain Selector	Analog
	Gain	1.0

Step 9. To load this user set when resetting or powering on the camera, use the Power-up Configuration dialog. Click Setting... Power-up Configuration feature, in Camera Information category.

In the *Power-up Configuration* dialog box select the required user set both *Camera Power-up configuration* and *Load / Save configuration* and click Save.

This ensures that the camera loads the saved parameters the next time the camera is turned on.

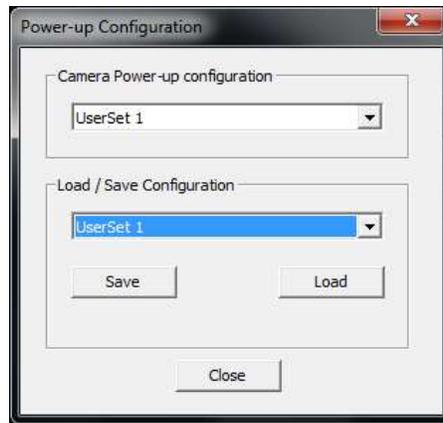

The FPN Correction coefficient file is a standard 16-bit TIFF file for both 8-bit and 10-bit acquisition modes.

Defective Pixel Replacement

The Pixel Replacement algorithm is based on a predefined bad pixel map (as an XML file), either supplied by the factory (file loaded as "Factory Map") or generated by the user (file uploaded as "User Map 1").



Note: Identifying bad pixels is left to the user's discretion, but Teledyne DALSA technical support can provide guidance.

The following XML code sample forms the template for the user to build bad pixel maps for any of their Falcon4 cameras.

Example User Defective Pixel Map XML File

The following example shows the required components of the defective pixel map file. Each bad pixel position (relative to the image origin which is the upper left corner), must be identified by the XML statement:

```
<DefectivePixel OffsetX="number" OffsetY="number" />
```



Note: Pixels must be sorted in the XML file by ascending row (OffsetY); within each row, pixels must also be sorted in ascending order horizontally (OffsetX). That is, the order is from top-left of the image to the bottom-right.

The pixel format (whether 8-bit or 10-bit) is handled transparently, thus requires no special consideration by the user.

This example XML listing has four "bad" pixels identified (maximum number of entries is model dependent). The Algorithm descriptions that follow defines the rules used by the Falcon4 firmware to replace an identified bad pixel.

```
<?xml version="1.0" encoding="utf-8"?>

<!--Example User Defective Pixel Map-->
<!--maximum 1022 coordinates-->
<!--filename: Falcon4ExampleBadPixels.xml-->

<Coordinates>

  <DefectivePixel OffsetX="100" OffsetY="0" />
  <DefectivePixel OffsetX="468" OffsetY="50" />
  <DefectivePixel OffsetX="223" OffsetY="600" />
  <DefectivePixel OffsetX="800" OffsetY="600" />

</Coordinates>
```



Note: The Falcon4 automatically adjusts the defective pixel map if binning is enabled by combining adjacent row defects. Pixel replacement occurs in the processing chain before horizontal binning.


The user defective pixel map can be downloaded or uploaded to the camera using the features available in the [File Access Control](#) category. The factory map can also be downloaded.

Monochrome Defective Pixel Replacement Algorithm Description

The replacement algorithm follows a few basic rules as defined below, which in general provides satisfactory results.


Single bad pixel in a sensor line with a good adjacent pixel

- A defective pixel is replaced by the following good pixel if previous pixel is bad or not existent.
- Or a defective pixel is replaced by the previous good pixel.

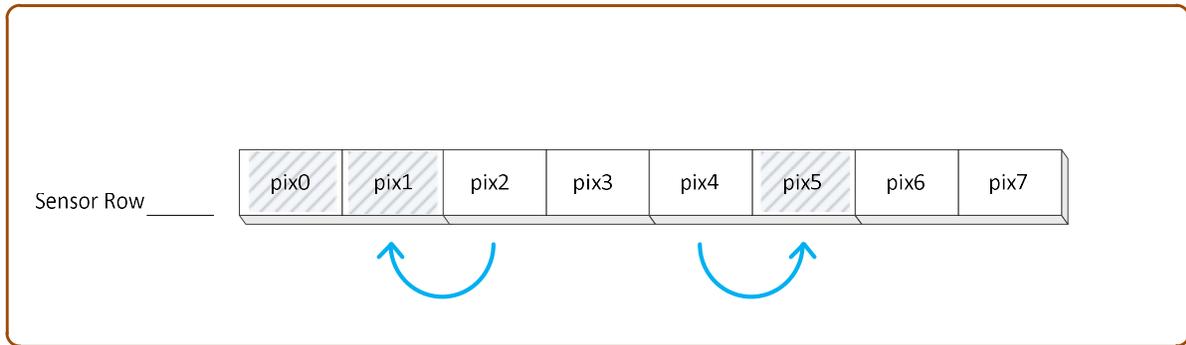


Bad pixel in a sensor line with bad adjacent pixels

- Replace bad pixel with the corresponding pixel of the previous line.
- Do nothing when the neighboring pixels are also bad.

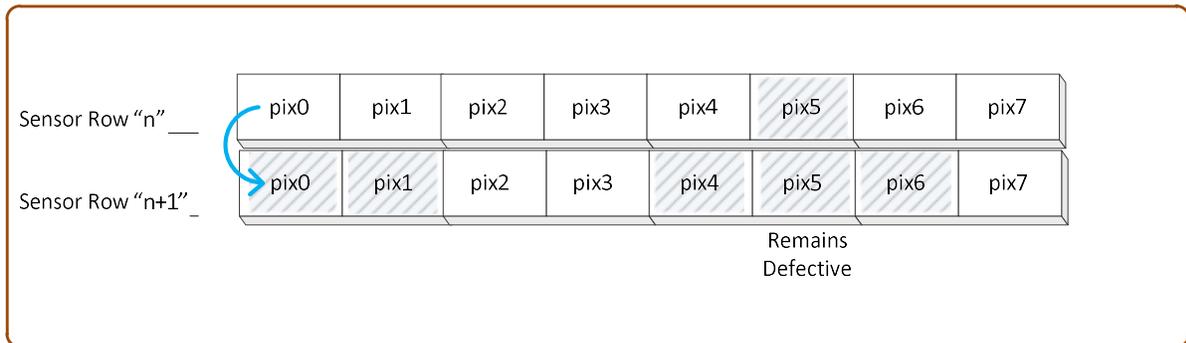

Lens Shading Correction Category

The Falcon4 Lens Shading Correction controls, as shown by CamExpert, has parameters to configure the lens shading correction features.

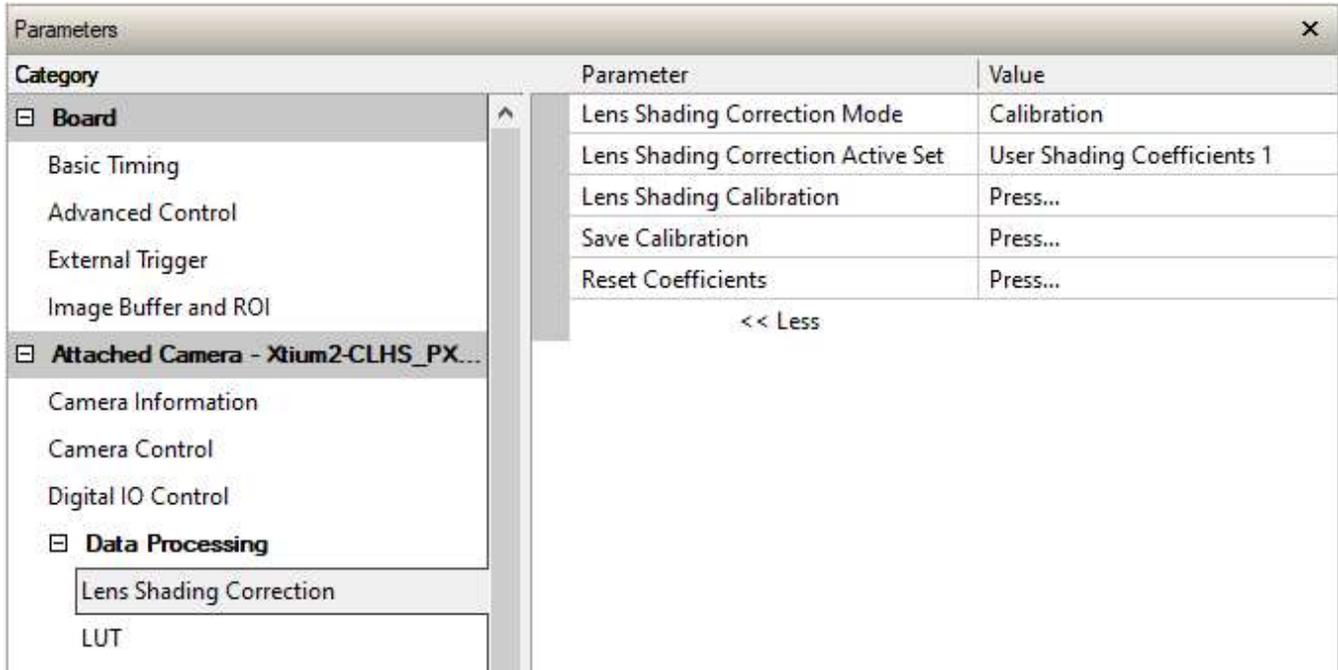

Lens Shading Correction Feature Descriptions

Display Name	Feature & Values	Description	Device Version & View
Lens Shading Correction Mode <i>Off</i> <i>Active</i> <i>Calibration</i>	lensShadingCorrectionMode <i>Off</i> <i>Active</i> <i>Calibration</i>	Sets the mode for the lens shading correction. <i>Lens Shading Correction is Disabled</i> <i>Lens Shading Correction is Enabled</i> <i>When selected, the camera is configured for Lens Shading correction calibration. Some processing will be disabled even if the associated feature is enabled.</i>	1.01 Expert DFNC
Lens Shading Correction Active Set <i>User Shading Coefficients 1</i>	lensShadingCorrectionCurrentActiveSet <i>ShadingCoefficients1</i>	Specifies the current set of Lens Shading Coefficients to use. <i>Sets User Shading Coefficients set 1 as current.</i>	1.01 Expert DFNC
Lens Shading Calibration	lensShadingCorrectionCalibrationBright	Perform a bright calibration for lens shading correction. This calibration requires a bright featureless acquisition that is not saturated. (70% illumination is recommended).	1.01 Expert DFNC
Save Calibration	lensShadingCorrectionCalibrationSave	Save the calibration results of the lensShadingCorrectionCalibrationBright operations to the active set.	1.01 Expert DFNC
Reset Coefficients	lensShadingResetCoefficients	Reset lens shading coefficients to pass-through.	1.01 Expert DFNC

Lens Shading Calibration

It is recommended that a "Lens Shading Calibration" procedure be done for any Falcon4/lens combination. Calibration eliminates any lens vignetting in the image corners or any other shading differences across the image field. Calibration will allow using a lens with a slightly smaller image circle that does not quite evenly expose the whole sensor. For more information refer to the [Choosing a Lens with the Correct Image Circle](#) section.

CamExpert allows quick calibration by the user:


1. Set the [Lens Shading Correction Mode](#) to *Calibration*.
2. With a bright featureless acquisition that is not saturated (70% illumination is recommended), in the [Lens Shading Correction](#) feature field click "Press..." to execute the calibration.
3. After calibration, if satisfactory, the data should be saved to the user set; in the [Save Calibration](#) feature field click "Press..." to save the coefficients to the user set.

The features for the [Lens Shading Correction category](#) can also be accessed by the user designed application.

The lens shading correction user set can be downloaded or uploaded to the camera using the features available in the [File Access Control](#) category.

LUT Category

The LUT category, as shown by CamExpert, groups parameters used to configure LUT mode controls on monochrome cameras.

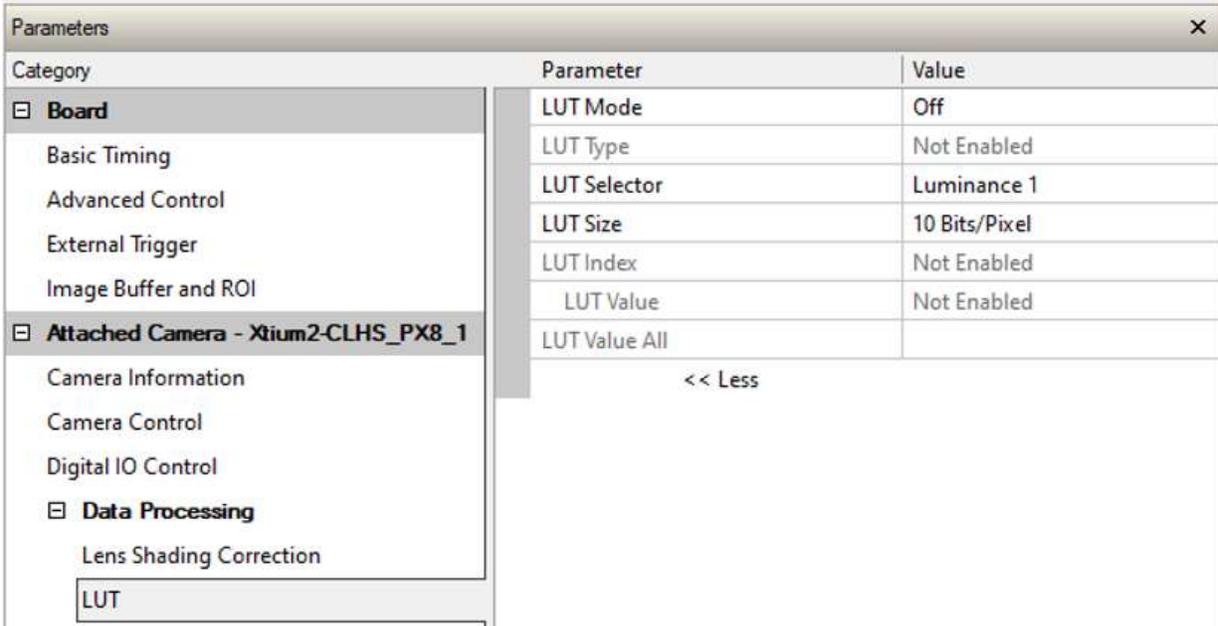


LUT Feature Description

Display Name	Feature & Values	Description	Device Version & View
LUT Mode <i>Off</i> <i>Active</i>	lutMode <i>Off</i> <i>Active</i>	Sets the enable state of the LUT module (Lookup Table). <i>Disables the LUT.</i> <i>Enables the LUT module.</i>	1.02 Expert DFNC
LUT Type <i>User Defined</i>	lutType <i>UserDefined</i>	Displays the LUT type of the currently selected Lookup Table. <i>Uses the user programmable LUT.</i>	1.02 Expert DFNC
LUT Selector <i>Luminance 1</i>	LUTSelector <i>Luminance1</i>	Selects which LUT to control and adjust features. <i>Luminance 1 is under control.</i>	1.02 Guru DFNC
LUT Size <i>10 Bits/Pixel</i>	lutSize <i>Bpp10</i>	Specify the LUT size of the selected LUT (Lookup Table). <i>10 bits per pixel.</i>	1.02 Gugu DFNC
LUT Index LUT Value	LUTIndex LUTValue	Select the LUT index. Returns the value at specified LUT index entry of the LUT selected by the LUT Selector feature.	1.02 Guru DFNC
LUT Value All	LUTValueAll	Accesses all the LUT coefficients in a single access without using individual LUT indices.	1.02 Guru

Lookup Table (LUT) Overview

The Falcon4-CLHS cameras include a user programmable LUT (lookup table) as a component of its embedded processing features. A LUT is used for operations such as gamma adjustments, invert function and threshold processes.

The camera LUT tables are dependent on the sensor (see feature LUT Size) and is illustrated in the following figure. Pixel data from the sensor is passed through the LUT memory array, where the new programmed pixel value is then passed to the camera output circuit. The LUT data table is stored along with other parameters with the user configuration function.

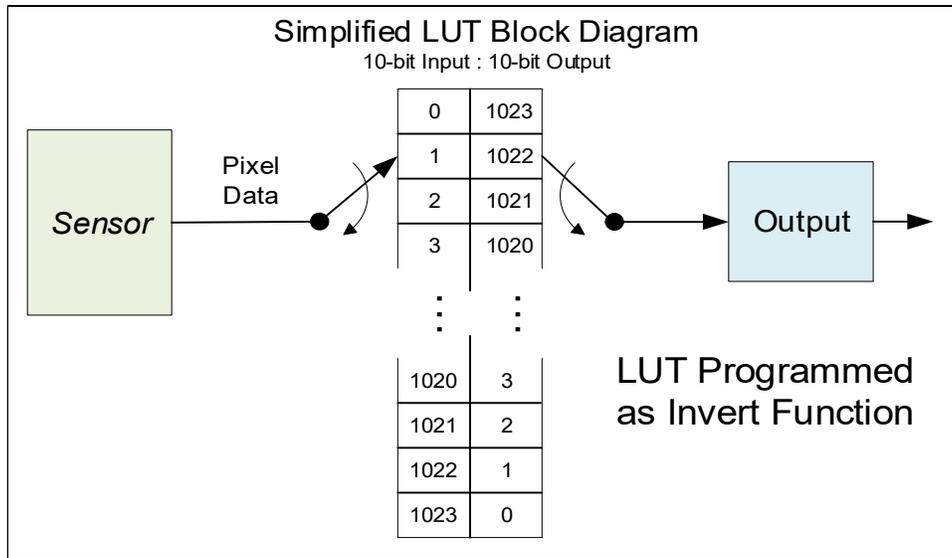

Simplified Example 10-bit to 10-bit LUT Block Diagram

LUT Size vs. Pixel Format

The LUT size will correspond to the camera’s sensor pixel size; for the current Falcon4-CLHS standard firmware, this is 10 bits per pixel, i.e., 1024. All camera processing is performed at the 10-bit sensor pixel format of the camera, while the end user chooses the pixel format (8-bit or 10-bit format) to output.

The default neutral LUT programming is as follows:

- With **Pixel Format = Mono 10**, the default LUT data value is equal to the LUT value for each index. This is a linear LUT that does not modify the sensor data.
- With **Pixel Format = Mono 8**, the LUT remains to be a 10 bit in 10 bit out. The conversion to 8 bit occurs after the LUT.

LUT data is selected as a user file uploaded using the File Access controls. Refer to the Sapera documentation for information about the SapLut Class. Note that a SapLut file can be uploaded but cannot be read back.

Image Format Control Category

The Image Format controls, as shown by CamExpert, groups parameters used to configure camera pixel format, image cropping, etc.

Parameters ×		
Category	Parameter	Value
<input type="checkbox"/> Board	Pixel Format	Mono 8
Basic Timing	WidthMax	4480
Advanced Control	HeightMax	2496
External Trigger	Horizontal Offset	0
Image Buffer and ROI	Vertical Offset	0
	Width	4480
<input type="checkbox"/> Attached Camera - Xtium2-CLHS_PX8_1	Height	320
Camera Information	Test Pattern	Off
Camera Control	Test Image Value	Not Enabled
Digital IO Control	Binning Selector	Mixed
<input checked="" type="checkbox"/> Data Processing	Binning Mode	Average
Image Format	Binning Horizontal	1
Transport Layer	Binning Vertical	1
Acquisition and Transfer Control	Multiple ROI Mode	Active
Device Counter and Timer Control	ROI Count Vertical	2
Cycling Preset	ROI Selector	ROI 2
Metadata Controls	ROI Offset Y	336
File Access Control	ROI Height	160
	<< Less	

Image Format Control Feature Description

Display Name	Feature & Values	Description	Device Version & View
Pixel Format <i>Mono 8</i> <i>Mono 10</i>	PixelFormat <i>Mono8</i> <i>Mono10</i>	Pixel Format <i>Pixel Format Mono8</i> <i>Pixel Format Mono10</i>	1.00 Beginner
Width Max	WidthMax	The maximum image width is the dimension calculated after any other function changing the horizontal dimension of the image.	1.00 Beginner
Height Max	HeightMax	The maximum image height is the dimension calculated after any other function changing the vertical dimension of the image.	1.00 Beginner
Horizontal Offset	OffsetX	Output image horizontal offset from the origin (always zero). To set, stop acquisition.	1.00 Beginner
Vertical Offset	OffsetY	Output image vertical offset from the origin (always zero). To set, stop acquisition.	1.00 Beginner
Width	Width	Horizontal width in output pixels for the selected CLHS port.	1.00 Beginner
Height	Height	Height of the image provided by the device (in pixels). To set, stop acquisition.	1.00 Beginner
Test Pattern <i>Off</i> <i>Grey Horizontal Ramp</i> <i>Grey Vertical Ramp</i> <i>Grey Diagonal Ramp</i> <i>Constant</i>	TestImageSelector <i>Off</i> <i>GreyHorizontalRamp</i> <i>GreyVerticalRamp</i> <i>GreyDiagonalRamp</i> <i>Constant</i>	Select an internal Test Pattern <i>Image is from the camera sensor.</i> <i>Image is filled horizontally with an image that goes from the darkest possible value to the brightest.</i> <i>Image is filled vertically with an image that goes from the darkest possible value to the brightest.</i> <i>Image is filled diagonally with an image that goes from the darkest possible value to the brightest.</i> <i>Image is filled completely with the pixel value set by the TestImageValue feature.</i>	1.00 Beginner
Test Image Value	TestImageValue	The value for Constant test pattern.	1.00 Beginner
Binning Selector <i>Mixed</i>	binningSelector <i>Mixed</i>	Selects where the Horizontal and Vertical Binning is performed. <i>Vertical binning is done inside the Sensor itself; horizontal binning is done inside the device but with a digital processing function.</i>	1.01 Beginner DFNC
Binning Mode <i>Average</i>	binningMode <i>Average</i>	Determines how resulting pixel values are calculated. <i>The responses from the individual pixels are averaged, resulting in increased signal to noise ratio.</i>	1.01 Beginner DFNC
Binning Horizontal	BinningHorizontal	Number of horizontal photo-sensitive cells to combine together. This reduces the horizontal resolution of the image. Note, if horizontal binning is applied, vertically binning is also automatically applied.	1.01 Expert
Binning Vertical	BinningVertical	Number of vertical photo-sensitive cells to combine together. This reduces the vertical resolution of the image. Note, if vertical binning is applied, horizontal binning is also automatically applied.	1.01 Expert
Multiple ROI Mode <i>Off</i> <i>Active</i>	multipleROIMode <i>Off</i> <i>Active</i>	Enable the Multiple ROI (Region of Interest) per image feature. The ROI Count is set by the Multiple ROI Count Vertical feature. <i>Single ROI per image.</i> <i>The ROI per image feature is active.</i>	1.02 Expert DFNC
ROI Count Vertical	multipleROICountVertical	Specifies the number of possible ROI (Region of Interest) available in an acquired image. Two is minimum, while the maximum is device specific.	1.02 Expert DFNC

ROI Selector	multipleROISelector	Select an ROI (Region of Interest) when Multiple ROI Mode is enabled. Selector range is from 1 to the ROI Count Verticalvalue.	1.02 Expert DFNC
<i>ROI 1</i> <i>ROI 2</i> ... <i>ROI 32</i>	<i>roi1_1</i> <i>roi1_2</i> ... <i>roi1_32</i>		
ROI Offset Y	multipleROIOffsetY	Vertical offset (in pixels) from the origin to the selected ROI (Region of Interest).	1.02 Expert DFNC
ROI Height	multipleROIHeight	Height of the selected ROI (Region of Interest) provided by the device (in pixels).	1.02 Expert DFNC

Width and Height Features for Partial Scan Control

Width and Height controls along with their respective offsets, allow the Falcon4-CLHS to grab a region of interest (ROI) within the full image frame. Besides eliminating post acquisition image cropping done by software in the host computer, a windowed ROI grab reduces the bandwidth required since fewer pixels are transmitted.




Any reduction of the camera's acquisition area from its maximum must be matched by the same reduction in the frame grabber's buffer dimensions. The Teledyne DALSA CLHS frame grabber will generate "Buffer Incomplete" errors when the buffer dimensions do not match the cropped acquisition.

Vertical Cropping (Partial Scan)

The Height and Vertical Offset features, used for vertical cropping, reduce the number of video lines grabbed for a frame. By not scanning the full height of the sensor, the maximum possible acquisition frame rate is proportionately increased, up to the model maximum.

The following figure is an example of a partial scan acquisition using both Height and Vertical Offset controls. The Vertical Offset feature defines at what line number from the sensor origin to acquire the image. The Height feature defines the number of lines to acquire (to a maximum of the remaining frame height). Note that only the partial scan image (ROI) is transmitted to the host computer.

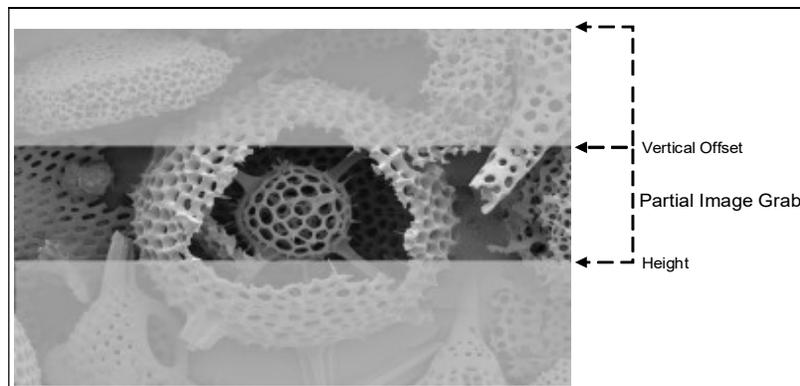

Partial Scan Illustration

Maximum Frame Rate Examples

Example frame rates for M4480 and M4400 models.

Conditions: 8-bit, minimum exposure time is 5 μ s, Fast readout mode: active, exposure alignment: synchronous.

Vertical Lines Acquired	M4480*	M4400
2496	600	335
1248	1 187	664
624	2 325	1 303
312	4 465	2 512
160	8 064	4 587
80	14 084	8 130
40	22 222	13 157
24	29 411	17 543
16	34 482	20 833
8	41 666	26 315

*framerate will be lower if camera is set to cycle exposure time


Example frame rates for M8200 model.

Conditions: 8-bit, minimum exposure time is 8 μ s, exposure alignment: synchronous.

Vertical Lines Acquired	M8200
8192	91
6144	121
4096	181
1024	711
512	1 386
256	2 637
128	4 805
40	11 053
16	17 127
8	20 967
4	23 615

Horizontal Cropping (Partial Scan)

Crop the acquisition horizontally by grabbing fewer pixels on each horizontal line. Horizontal offset (OffsetX) defines the start of the acquired video line while horizontal width (Width) defines the number of pixels per line.

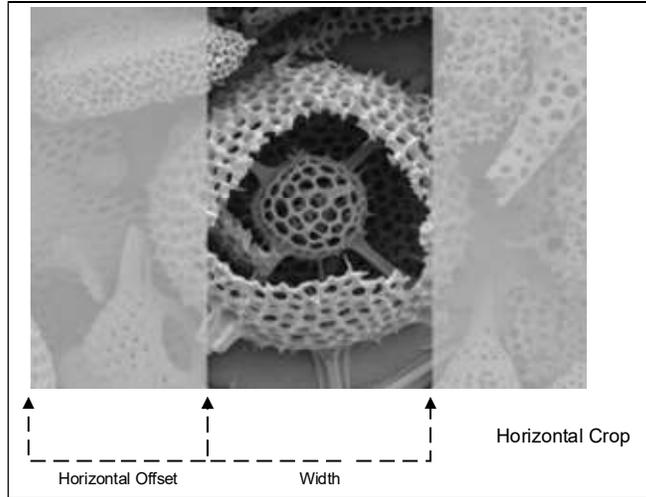

Multiple ROIs

The Falcon4-CLHS allows for multiple regions of interest.

You can define up to 32 regions of interest in the ROI Count Vertical feature. ROIs are defined as a number of lines to grab. The ROIs retain the full width of the sensor, unless you specify a Width and a Horizontal Offset, in which case they apply to all ROIs.

To define multiple ROIs:

- Set Multiple ROI Mode to *Active*.
- Specify the number of regions in ROI Count Vertical.
- Select an ROI in the ROI Selector, and specify the line number from the sensor origin (ROI Offset Y) and the number of lines to grab (ROI Height).
- Repeat for each ROI.
- In the Image Buffer and ROI category in the Board, modify the Image Width (in Pixels) and Image Height (in Lines) features to match your image width and total number of lines of your ROIs.




Binning Function

Binning is the process where the charge on two adjacent pixels is combined. This results in increased light sensitivity since there is twice the sensor area to capture photons. The sensor spatial resolution is reduced but the improved low-light sensitivity plus lower signal-noise ratio may solve a difficult imaging situation. The user can evaluate the results of the binning function on the Falcon4 by using CamExpert.

Horizontal and vertical binning functions are applied together, by factors of 2 in each axis (2x2). Specifically with binning activated, a nominal 640x480 image is reduced to 320x240.

Vertical binning is performed in-sensor and horizontal binning digitally; therefore with binning there is an increase in acquisition frame rate (maximum frame rate at full resolution, minimum exposure time = 1206.2 fps (M4480) and 664.4 fps (M4400)).

The following graphic illustrates the horizontal and vertical binning mechanism.

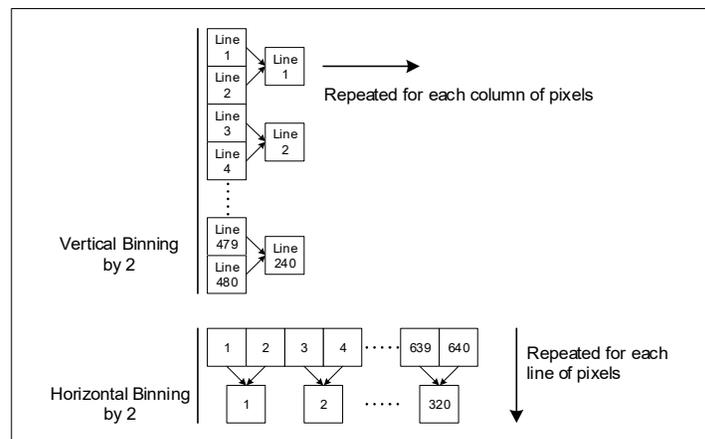

Internal Test Pattern Generator

The camera includes a number of internal test patterns which easily confirm camera installations, without the need for a camera lens or proper lighting. Use CamExpert to easily enable and select a test pattern from the drop menu while the camera is not in acquisition mode. Select live grab to see the pattern output.

The Test Patterns are:

- **Grey Horizontal ramp:** *Image is filled horizontally with an image that goes from the darkest possible value to the brightest.*



- **Grey Vertical ramp:** *Image is filled vertically with an image that goes from the darkest possible value to the brightest.*




- **Grey Diagonal Ramp:** combination of the 2 previous schemes.



- **Constant:** Image filled completely with the pixel value set by the Test Image Value feature.

Transport Layer Category

The Transport Layer Control Features are related to CLHS specification.

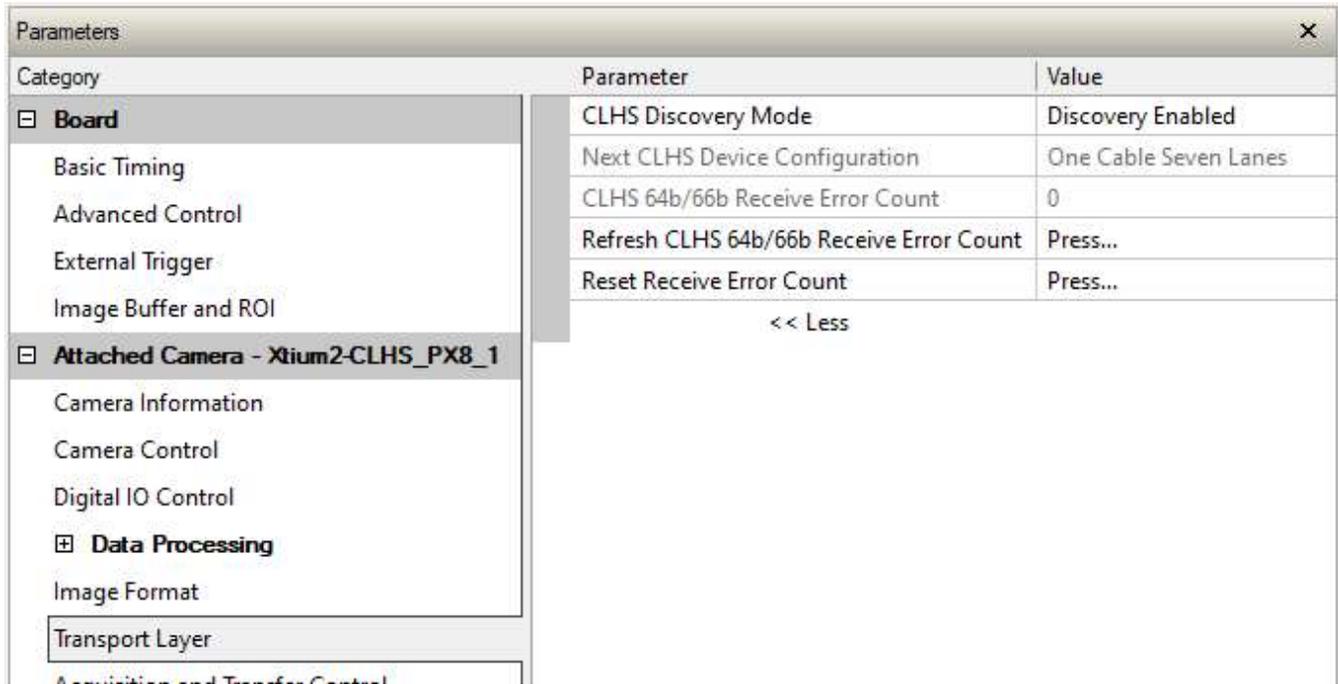


Transport Layer Feature Descriptions

Display Name	Feature & Values	Description	Device Version & View
CLHS Discovery Mode <i>Discovery Disabled</i> <i>Discovery Enabled</i>	clhsDiscovery <i>DiscoveryDisable</i> <i>DiscoveryEnable</i>	Disable CLHS Discovery if not implemented in frame grabber. If disabled then camera will enable image transmitters as soon as the cable is connected. <i>Discovery Disabled</i> <i>Discovery Enabled</i>	1.00 DFNC Beginner
Next CLHS Device Configuration <i>One Cable Four Lanes</i> <i>One Cable Seven Lanes</i>	clhsNextDeviceConfig <i>OneCableFourLanes</i> <i>OneCableSevenLanes</i>	Select next CLHS device configuration from valid list. Reboot or reconnect cable to activate. <i>One cable with 4 data lanes (M4400 model).</i> <i>One cable with 7 data lanes (M4480 model).</i>	1.00 DFNC Beginner
CLHS 64b/66b Receive Error Count	clhsErrorCount	CLHS 64b/66b Receive Error Count	1.00 DFNC Guru
Refresh CLHS 64b/66b Receive Error Count	clhsErrorCountRefresh	Refresh CLHS 64b/66b Receive Error Count	1.00 DFNC Guru
Reset Receive Error Count	clhsErrorCountReset	Reset current CLHS 64b/66b Receive Error Count to Zero	1.00 DFNC Guru

Acquisition and Transfer Control Category

The Acquisition and Transfer controls as shown by CamExpert, has parameters used to configure the optional acquisition modes of the device.

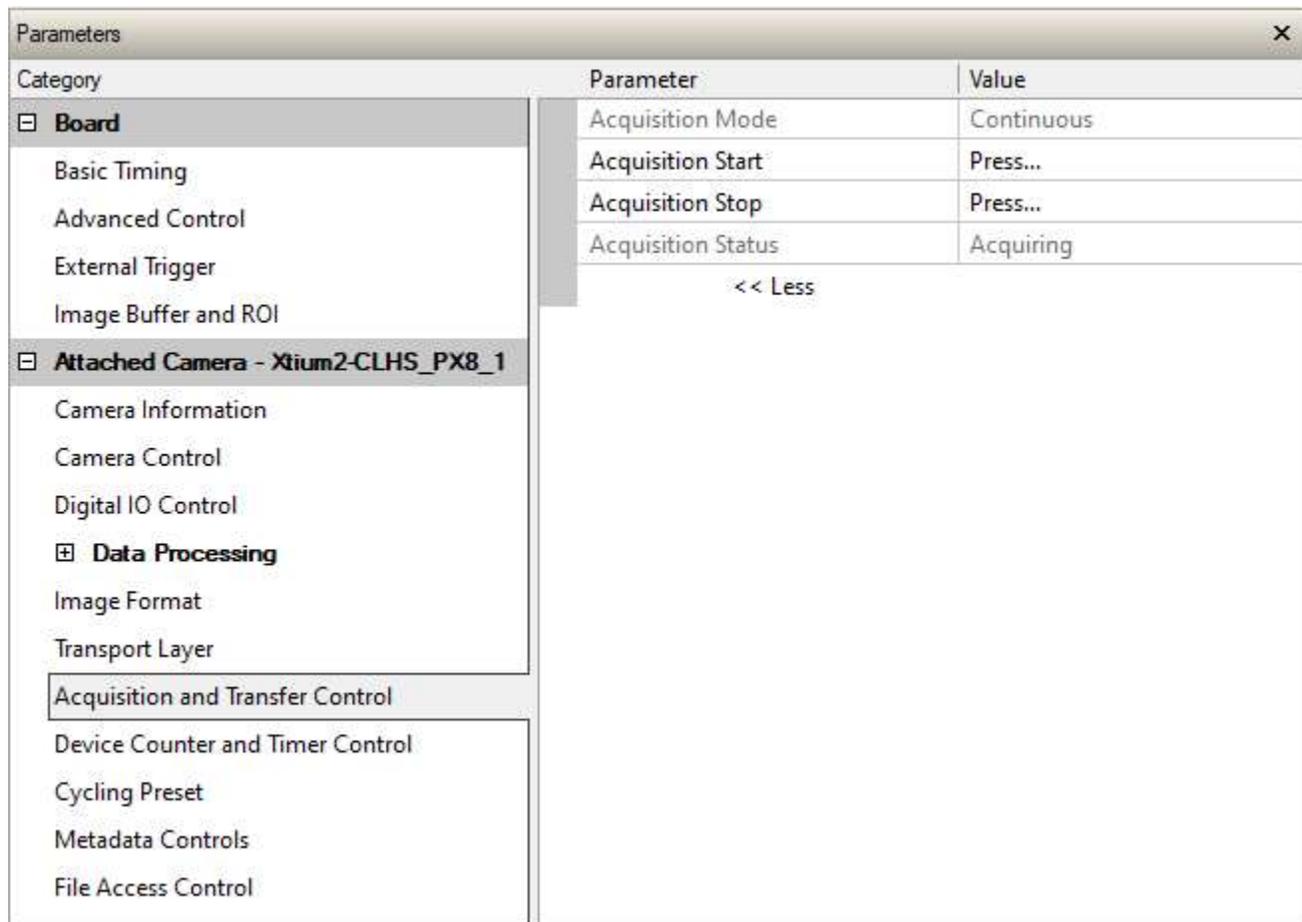

Acquisition and Transfer Feature Descriptions

Display Name	Feature & Values	Description	Device Version & View
Acquisition Mode <i>Continuous</i>	AcquisitionMode <i>Continuous</i>	Defines the way that frames are acquired. <i>Frames are captured continuously until stopped with the "Acquisition Stop" command.</i>	1.00 Beginner
Acquisition Start	AcquisitionStart	Commands the camera to start sending image data.	1.00 Beginner
Acquisition Stop	AcquisitionStop	Commands the camera to stop sending image data at the end of the current line.	1.00 Beginner
Acquisition Status <i>Not Acquiring</i> <i>Acquiring</i>	AcquisitionStatus <i>NotAcquiring</i> <i>Acquiring</i>	Indicates whether the camera has been commanded to send image data. <i>Not Acquiring</i> <i>Acquiring</i>	1.00 Beginner

Acquisition Buffering

All acquisitions are internally buffered and transferred as fast as possible to the host system. This internal buffer allows uninterrupted acquisitions no matter of any transfer delays that might occur. Only when the internal acquisition buffer is consumed would an Image Lost Event be generated.

Features that cannot be changed during a Transfer

The following features cannot be changed during an acquisition or when a transfer is connected.

Feature Category	Features Locked During a Spera Transfer
CAMERA INFORMATION	UserSetLoad, deviceBIST, DeviceReset
CAMERA CONTROL	<i>AcquisitionFrameRate, ExposureMode, exposureAlignment GainSelector</i>
DIGITAL IO CONTROL	TriggerSelector, TriggerMode, triggerFrameCount TriggerSource, TriggerDelay, TriggerOverlap-
DATA PROCESSING	FPNCorrectionMode FPNCorrectionActiveSet FPNCalibrationTargetExposureMin FPNCalibrationTargetExposureMax FPNCalibrationOpticalBlackReference FPNCalibrationOpticalBlackReferenceOffset FPNCalibrationCalibrate FPNCalibrationSave flatfieldResetCoefficients defectivePixelReplacementMode defectivePixelReplacementMapCurrentActiveSet lensShadingCorrectionMode, lensShadingCorrectionCurrentActiveSet lensShadingCorrectionCalibrationSampleSize lensShadingCorrectionCalibrationBright lensShadingResetCoefficients
DEVICE COUNTER AND TIMER CONTROL	NA
IMAGE FORMAT CONTROL	PixelFormat OffsetX (except within the Cycling Mode) OffsetY (except within the Cycling Mode) Width, Height TestImageSelector BinningHorizontal BinningVertical
ACQUISITION AND TRANSFER CONTROL	DeviceRegistersStreamingStart DeviceRegistersStreamingEnd
FILE ACCESS CONTROL	NA

Device Counter and Timer Control Category

The Device Counter and Timer Control category, as shown by CamExpert, groups parameters used to configure acquisition counters and timers for various input lines and signal edge detection.


Parameters		
Category	Parameter	Value
Board	Counter Selector	Counter1
Basic Timing	Counter Mode	Off
Advanced Control	Counter Status	Counter Idle
External Trigger	Counter Start Source	Off
Image Buffer and ROI	Counter Start Line Activation	Falling Edge
	Counter Incremental Source	Off
Attached Camera - Xtium2-CLHS_PX8_1	Counter Incremental Line Activation	Falling Edge
Camera Information	Counter Duration	0
Camera Control	Counter Reset Source	Reset Cmd
Digital IO Control	Counter Reset Line Activation	Falling Edge
Data Processing	Counter Value	0
Image Format	Counter Value at Reset	0
Transport Layer	Counter Reset	Press...
Acquisition and Transfer Control	Timer Selector	Timer1
Device Counter and Timer Control	Timer Mode	Off
Cycling Preset	Timer Status	Timer Idle
Metadata Controls	Timer Start Source	TimerReset Cmd
File Access Control	Timer Line Activation	Falling Edge
	Timer Delay	0
	Timer Duration	0
	Timer Value	0
	Timer Reset	Press...
	<< Less	

Counter Incremental Source	counterIncrementalSource	Select the event source which increments the counter. The Event Control section provides details and timing diagrams for the supported events.	1.00 Beginner DFNC
<i>Off</i>	<i>Off</i>	<i>Counter is stopped.</i>	
<i>Exposure Start</i>	<i>ExposureStart</i>	<i>Counts the number of Exposure Start events.</i>	
<i>Exposure End</i>	<i>ExposureEnd</i>	<i>Counts the number of Exposure End events.</i>	
<i>Readout Start</i>	<i>ReadoutStart</i>	<i>Counts the number of Readout Start events.</i>	
<i>Readout End</i>	<i>ReadoutEnd</i>	<i>Counts the number of Readout End events.</i>	
<i>Frame Start</i>	<i>FrameStart</i>	<i>Counts the number of Frame Start events.</i>	
<i>Valid Frame Trigger</i>	<i>ValidFrameTrigger</i>	<i>Counts the number of Valid Frame Triggers.</i>	
<i>Frame Burst</i>	<i>FrameBurstEnd</i>	<i>Counts the number of multi-frame end triggers.</i>	
<i>CLHS In</i>	<i>LinkTrigger0</i>	<i>Counts the number of transitions on LinkTrigger0.</i>	
<i>Line 1</i>	<i>Line1</i>	<i>Counts the number of transitions on Line 1 (based on the counterIncrementalLineActivation feature setting) See Input Signals Electrical Specifications.</i>	
<i>Line 2</i>	<i>Line2</i>	<i>Counts the number of transitions on Line 2 (based on the counterIncrementalLineActivation feature setting)</i>	
<i>Invalid Frame Trigger</i>	<i>InvalidFrameTrigger</i>	<i>Counts the number of rejected frame triggers.</i>	
<i>Internal Clock</i>	<i>InternalClock</i>	<i>The counter increments on each microsecond tick of the device internal Clock.</i>	
<i>Timer 1 End</i>	<i>Timer1End</i>	<i>Counts the number of Timer 1 End events.</i>	
Counter Incremental Line Activation	counterIncrementalLineActivation	Selects the counter signal activation mode. The counter increments on the specified signal edge or level.	1.00 Beginner DFNC
<i>Rising Edge</i>	<i>RisingEdge</i>	<i>Increment the counter on the rising edge of the selected I/O Line.</i>	
<i>Falling Edge</i>	<i>FallingEdge</i>	<i>Increment the counter on the falling edge of the selected I/O Line.</i>	
<i>Any Edge</i>	<i>AnyEdge</i>	<i>Increment the counter on the falling or rising edge of the selected I/O Line.</i>	
Counter Duration	counterDuration	Sets the duration (or number of events) before the CounterEnd event is generated.	1.00 Beginner DFNC
Counter Reset Source	counterResetSource	Selects the signal source to reset the counter. After a reset the counter waits for the next countStartSource signal or event.	1.00 Beginner DFNC
<i>Off</i>	<i>Off</i>	<i>Reset on reception of the Reset Icommand.</i>	
<i>Exposure Start</i>	<i>ExposureStart</i>	<i>Reset on reception of the Exposure Start event.</i>	
<i>Exposure End</i>	<i>ExposureEnd</i>	<i>Reset on reception of the Exposure End event.</i>	
<i>Readout Start</i>	<i>ReadoutStart</i>	<i>Reset the counter on the reception of the Readout Start event.</i>	
<i>Readout End</i>	<i>ReadoutEnd</i>	<i>Reset the counter on the reception of the Readout End event.</i>	
<i>Frame Start</i>	<i>FrameStart</i>	<i>Reset on reception of the Frame Start.</i>	
<i>Valid Frame Trigger</i>	<i>ValidFrameTrigger</i>	<i>Reset on reception of the Valid Frame Trigger.</i>	
<i>Invalid Frame Trigger</i>	<i>InvalidFrameTrigger</i>	<i>Reset on reception of the Invalid Frame Trigger.</i>	
<i>FrameBurst End Trigger</i>	<i>FrameBurstEnd</i>	<i>Reset on reception of the Frame Burst end.</i>	
<i>Line 1</i>	<i>Line1</i>	<i>Reset counter on the specified transition on line 1. See Input Signals Electrical Specifications.</i>	
<i>Line 2</i>	<i>Line2</i>	<i>Reset counter on the specified transition on line 2.</i>	
<i>CLHS In</i>	<i>Link0Trigger</i>	<i>Reset on reception of CLHS In (Link0Trigger).</i>	
<i>Timer 1 End</i>	<i>Timer1End</i>	<i>Reset on reception of the Timer End.</i>	
<i>Counter 1 End</i>	<i>Counter1End</i>	<i>Reset on the reception of the Counter end.</i>	


Counter Reset Line Activation <i>Rising Edge</i> <i>Falling Edge</i> <i>Any Edge</i>	counterResetLineActivation <i>RisingEdge</i> <i>FallingEdge</i> <i>AnyEdge</i>	Specify the edge transition on the selected line that will reset the selected counter. <i>Reset counter on rising edge of the selected signal.</i> <i>Reset counter on falling edge of the selected signal.</i> <i>Reset counter on the falling or rising edge of the selected signal</i>	1.00 Beginner DFNC
Counter Value	counterValue	Read the current value of the selected counter.	1.00 Beginner DFNC
Counter Value at Reset	counterValueAtReset	Stores the counter value of the selected counter when it was reset by a trigger or by an explicit Counter Reset command.	1.00 Beginner DFNC
Counter Reset	counterReset	Resets the selected counter to zero. The counter starts immediately after the reset. To temporarily disable the counter, set the Counter Start Source feature to Off.	1.00 Beginner DFNC
Timer Selector <i>Timer 1</i>	timerSelector <i>Timer1</i>	Selects which timer to configure. <i>Timer 1 selected</i>	1.00 Beginner DFNC
Timer Mode <i>Off</i> <i>Active</i>	timerMode <i>Off</i> <i>Active</i>	Select the Timer mode. The selected Timer is Active or Disabled. When Disabled, the Timer can be configured. <i>The selected Timer is Disabled.</i> <i>The selected Timer is Enabled.</i>	1.00 Beginner DFNC
Timer Status <i>Timer Idle</i> <i>Timer Trigger Wait</i> <i>Timer Active</i> <i>Timer Completed</i>	timerStatus <i>TimerIdle</i> <i>TimerTriggerWait</i> <i>TimerActive</i> <i>TimerCompleted</i>	Returns the current state of the timer. <i>The timer is idle. The TimerStartSource feature is set to off.</i> <i>The timer is waiting for a start trigger.</i> <i>The timer is counting for the specified duration.</i> <i>The timer reached the TimerDuration count.</i>	1.00 Beginner DFNC
Timer Start Source <i>TimerReset Cmd</i> <i>Exposure Start</i> <i>ExposureEnd</i> <i>Readout Start</i> <i>Readout End</i> <i>Frame Start</i> <i>Valid Frame Trigger</i> <i>Frame Start</i> <i>Frame Burst End</i> <i>Line 1</i> <i>Line 2</i> <i>CLHS In</i> <i>Timer 1 End</i> <i>Counter 1 End</i>	timerStartSource <i>Off</i> <i>ExposureStart</i> <i>ExposureEnd</i> <i>ReadoutStart</i> <i>ReadoutEnd</i> <i>FrameStart</i> <i>ValidFrameTrigger</i> <i>FrameStart</i> <i>FrameBurstEnd</i> <i>Line1</i> <i>Line2</i> <i>LinkTrigger0</i> <i>Timer1End</i> <i>Counter1End</i>	Select the trigger source to start the timer. The Event Control section provides details and timing diagrams for the supported events. <i>Starts with the reception of the TimerReset Icommand.</i> <i>Start Timer on Exposure Start event.</i> <i>Start Timer on Exposure End event.</i> <i>Start Timer on Readout Start event.</i> <i>Start Timer on Readout End event.</i> <i>Start Timer on Frame Start event.</i> <i>Start Timer on Valid Frame Trigger.</i> <i>Start Timer on Frame Start event.</i> <i>Start Timer on Frame Burst End event.</i> <i>Start Timer on a transition of I/O Line 1 event.</i> <i>See Input Signals Electrical Specifications.</i> <i>Start Timer on a transition of I/O Line 2 event.</i> <i>Start Timer on a transition of CLHS In (LinkTrigger0).</i> <i>Start Timer on Timer End event.</i> <i>Start Timer on Counter 1 End event.</i>	1.00 Beginner DFNC
Timer Line Activation <i>Rising Edge</i> <i>Falling Edge</i> <i>Any Edge</i>	timerStartLineActivation <i>RisingEdge</i> <i>FallingEdge</i> <i>AnyEdge</i>	Select the trigger activation mode which starts the timer. <i>Starts counter on rising edge of the selected signal.</i> <i>Starts counter on falling edge of the selected signal.</i> <i>Starts counter on the falling or rising edge of the selected signal.</i>	1.00 Beginner DFNC
Timer Delay	timerDelay	Sets the duration (in microseconds) of the delay to apply at the reception of a Start Trigger before starting the timer.	1.00 Beginner DFNC

Timer Duration	timerDuration	Sets the duration (in microseconds) of the timer pulse.	1.00 Beginner DFNC
Timer Value	timerValue	Reads the current value (in microseconds) of the selected timer.	1.00 Beginner DFNC
Timer Reset	timerReset	Resets the timer to 0 while <i>timerStatus=TimerActive</i> . Timer then waits for the next <i>timerStartSource</i> event.	1.00 Beginner DFNC

Counter and Timer Group Block Diagram

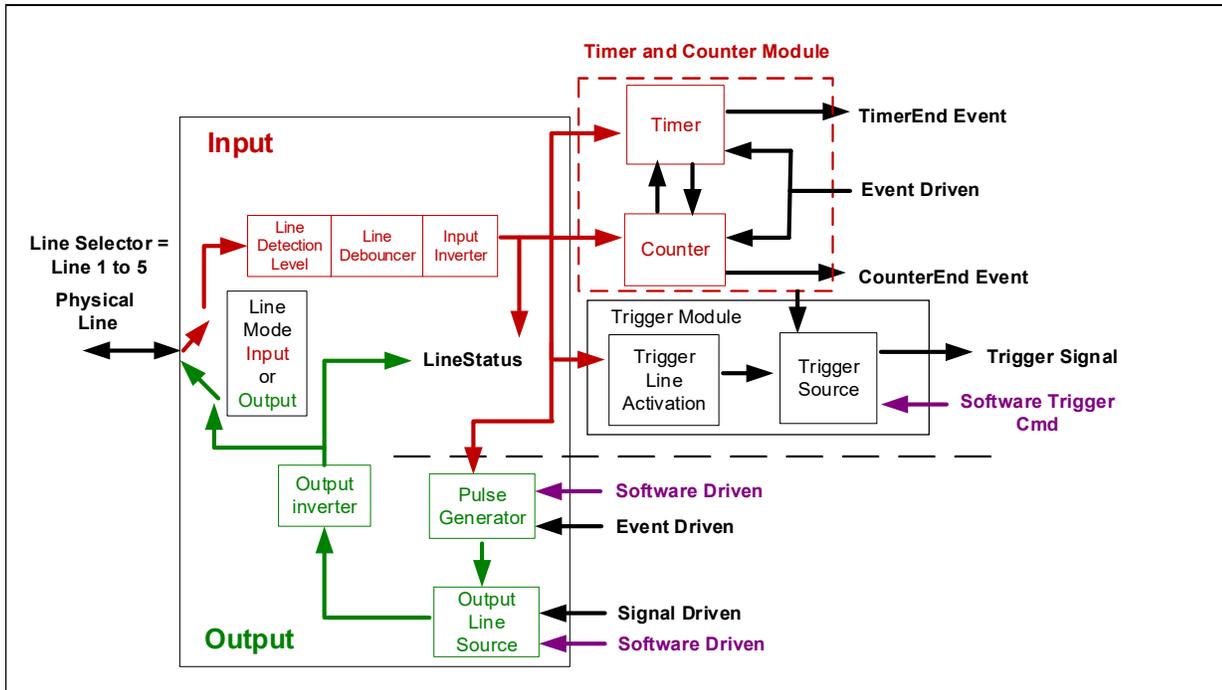


Example: Counter Start Source = OFF

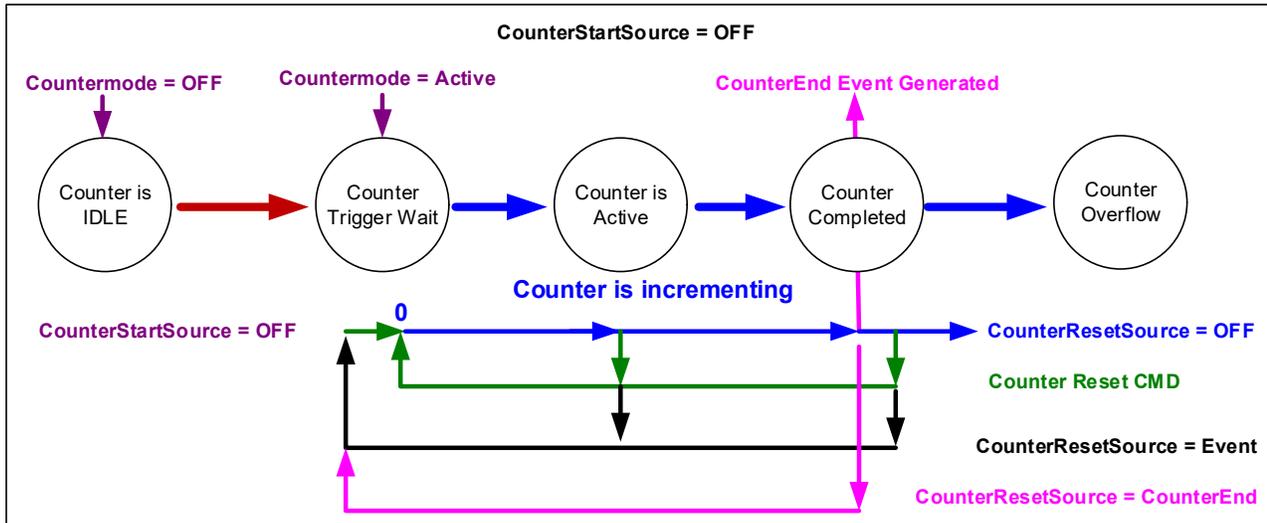


- The counter starts on the **counterReset Cmd**.
- The counter continues unless a new **counterReset Cmd** is received, which then restarts the counter at 00.
- When **Counter Reset Source = 'Event' or 'CounterEnd'** the counter is reset to 00 but does not restart counting, until the next **CounterReset Cmd**.

Example: Counter Start Source = CounterEnd (itself)

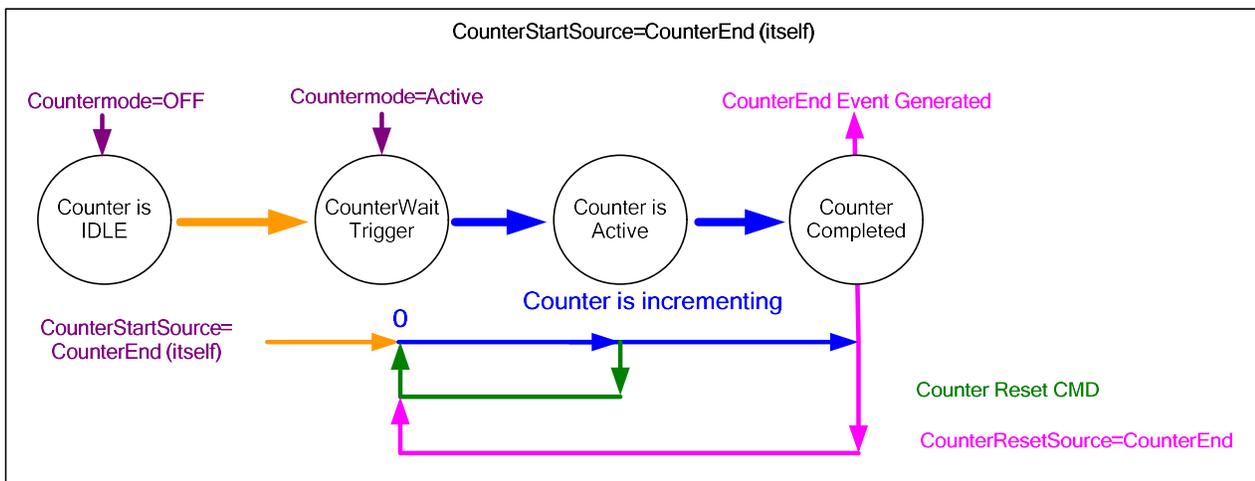


- Counter starts when Counter Mode is set to Active.
- A **Counter Reset CMD** will reset the counter to 00 and it then continues counting.
- **counterResetSource** must be set to **CounterEnd**. When the counterValue feature reaches the counterDuration value an event is generated and the counter is reset to 00, then continues.

Example: CounterStartSource = EVENT and Signal (Edge Base)

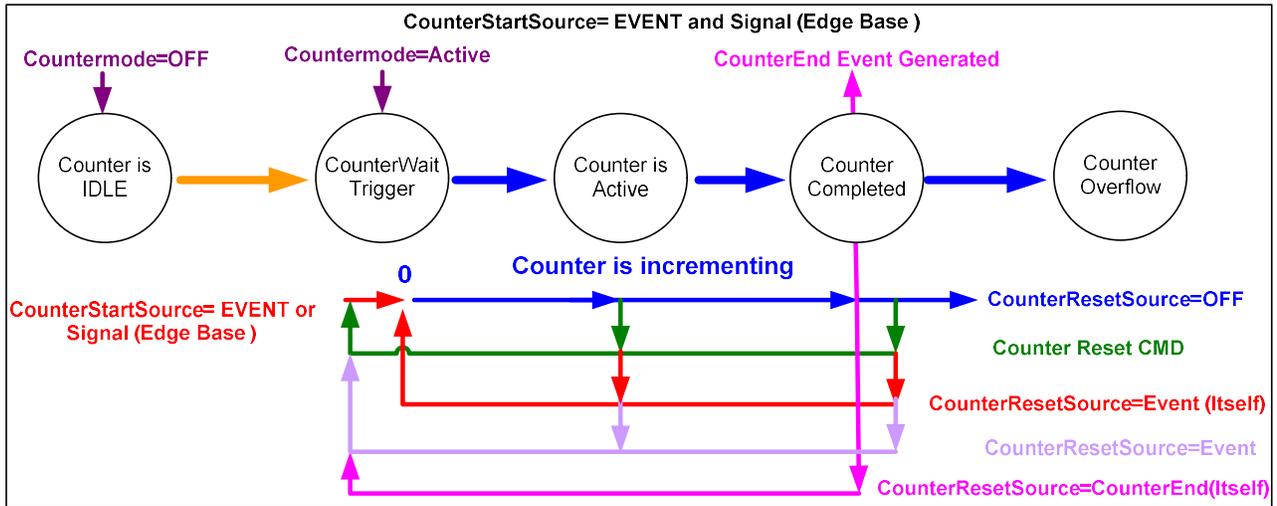

Example: CounterStartSource = Line (Edge Base) Example 2

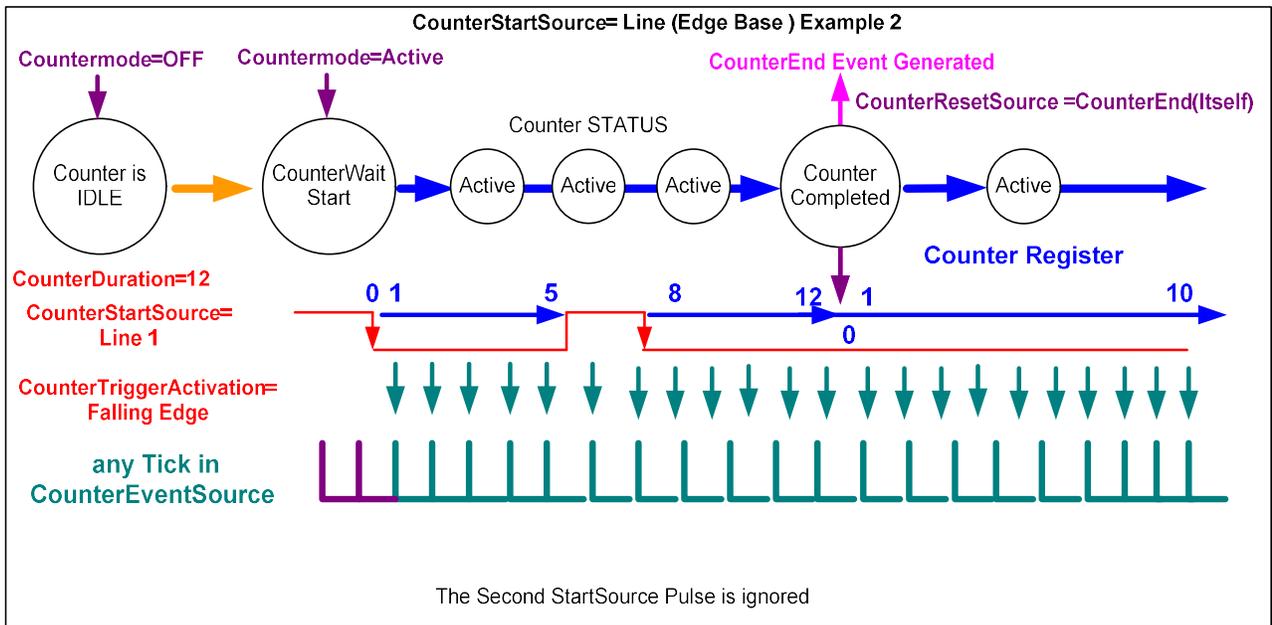

Cycling Preset Category

The Cycling Preset Mode Control category, as shown by CamExpert, has parameters used to configure the camera Cycling features. Cycling controls allow the user to configure a number of camera operational states and then have the camera automatically switch between states in real-time, on a frame-by-frame basis. Only the features programmed to change are updated when switching between camera states, thus ensuring immediate camera response. A setup example follows the feature table.

Category	Parameter	Value
Board	Cycling Preset Mode	Off
Basic Timing	Cycling Preset Count	1
Advanced Control	Cycling Preset Incremental Source	Valid Frame Trigger
External Trigger	Cycling Preset Repeater	1
Image Buffer and ROI	Cycling Preset Reset Source	Valid Frame Trigger
	Cycling Preset Reset	Not Enabled
Attached Camera - Xtium2-CLHS_PX8_1	Cycling Preset Current Active Set	1
Camera Information	Features Activation Selector	DigitalGain
Camera Control	Features Activation Mode	Off
Digital IO Control	Cycling Preset Selector	1
Data Processing	Gain	1.0
Image Format	Exposure Time	2000
Transport Layer	Exposure Delay	9
Acquisition and Transfer Control	ROI Selector	ROI 1
Device Counter and Timer Control	ROI Offset Y	0
Cycling Preset	Line Selector	Line 3
Metadata Controls	Output Line Source	Software Controlled
File Access Control	Output Line Value	Not Enabled
	<< Less	

Cycling Preset Mode Feature Description

Display Name	Feature & Values	Description	Device Version & View
Cycling Preset Mode	cyclingPresetMode	Sets the state of the Cycling Preset Mode.	1.02 Expert DFNC
<i>Off</i>	<i>Off</i>	<i>Disable the Cycling Preset Mode feature.</i>	
<i>Active</i>	<i>Active</i>	<i>Enable the Cycling Preset Mode feature.</i>	
Cycling Preset Count	cyclingPresetCount	Specifies the number of possible Presets available.	1.02 Expert DFNC

Cycling Preset Incremental Source	cyclingPresetIncrementalSource	Specifies the source that increments the currently active cycling preset.	1.02 Expert DFNC
<i>None</i>	<i>None</i>	<i>Feature cyclingPresetCurrentActiveSet is used to select the current active set.</i>	
<i>Valid Frame Trigger</i>	<i>ValidFrameTrigger</i>	<i>Increment on a Valid Frame Trigger.</i>	
<i>Counter 1 End</i>	<i>Counter1End</i>	<i>Increment on the end of Counter 1.</i>	
<i>Start of Frame</i>	<i>StartOfFrame</i>	<i>Increment on the Start of Frame event.</i>	
<i>Line2</i>	<i>Line2</i>	<i>Select Line 2 (and associated I/O control block) to use as the external increment source.</i>	
Cycling Preset Repeater	cyclingPresetRepeater	Specifies the required number of cycling preset increment events (generated by the Cycling Preset Incremental Source) to increment the index of the Cycling Preset Current Active Set. The difference with cyclingPresetRepeater is that this feature value is specific to the current cycling set specified by cP_PresetConfigurationSelector.	1.02 Expert DFNC
Cycling Preset Reset Source	cyclingPresetResetSource	Specifies the source that resets the currently active cycling preset to the first set.	1.02 Expert DFNC
<i>Valid Frame Trigger</i>	<i>ValidFrameTrigger</i>	<i>Reset when a Valid Frame Trigger occurs.</i>	
<i>Counter 1 End</i>	<i>Counter1End</i>	<i>Reset when Counter 1 ends.</i>	
<i>Acquisition End</i>	<i>EndOfAcquisition</i>	<i>Use End of Acquisition as the reset source. An End of Acquisition occurs on acquisition stop.</i>	
<i>Software</i>	<i>Software</i>	<i>Use a software command as the reset source.</i>	
Cycling Preset Reset	cyclingPresetResetCmd	Reset the position of the preset cycling to 1 and the count to 0.	1.02 Expert DFNC
Cycling Preset Current Active Set	cyclingPresetCurrentActiveSet	Specifies the currently active cycling preset.	1.02 Expert DFNC
Features Activation Selector	cP_FeaturesActivationSelector	Selects the feature to control by the cP_FeaturesActivationMode feature.	1.02 Expert DFNC
<i>Exposure Time</i>	<i>ExposureTime</i>	<i>The cP_FeaturesActivationMode feature controls the exposure time.</i>	
<i>Exposure Delay</i>	<i>ExposureDelay</i>	<i>The cP_FeaturesActivationMode feature controls the exposure delay.</i>	
<i>Output Line3</i>	<i>OutputLine3Control</i>	<i>The cP_FeaturesActivationMode feature controls output line3.</i>	
<i>Output Line4</i>	<i>OutputLine4Control</i>	<i>The cP_FeaturesActivationMode feature controls output line4.</i>	
<i>Output Line5</i>	<i>OutputLine5Control</i>	<i>The cP_FeaturesActivationMode feature controls output line5.</i>	
<i>Output Line6</i>	<i>OutputLine6Control</i>	<i>The cP_FeaturesActivationMode feature controls output line6.</i>	
<i>Multiple ROI</i>	<i>MultiROI</i>	<i>The cP_FeaturesActivationMode feature controls the ROI positions. Only OffsetY is cycled, the height of each ROI is from multi ROI height on Image Format page. Smaller ROI id has smaller OffsetY Enable MultiROI mode to activate cycling MultiROI.</i>	
<i>DigitalGain</i>	<i>DigitalGain</i>	<i>The cP_FeaturesActivationMode feature controls the digital gain.</i>	
Features Activation Mode	cP_FeaturesActivationMode	Enable the selected feature to be part of the cycling. When activating the selected feature, this will automatically set the corresponding standard camera feature to read only.	1.02 Expert DFNC
<i>Off</i>	<i>Off</i>	<i>Exclude the selected feature from the cycling.</i>	
<i>Active</i>	<i>Active</i>	<i>Include the selected feature in the cycling.</i>	
Cycling Preset Selector	cP_PresetConfigurationSelector	Selects the Cycling Preset to configure its feature.	1.02 Expert DFNC

Gain	cP_DigitalGain	Sets the selected gain as an amplification factor applied to the image. This gain is applied when the current Cycling index is active.	1.02 Expert DFNC
Exposure Time	cP_ExposureTime	Sets the exposure time, in milliseconds. Applicable only when the Exposure Mode feature is set to Timed. This setting will be applied when the current Cycling index occurs.	1.02 Expert DFNC
Exposure Delay	cP_ExposureDelay	Sets the exposure delay (in microseconds) for the selected set.	1.02 Expert DFNC
ROI Selector	cP_MultiROISelector	Select an ROI (Region of Interest) when Multiple ROI Mode is enabled. Selector range is from 1 to the Multiple ROI Count Vertical value, or maximum 8 if Multiple ROI Count Vertical is greater than 8. The height of each ROI is from Multi ROI Height on Image Format page. Smaller ROI ID has smaller OffsetY.	1.02 Expert DFNC
ROI Offset Y	cP_MultiROIOffsetY	Vertical offset (in pixels) from the origin to the selected ROI (Region of Interest).	1.02 Expert DFNC
Line Selector	cP_LineSelector	Cycling Preset Line Selector.	1.02 Expert DFNC
Line 3	Line3	Index of the physical line and associated I/O control block to use. Pin 6 is the Output Signal and Pin 4 is the common output power on the I/O connector.	
Line 4	Line4	Index of the physical line and associated I/O control block to use. Pin 8 is the Output Signal and Pin 4 is the common output power on the I/O connector.	
Line 5	Line5	Index of the physical line and associated I/O control block to use. Pin 9 is the Output Signal and Pin 4 is the common output power on the I/O connector.	
Line 6	Line6	Index of the physical line and associated I/O control block to use. Pin 10 is the Output Signal and Pin 4 is the common output power on the I/O connector.	
Output Line Source	cP_OutputLineSource	Selects what to output on the selected output line.	1.02 Expert DFNC
Off	Off	Line output is disabled (Tri-State) or Open with Optocoupled output.	
Pulse On: Start of Exposure	PulseOnStartofExposure	Generate a pulse on the ExposureStart event.	
Pulse On: End of Timer 1	PulseOnEndofTimer1	Generate a pulse on the end of timer1.	
Pulse On: End of Counter 1	PulseOnEndofCounter1	Generate a pulse on the end of Counter1.	
Pulse On: Input 1	PulseOnInput1	Generate a pulse on the Input Signal 1 event.	
Pulse On: Input 2	PulseOnInput2	Generate a pulse on the Input Signal 2 event.	
Software Controlled	SoftwareControlled	The OutputLineValue feature changes the state of the output.	
Pulse On: CLHS In	PulseOnLinkTrigger0	Generate a pulse on LinkTrigger0 signal.	
Exposure Active	ExposureActive	Generate the Exposure Active state on specific output.	
Output Line Value	cP_OutputLineValue	Cycling Preset Output Line Value.	1.02 Expert DFNC
Active	Active	Active sets the output circuit to closed.	
Inactive	Inactive	Inactive sets the output circuit to open.	

Using Cycling Presets—a Simple Example

As presented in this category's overview, the cycling preset features allow setting up camera configurations that can change dynamically and repeatedly, with minimum overhead. The features that change along with the trigger for the feature change are preprogrammed in the camera. Additionally, a set of preset features can be updated while the camera is acquiring with a different preset. Such dynamic feature changes allow applications to perform tracking algorithms.

The following example describes a simple cycling sequence (using free running acquisitions) with exposure change steps that will repeat until stopped by the user. This example uses the Spera CamExpert tool to set features and test the sequence.

Multi-Exposure Cycling Example Setup

In the Camera Control category, set the following features as follows:

- Acquisition Frame Rate: 4.0
- Exposure Time: 1000 μ s (somewhat short).

In the Cycling Preset category, set the following features as follows:

- Cycling Preset Mode: *Active*. This feature enables the Cycling Preset Module.
- Cycling Preset Count: 4. This represents the number of presets which will be configured and used.
- Cycling Preset Incremental Source: *Start Of Frame*. This event will be used to increment the cycling presets index, and is a logical choice in a free-running acquisition setup.
- Cycling Preset Repeater: 4. This represents the number of incremental source events to count before switching to the next preset. In this example we are counting *Start Of Frame* events, thus a value of 4 (with a test setup of 4 fps) will switch preset every 1 second.
- (Optional) Cycling Preset Reset Source: *Acquisition End*. This feature defines the event that will reset the preset index back to 1. In this example, setting the feature to *Acquisition End* returns the cycling preset index to the start (1) when the Acquisition Stop feature is clicked in CamExpert to stop the acquisition.
- Features Activation Selector: *Exposure Time*.
- Features Activation Mode: *Active*. The *Exposure Time* field now controls the camera exposure time. The primary exposure time field in the Camera Control Category is now indicating a read only field.
- Cycling Preset Selector: 1.
- Exposure Time: leave as is. The feature shows the last exposure time used by the camera (before cycling was enabled, namely 1000 μ s).
- Cycling Preset Selector: 2.
- Exposure Time: higher value than the previous setting. This will increase acquisition brightness.
- Repeat for Cycling Preset Selector 3 and 4, each with a longer exposure.

Test the Example

- With 4 different exposure times saved in four presets, click the CamExpert **Grab** button to start the cycling free-running acquisition.
- The CamExpert live display window will show a live grab of 4 fps, where each second shows a step increase in exposure, which then returns to the first exposure after 4 seconds, cycling continuously until stopped by the user.


Cycling Reset Timing Details

This section describes the cycling function with two cycling feature configurations. These configurations (or cases) are dependent on the cycling preset increment source as follows:

- Internal Synchronous Increment:** the preset increment source is either a Start of Frame or Valid Frame Trigger event (cyclingPresetIncrementalSource = *StartOfFrame* or *ValidFrameTrigger*).
- External Asynchronous Increment:** the preset increment source is either a Counter 1 End event, a Line2 signal, or None (cyclingPresetIncrementalSource = *Counter1End* or *Line2* or *cyclingPresetCurrentActiveSet*).


Case 1: Cycling with Internal Synchronous Increment

With an Internal Synchronous Cycling Increment, a cycling reset command will execute on the next cycling increment event.

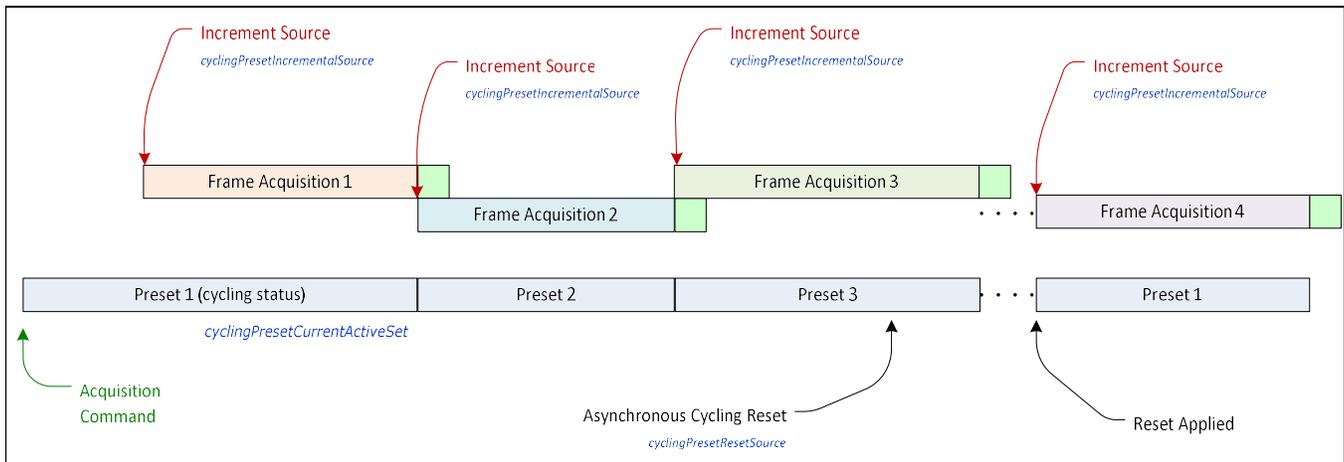

Case 2: Cycling with External Asynchronous Increment

With an External Asynchronous Cycling Increment, a cycling reset command executes immediately and sets the cycling preset to set number 1.

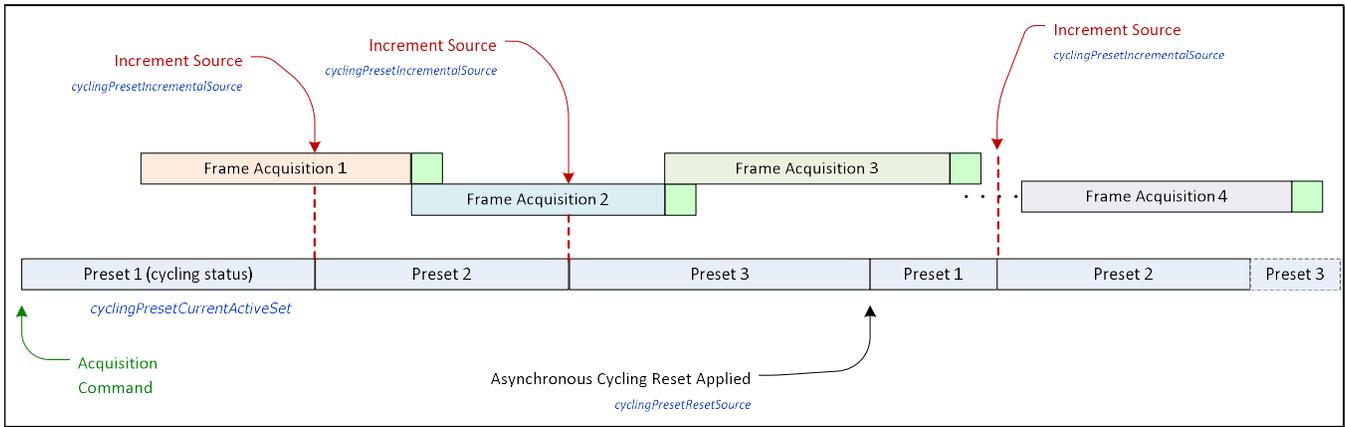

Using Cycling Presets with Output Controls


The following graphic shows a Cycling Preset function setup where a two-stage setup performs exposures of different length and additionally provides an output pulse at the start of each exposure.

As an example, by using both output lines, this setup can trigger two separate light strobes of different wavelengths. This dual exposure sequence example is controlled by a single external trigger.

Feature Settings for this Example

Below are listed key features for this setup. Other features will be as required by the user.

- **I/O Controls:**
 - TriggerSelector = FrameBurstStart
 - TriggerMode = On
 - triggerFrameCount = 2
- **Cycling Preset**
 - cyclingPresetMode = Active
 - cyclingPresetCount = 2
 - cyclingPresetIncrementalSource = StartOfFrame
 - cP_FeaturesActivationSelector = ExposureTime
 - cP_FeaturesActivationMode = Active (plus set required exposure for each cycling preset)
 - cP_LineSelector = Line3 (for preset 1) and Line4 (for preset 2)
 - cP_OutputLineSource = PulseOnStartofExposure (line3–preset 1, line4–preset 2)

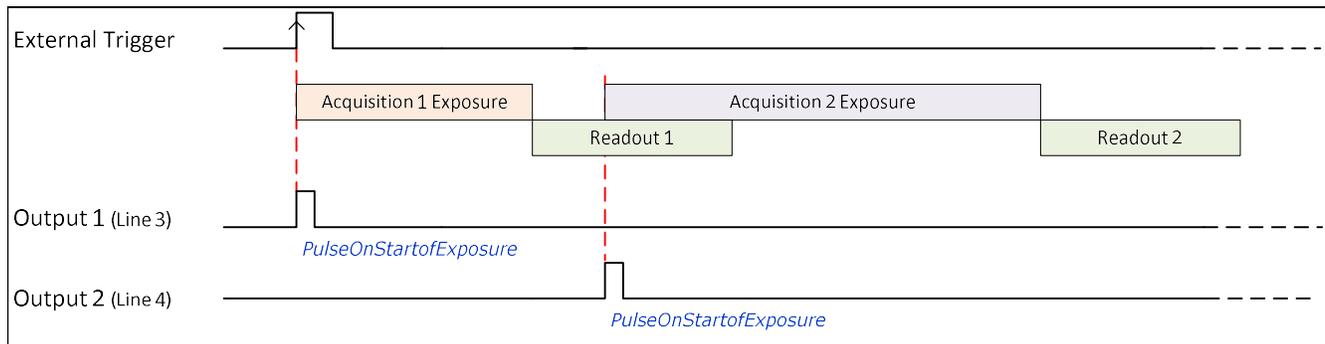

Cycling Mode Constraints with Changing ROIs


The Cycling Preset Mode features support changing ROIs from one preset to the next. An ROI in this case refers to a single acquisition area which is a subset of the complete image frame.

The initial position and size of the ROIs (i.e., features ROI Offset Y, ROI Height) are setup via the Image Format category, but may be overridden in the Cycling Preset category.

- During cycling, the image width, the height of each ROI, and the number ROIs remain same (Width, ROI Height, and ROI Count Vertical, respectively). The only feature that may change from one preset to the next is the ROI Offset Y feature of each ROI.
- The number of ROIs to be cycled is defined by the ROI Count Vertical value in the Image Format category, up to a maximum of 8.
- The Multiple ROI Mode in the Image Format category must be set to *Active* to use cycling presets with Multiple ROI (Features Activation Selector = *Multiple ROI*). It will become unavailable when the Features Activation Mode is set to *Active*, and will be made available again only when the Features Activation Mode is set to *Off*.
- The ROI Offset Y values can be changed for each cycling preset. To do so, the following features should be set as indicated:

Category	Feature	Value
Image Format	Multiple ROI Mode	Active
Cycling Preset	Features Activation Selector	Multiple ROI
Cycling Preset	Features Activation Mode	Active
Cycling Preset	Cycling Preset Mode	Off


- ROIs cannot overlap in a preset. If a change causes an overlap to occur, the ROI Offset Y value will be automatically adjusted to eliminate it. In the example below, if modifying the Offset Y of ROI_2 causes an overlap with ROI_3, then the Offset Y value of ROI_3 will be adjusted.

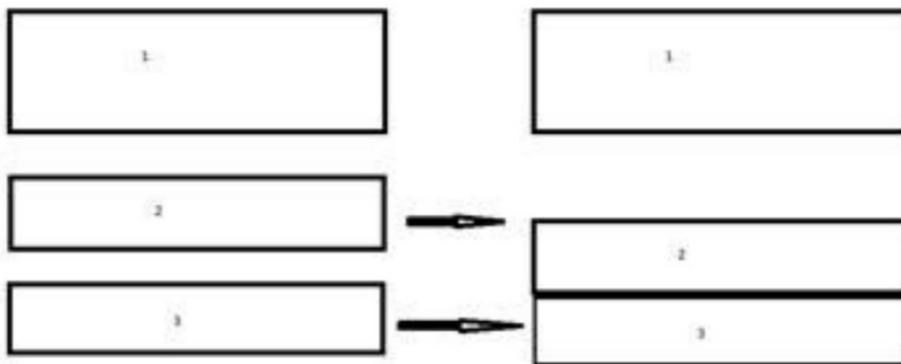

Metadata Controls Category

The Metadata Controls category, as shown by CamExpert, groups parameters used to configure the inclusion of various metadata (referred to as chunk data in GenApi) in the payload of the image.

Note that metadata is only available in 8-bit mode. Also, if an ROI is defined, the horizontal ROI must be at least 416 columns (pixels) wide.

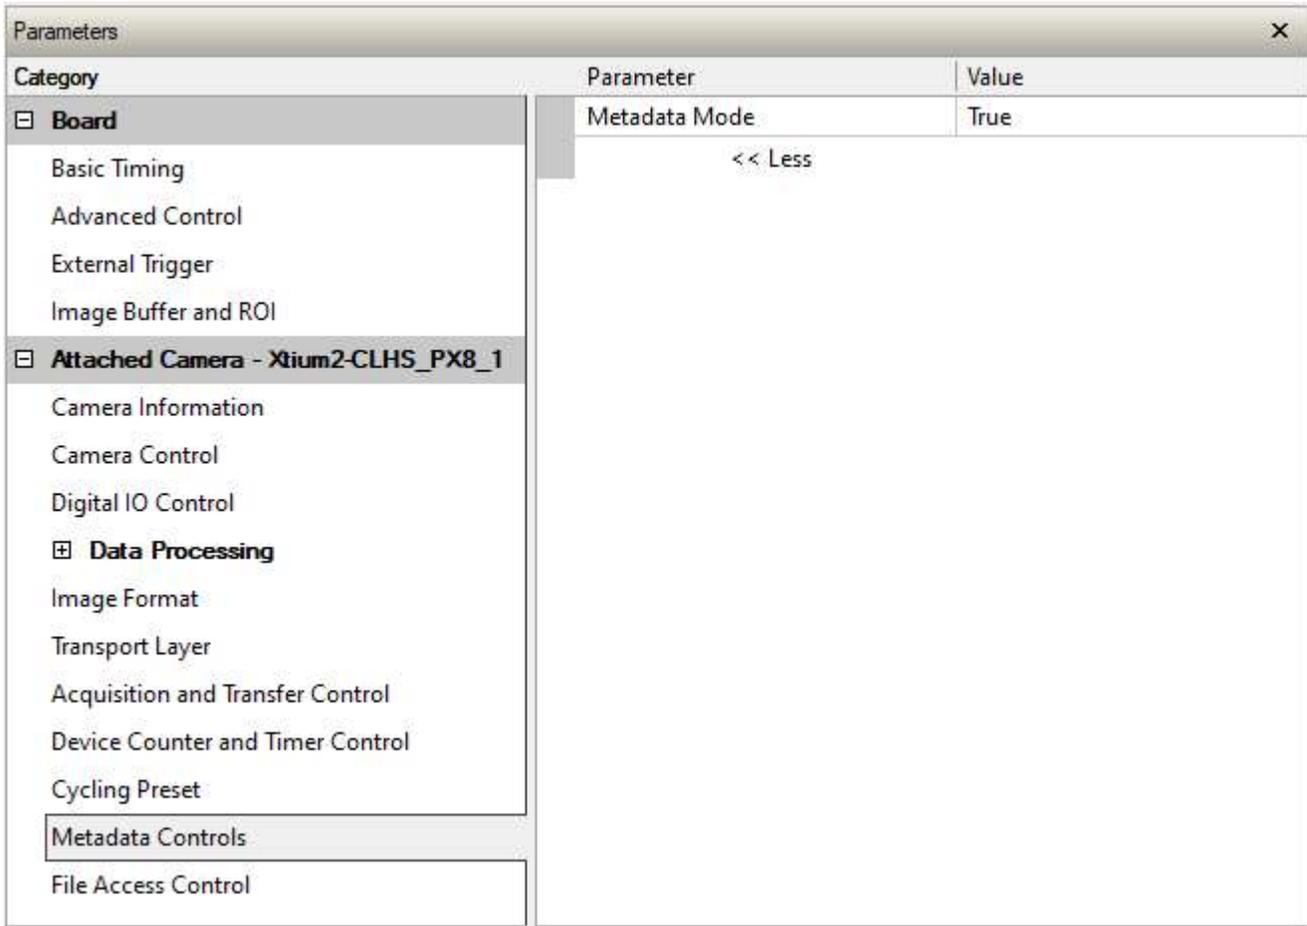


Metadata Controls Feature Description


Display Name	Feature & Values	Description	Device Version & View
Metadata Mode	ChunkModeActive	Activates the inclusion of chunk data in the payload of the image.	1.02 Guru

Extracting Metadata Stored in a Sapera Buffer

For Sapera LT developers, the SapMetadata class can be used to access metadata. The metadata location is always the beginning of the last line of the image.

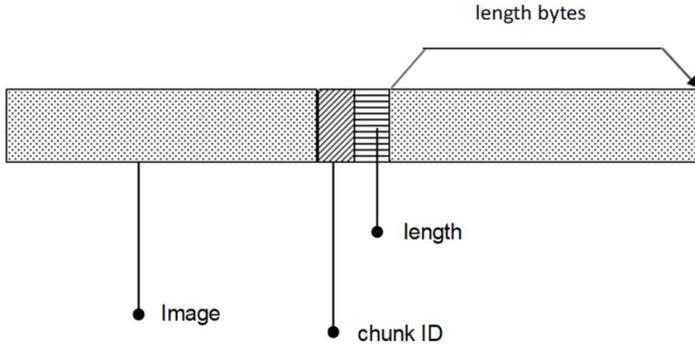

Metadata is ordered as follows:

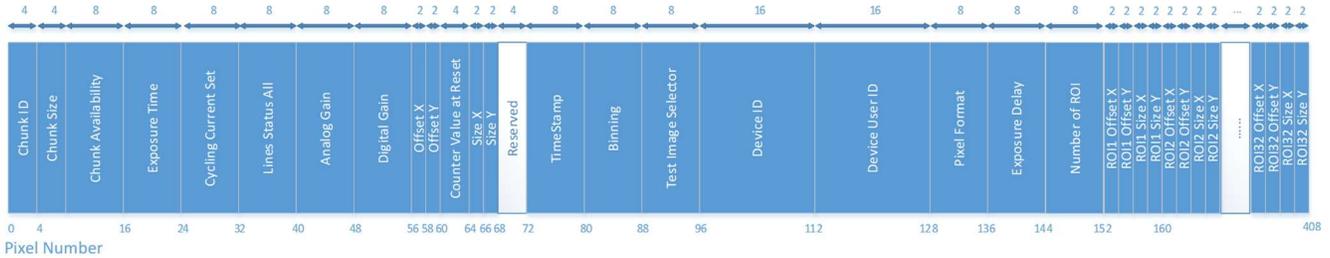

The Chunk ID, Chunk Size and Chunk Availability fields are always present in the metadata; all the other fields are optional.

Metadata Structure

The metadata currently contains the following values, in this order.

Type	Value	Description	Available Bit
unsigned int	Chunk ID	The Chunk ID is hardcoded to 0xCD000002 when pixels are read in reverse order (3 – 0).	Always available.
unsigned int	Chunk Size	The Chunk Size is currently 400. This value is hardcoded in pixel 7.	Always available.
unsigned long long	Chunk Availability	Determines the availability of metadata. For bits [1:31]: 0: Metadata not available. 1: Metadata available. Refer to the Metadata Availability section for information on the bit field structure.	Always available (bit 0 not used)
unsigned long long	Exposure Time	Exposure time, in μ s.	1
unsigned long long	Cycling Current Set	Cycling current set.	2
unsigned long long	Line Status All	The line status for available lines is represented as a bitfield, with 0 = low and 1 = high. bit0: GPIO bit1: GPI1	6

Type	Value	Description	Available Bit
		bit2: GPO0 bit3: GPO1 bit4: GPO2 bit5: GPO3 bit6: GPO4 bit7: CLHS Trigger	
unsigned long long	Analog Gain	Analog gain. Values returned in units of 0.1 gain. For example, 30 = 3.0.	8
unsigned long long	Digital Gain	Digital gain, as raw gain.	4
unsigned long long	Factory Gain	Factory gain, as raw gain.	4
unsigned short	Offset X	Offset X, in pixels.	10
unsigned short	Offset Y	Offset Y, in pixels	
unsigned int	Counter Value at Reset	Counter1 value at reset.	16
unsigned short	Width	Image width (size X), in pixels.	11
unsigned short	Height	Image height (size Y), in pixels.	
unsigned int	Reserved	Not used.	
unsigned long long	Timestamp	Timestamp (in microseconds) of the start of the frame's acquisition, as identified by the camera's internal Timestamp clock.	12
unsigned long long	Binning	Binning is coded using the first byte (pixel 80): Bits [0:3]: binning horizontal Bits [4:7]: binning vertical For example, no binning is indicated by 1 in horizontal and 1 in vertical: 0001 0001 (decimal = 17)	14
unsigned long long	Test Image Selector	Test pattern image. Possible values are: 255: Off 0: GreyHorizontalRamp 1: GreyVerticalRamp 9: GreyDiagonalRampMoving	28
unsigned char [16]	Serial Number	ASCII codes for device serial number.	29
unsigned char [16]	Device User ID	ASCII codes for Device User ID.	30
unsigned long long	Pixel Format	Pixel format. Possible values are: 0x01080001: Mono8 0x01100003: Mono10	31
unsigned long long	Exposure Delay	Exposure delay. If not used, the default value 10 μ s is returned.	15
unsigned int	Reserved	Not used.	
unsigned int	Reserved	Not used.	
unsigned long long	Number of ROIs	The total number or ROIs	27
unsigned short	ROI1 Offset X	ROI1 Offset X, in pixels.	
unsigned short	ROI1 Offset Y	ROI1 Offset Y, in pixels.	
unsigned short	ROI1 Size X	ROI1 Size X, in pixels.	
unsigned short	ROI1 Size Y	ROI1 Size Y, in pixels.	
unsigned short	
unsigned short	ROI32 Offset X	ROI32 Offset X, in pixels.	
unsigned short	ROI32 Offset Y	ROI32 Offset Y, in pixels.	
unsigned short	ROI32 Size X	ROI32 Size X, in pixels.	
unsigned short	ROI32 Size Y	ROI32 Size Y, in pixels.	

Metadata Availability

The Metadata Availability field (pixels [7:15]) determines which metadata is available, as a bit field. When a field is present, the corresponding bit is set to 1 in the availability bit field.



When a field is not present (availability set to 0), it is removed from the structure.

Feature	Mask (Hex)	Available bit
Exposure Time	2	1
Cycling Current Set	4	2
FFC Current Active Set	8	3
LUT Current Active Set	10	4
Test Image User-Defined Index	20	5
Line Status All	40	6
Iris Aperture Control	80	7
Gain (Analog Gain and Digital Gain)	100	8
Black Level	200	9
Image Offset (Offset X and Offset Y)	400	10
Image Size	800	11
Timestamp	1000	12
Frame ID	2000	13
Binning	4000	14
Exposure Delay	8000	15
Counter Value at Reset	10000	16
Multi-ROI	8000000	27
Test Image Selector	10000000	28
Serial Number	20000000	29
Device User ID	40000000	30
Pixel Format	80000000	31

Digital Gain (raw)

Digital gain is expressed in the metadata in its raw format. To convert from this raw format to an actual gain value use this formula:

$$Gain = \frac{\text{Digital Gain (raw)}}{\text{Factory Gain (raw)}}$$

Example: a digital gain raw value of 4402 and a factory gain raw value of 2201 would translate to an actual gain of 2.

Analog Gain (raw)


Analog gain is expressed in the metadata in its raw format. To convert from this raw format to an actual gain value use this formula:

$$\text{Analog Gain} = \frac{\text{Analog Gain (raw)}}{10}$$

Example: an analog gain raw value of 20 would translate to an actual gain of 2.

File Access Control Category

The File Access control in CamExpert allows the user to quickly upload various data files to the connected Falcon4 device. The supported data files are for firmware updates and other types.

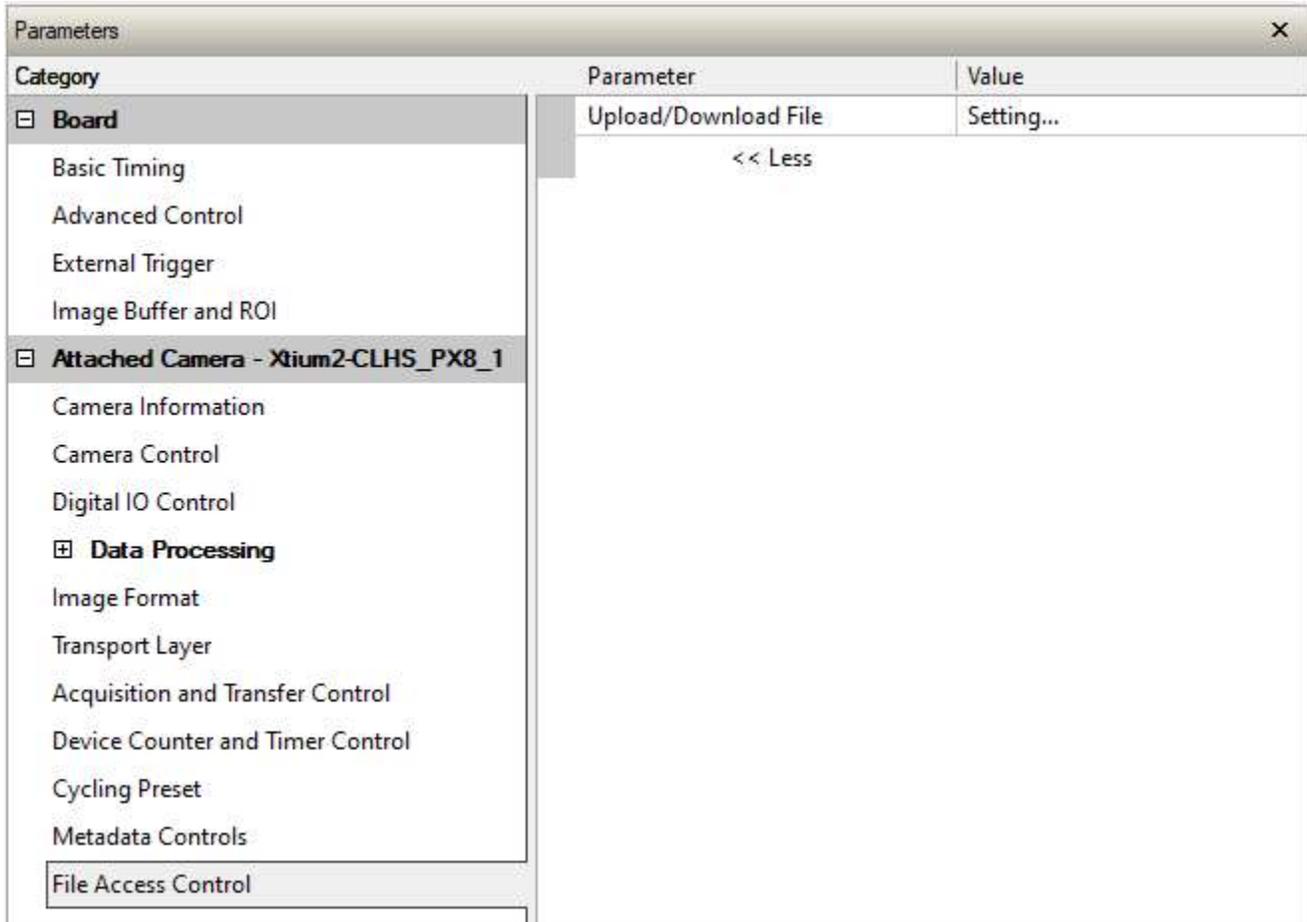


File Access Control Feature Descriptions

Display Name	Feature & Values	Description	Device Version & View
File Selector	FileSelector	List of device files.	1.00 Guru
<i>All Firmware</i>	<i>Firmware1</i>	<i>All Firmware - FPGA code, microcode, XML, and Start-up Script.</i>	
<i>Last Saved Image</i>	<i>SavedImage</i>	<i>Last saved image.</i>	
<i>Factory settings</i>	<i>UserSet0</i>	<i>Set the camera settings to factory defaults.</i>	
<i>User settings 1</i>	<i>UserSet1</i>	<i>User settings set 1.</i>	
<i>User settings 2</i>	<i>UserSet2</i>	<i>User settings set 2.</i>	
<i>Factory Defective Pixel Map</i>	<i>BadPixelCoordinate0</i>	<i>Select the Factory Defective Pixel Map.</i>	
<i>User Defective Pixel Map</i>	<i>BadPixelCoordinate1</i>	<i>Select the User Defective Pixel Map.</i>	

<i>LUT</i> <i>User Shading Coefficients 1</i>	<i>LUT</i> <i>ShadingCoefficients1</i>	<i>LUT.</i> <i>Lens Shading coefficients set 1.</i>	
File Operation Execute	FileOperationExecute	Executes the operation selected by File Operation Selector on the selected file.	1.00 Guru
File Open Mode <i>Read</i> <i>Write</i>	FileOpenMode <i>Read</i> <i>Write</i>	Selects the access mode used to open a file on the device. <i>Select READ only open mode.</i> <i>Select WRITE only open mode.</i>	1.00 Guru
File Access Offset	FileAccessOffset	Controls the file Offset where the read or write operation will be perform.	1.00 Guru
File Access Length	FileAccessLength	The number of bytes to transfer between the file and the FileAccessBuffer.	1.00 Guru
File Access Buffer	FileAccessBuffer	Defines the intermediate access buffer that allows the exchange of data between the device file storage and the application.	1.00 Beginner
File Size	FileSize	Represents the size of the selected file in bytes.	1.00 Beginner
File Operation Selector <i>Open</i> <i>Close</i> <i>Read</i> <i>Write</i>	FileOperationSelector <i>Open</i> <i>Close</i> <i>Read</i> <i>Write</i>	Selects the target operation for the selected file in the device. <i>Select the Open operation – executed by FileOperationExecute.</i> <i>Select the Close operation – executed by FileOperationExecute</i> <i>Select the Read operation – executed by FileOperationExecute.</i> <i>Select the Write operation – executed by FileOperationExecute.</i>	1.00 Guru
File Operation Status <i>Success</i> <i>Invalid Parameter</i> <i>Write Protect</i> <i>File Invalid</i> <i>File Not Open</i> <i>File Too Big</i>	FileOperationStatus <i>Success</i> <i>InvalidParameter</i> <i>WriteProtect</i> <i>FileInvalid</i> <i>FileNotOpen</i> <i>FileTooBig</i>	Returns the status of the last file operation. <i>The last file operation has completed successfully.</i> <i>The last file operation has completed unsuccessfully because of an invalid parameter.</i> <i>The last file operation has completed unsuccessfully because the file is read-only.</i> <i>The last file operation has completed unsuccessfully because the selected file in not present in this camera model.</i> <i>The last file operation has completed unsuccessfully because the selected file has not been opened.</i> <i>The last file operation has completed unsuccessfully because the file is larger than expected.</i>	1.00 Guru
File Operation Result	FileOperationResult	The number of successfully read/written bytes during the last operation.	1.00 Beginner
Save Last Image to Flash	saveLastImageToFlash	Command that saves the last acquired image to camera flash memory. Use the file transfer feature to read the image from camera.	Invisible

Updating Firmware via File Access in CamExpert

- Click **Setting** next to the Upload/Download File parameter. The File Access Control dialog opens.

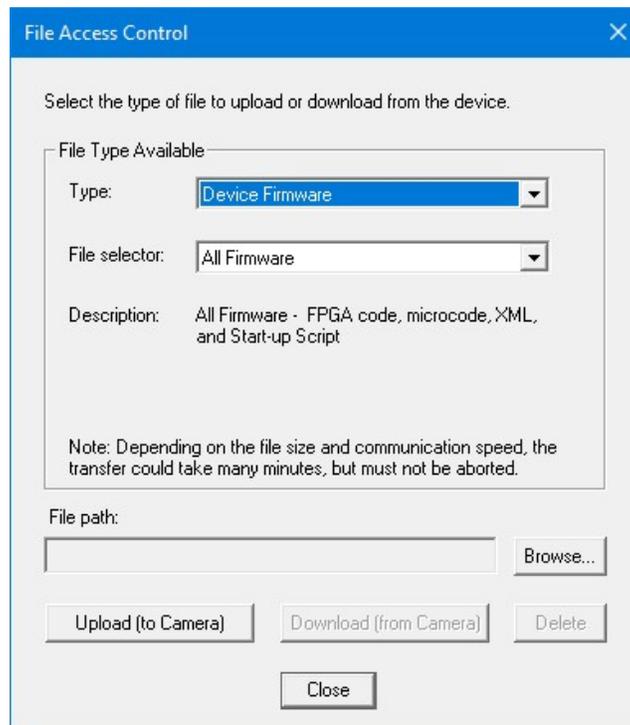

- From the **Type** list, select the file type to upload to the camera, in this case *Device Firmware*.
- From the **File Selector** list, select *All Firmware*.
- Click **Browse** to select the specific file from the system drive or from a network location.
- Click **Upload (to Camera)** to transfer the file to the camera.
- Reset the Falcon4 when prompted.

Implementing Trigger-to-Image Reliability

Overview

In a complex imaging system, a lot can go wrong at all points – from initial acquisition, to camera processing, to data transmission. Teledyne DALSA provides features, events, and I/O signals that provide the system designer with the tools to qualify the system in real time.

The Teledyne DALSA website provides general information, FAQ, and White Paper downloads about the Trigger-to-Image Reliability (T2IR) framework in hardware and Sapera LT software SDK.

<http://www.teledynedalsa.com/imaging/knowledge-center/appnotes/t2ir/>

T2IR with Falcon4-CLHS

Benefits for imaging systems include:

- Makes system more predictable
- Prevents many errors before they happen
- Manage system exceptions in controlled manner
- Provides system debugging and tracing
- Reduce downtime

The Falcon4 provides a number of features for system monitoring:

- Built-in Self-Test on power-up and reset after firmware change
- Internal Temperature Reporting
- In Camera Event Status Flags
- Invalid External Trigger
- Image Lost

Features for T2IR Monitoring

The following table presents some of the camera features a developer can use for T2IR monitoring. The output line signals would interface to other external devices.

Camera Status Monitoring	
Refresh BIST	deviceBIST
Device Built-In Self Test Status	deviceBISTStatus
Device Version	DeviceVersion
Firmware Version	DeviceFirmwareVersion
Manufacturer Part Number	deviceManufacturerPartNumber
Manufacturer Info	DeviceManufacturerInfo
Acquisition and Triggers	
Valid Frame Trigger	ValidFrameTrigger
Invalid Frame Trigger	InvalidFrameTrigger

Technical Specifications

Both 2D and 3D design drawings are available for download from the Teledyne DALSA web site [<https://www.teledynedalsa.com/en/products/imaging/cameras/falcon4-clhs/>].

Falcon4-CLHS Identification and Mechanical

Identification Label

	<p>Falcon4 cameras have an identification label applied to the bottom side, with the following information:</p> <ul style="list-style-type: none">Model Part NumberSerial numberCalibration dateBarcode
---	--

Additional Mechanical Notes


	<p>For information on lens requirements see Choosing a Lens with the Correct Image Circle. Each camera side has two mounting holes in identical locations, which provide good grounding capabilities. Overall height or width tolerance is $\pm 0.05\text{mm}$.</p>
--	--

Temperature Management


Falcon4-CLHS cameras are designed to optimally transfer internal component heat to the outer metallic body. If the camera is free standing (that is, not mounted) it will be hot to the touch.

Basic heat management is achieved by mounting the camera onto a metal structure via its mounting screw holes. Heat dissipation is improved by using thermal paste between the camera body (not the front plate) and the metal structure plus the addition of a heatsink structure.

Mechanical Specifications with M42 Mount

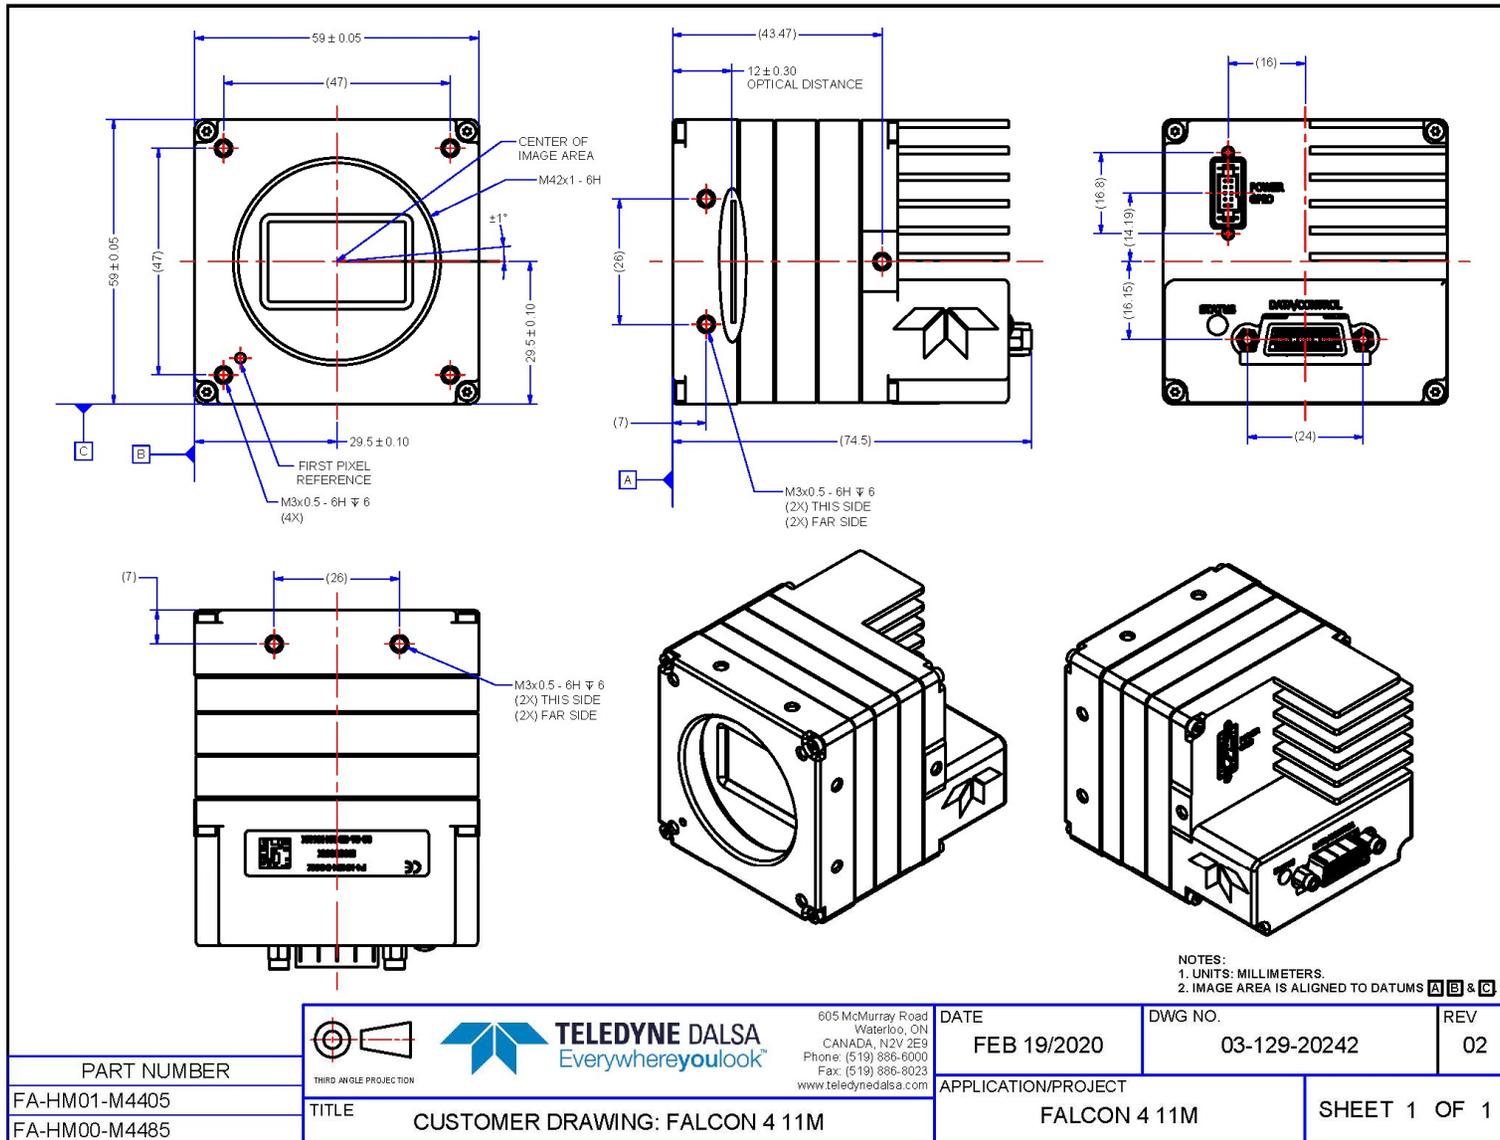

Falcon4 11M, models M4400 and M4480.

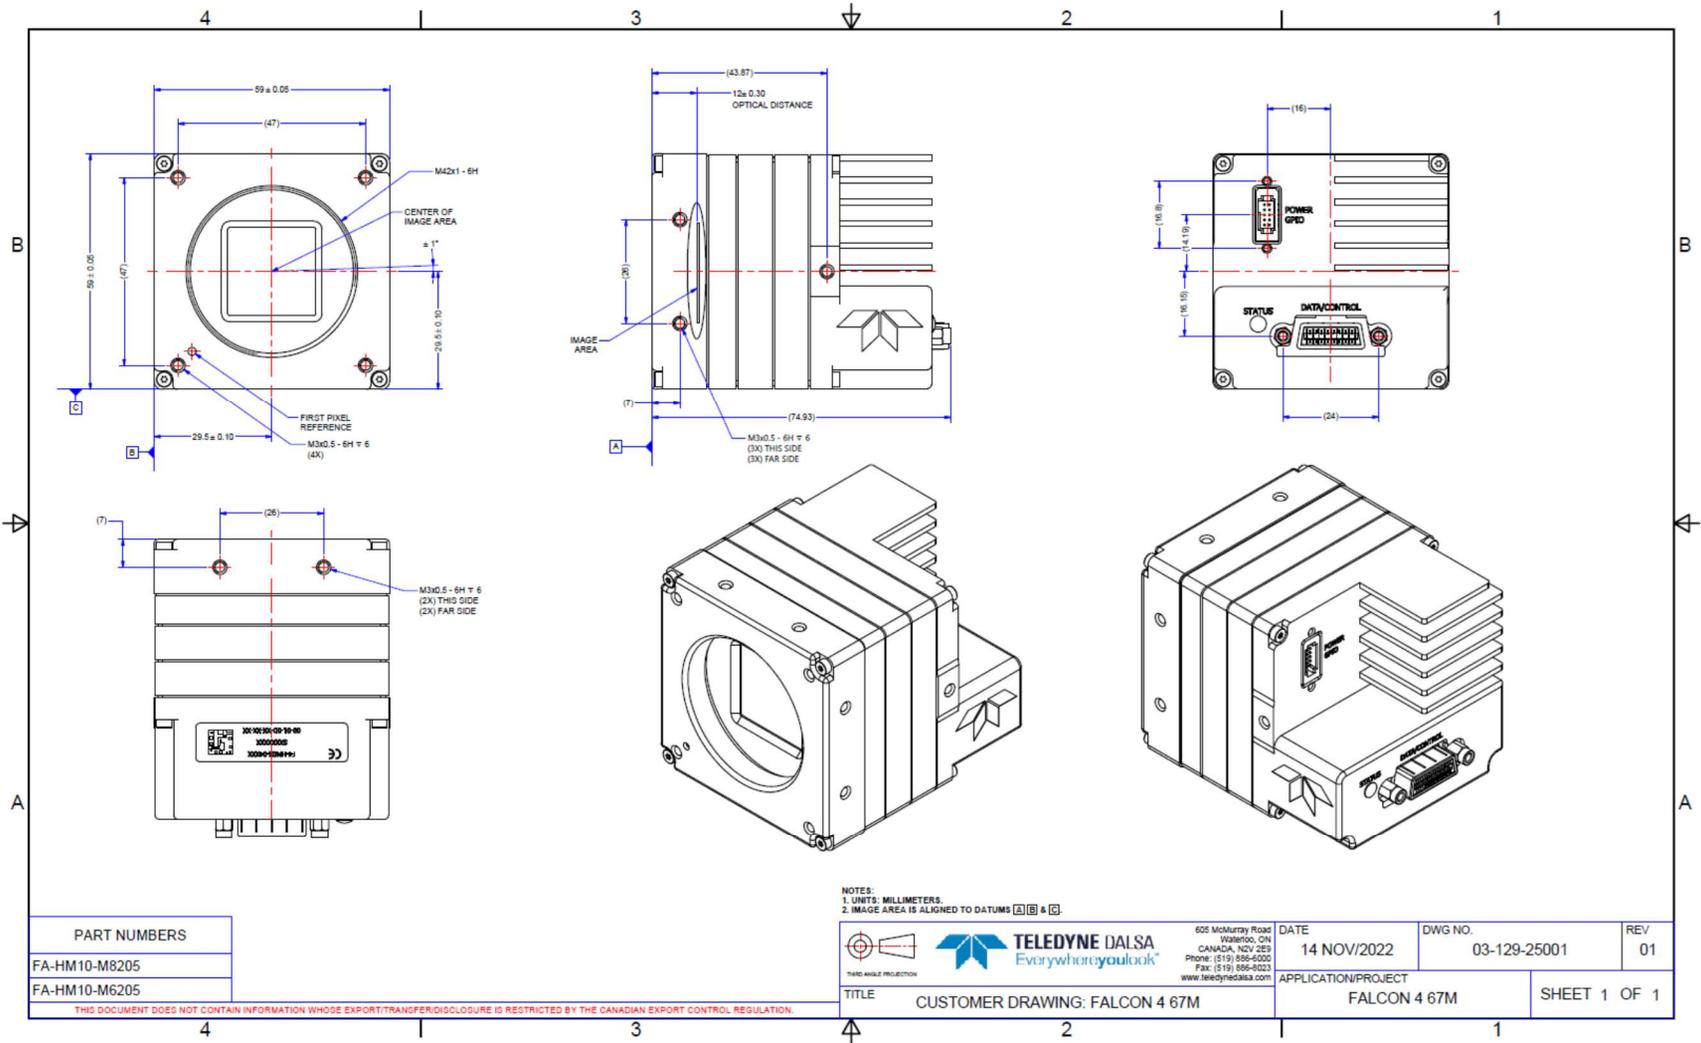

Falcon4 67M, model M8200.

Sensor Alignment Specification

The following figure specifies sensor alignment for Falcon4 where all specifications define the absolute maximum tolerance allowed for production cameras. Dimensions X, Y, Z, are in microns and referenced to the Falcon4 mechanical body or the optical focal plane (for the Z-axis dimension). Theta specifies the sensor rotation relative to the sensor's center and Falcon4 mechanical.

X variance	+/- 100 microns	<p>The diagram, titled "Sensor Alignment Reference", shows a central circle representing the sensor. A vertical dashed line passes through the center of the circle, with a small triangle pointing down at the top and another pointing up at the bottom. A horizontal dashed line also passes through the center. Labels with arrows indicate: <ul style="list-style-type: none"> Y variance: A vertical double-headed arrow to the left of the horizontal dashed line, labeled "(+/-) Y variance". theta variance: A curved arrow at the top of the vertical dashed line, labeled "(+/-) theta variance". X variance: A horizontal double-headed arrow below the circle, labeled "(+/-) X variance". Z variance: A label "Z variance not shown" to the right of the circle. </p>
Y variance	+/- 100 microns	
Z variance	+/- 300 microns	
Theta variance	+/- 1 degree	


Connectors

The Falcon4-CLHS camera has two connectors on its back panel. There is one CLHS (CX4) standard data and control connector plus a locking 10-pin connector for power and I/O signals. These are described below.

Camera Link HS (CX4)


The Camera Link HS camera connector (CX4) is defined in the AIA document "Specifications of the Camera Link HS Interface Standard for Digital Cameras and Frame Grabbers", which is at version 1.1 at the time of this manual's writing.

Typically, there is no need to be concerned with the physical pinout of the CX4 connector or cables. Refer to their site www.visiononline.org for additional information.

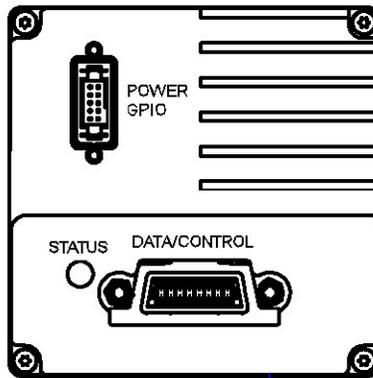

10-pin I/O Connector Details

A DC power source is connected to the 10-pin connector (SAMTEC TFM-105-02-L-D-WT). Falcon4-CLHS supports connecting cables with retention latches and/or screw locks. The following figure shows the pin number assignment.

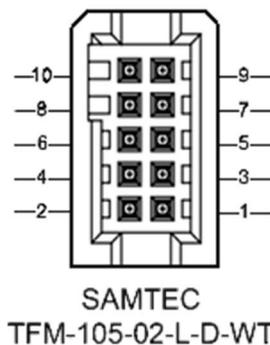

Teledyne DALSA makes available optional I/O cables as described in [I/O Cable Accessories](#). Contact Sales for availability and pricing.

Pinout Details for FA-HM00-M4485

Pin Number	Signal	Direction	Definition
1	PWR-GND	—	Camera Power – Ground
2	PWR-VCC	—	Camera Power – DC +10 to +30 Volts
3	GPI-Common	—	General Input/Output Common Ground
4	GPO-Power	—	General Output Common Power
5	GPI 1	In	General External Input 1
6	GPO 1	Out	General External Output 1
7	GPI 2	In	General External Input 2
8	GPO 2	Out	General External Output 2
9	GPO 3	Out	General External Output 3 / Fast Switching Output
10	Reserved		Do not use.

Pinout Details for FA-HM10-M4485, FA-HM11-M4405, FA-HM10-M8205

Pin Number	Signal	Direction	Definition
1	PWR-GND	—	Camera Power – Ground
2	PWR-VCC	—	Camera Power – DC +10 to +30 Volts
3	GPI-Common	—	General Input/Output Common Ground
4	GPO-Power	—	General Output Common Power
5	GPI 1	In	General External Input 1
6	GPO 1	Out	General External Output 1 / Fast Switching Output
7	GPI 2	In	General External Input 2
8	GPO 2	Out	General External Output 2 / Fast Switching Output
9	GPO 3	Out	General External Output 3 / Fast Switching Output
10	GPO 4	Out	General External Output 4 / Fast Switching Output

Camera DC Power Characteristics

DC Operating Characteristics		
Input Voltage	+10 Volts minimum	
Input Power Consumption	@ +12 Volt Supply	10.02 Watts typical*
Input Power Consumption	@ +24 Volt Supply	9.6 Watts typical*

* M4400 and M4480 models. Values for M8200 to be confirmed later.

Absolute Maximum DC Power Supply Range before Possible Device Failure		
Input Voltage	-50 Volt DC	+50 Volts DC

I/O Mating Connector Specifications & Sources

For users wishing to build their own custom I/O cabling, the following product information is provided to expedite your cable solutions. The SAMTEC web information for the discrete connector and a cable assembly with retention clips follows the table below.


MFG	Part #	Description	Data Sheet
Samtec	ISDF-05-D ISDF-05-D-M (see image below)	Discrete Connector (see example below)	https://www.samtec.com/products/isdf
Samtec	SFSD-05-[WG]-G-[AL]-DR-[E2O] WG : Wire Gauge AL : Assembled Length E2O : End 2 Option	Discrete Cable Assembly (see example below)	https://www.samtec.com/products/sfsd
ISDF-05-D-M Connector Availability On-Line			
North-America (specific country can be selected)		http://www.newark.com/samtec/isdf-05-d-m/connector-housing-receptacle-10/dp/06R6184	
Europe (specific country can be selected)		http://uk.farnell.com/samtec/isdf-05-d-m/receptacle-1-27mm-crimp-10way/dp/2308547?ost=ISDF-05-D-M	
Asia-Pacific (specific country can be selected)		http://sg.element14.com/samtec/isdf-05-d-m/receptacle-1-27mm-crimp-10way/dp/2308547?ost=ISDF-05-D-M	
Important: Samtec ISDF-05-D-S is not compatible with Falcon4.			

Samtec ISDF-05-D-M mating connector for customer-built cables w/retention clips “.050” Tiger Eye™ Discrete Wire Socket Housing”

ISDF-05-D-M

Description	Value
Series	ISDF
No. of Positions	-05
Row	-D - Double Row
End Options	-M - Metal Retention L
Part Number	ISDF-05-D-M

3D Preview
2D View
Download
Help

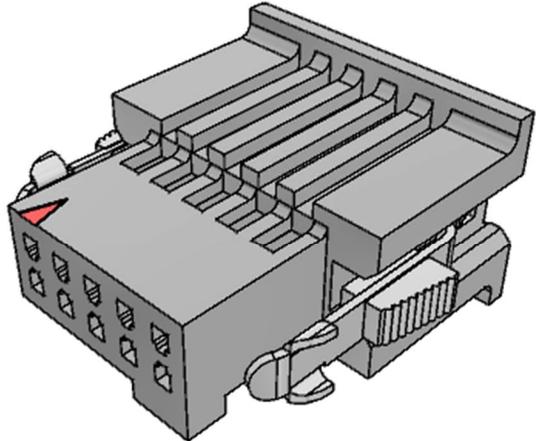


**Samtec connector-cable assembly SFSD-05-28-H-03.00-SR w/retention clips
 “.050” Tiger Eye™ Double Row Discrete Wire Cable Assembly, Socket”**

SFSD-05-28-H-03.00-SR	
Description	Value
Series	SFSD
No. of Positions	-05
Wire Gauge	-28 AWG
Wire Color Code	All Black Wire
Plating Options	-H - 30µm Heavy Gold
Assembly Length	3.00 INCH
End Option	-SR - Single Ended wit
Notch Option	Not Available
Part Number	SFSD-05-28-H-03.00-SR
Cable Type Option	PVC Cable

3D Preview
2D View
Download
Help

Input Signals Electrical Specifications

External Inputs Block Diagram

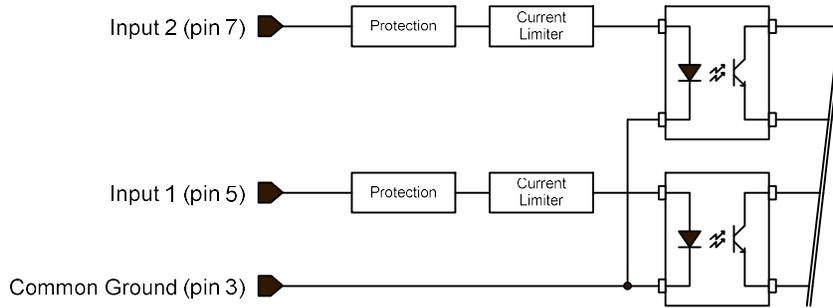

External Input Details

- Opto-coupled with internal current limit.
- Single input trigger threshold level (TTL standard: $<0.8V$ =Logical LOW, $>2.4V$ =Logical HIGH. See [lineDetectionLevel](#) feature).
- Used as trigger acquisition event, counter or timestamp event, or integration control.
- User programmable debounce time from 0 to 255 μ s in 1 μ s steps.
- Source signal requirements:
 - Single-ended driver meeting TTL, 12V, or 24V standards (see table below)
 - If using a differential signal driver, only one input can be used due to the shared input common (see details below)

External Input DC Characteristics

Operating Specification	Minimum	Maximum
Input Voltage	+3 V	+36 V
Input Current	7 mA	11.8 mA
Input logic Low		0.8 V
Input logic High	2.5 V	

Absolute Maximum Range before Possible Device Failure


Absolute Ratings	Minimum	Maximum
Input Voltage	-36 Volts	+36 Volts

External Input AC Timing Characteristics

Conditions	Description	Min	Unit
Input Pulse 0V – 3V	Input Pulse width High	132	μ s
	Input Pulse width Low	1.22	μ s
	Max Frequency	392	KHz
Input Pulse 0V – 5V	Input Pulse width High	202	μ s
	Input Pulse width Low	1.28	μ s
	Max Frequency	392	KHz
Input Pulse 0V -12V	Input Pulse width High	345	μ s
	Input Pulse width Low	1.28	μ s
	Max Frequency	392	KHz
Input Pulse 0V – 24V	Input Pulse width High	132	μ s
	Input Pulse width Low	1.22	μ s
	Max Frequency	392	KHz


External Inputs: Using TTL/LVTTL Drivers

- External Input maximum current is limited by the Falcon4 circuits to a maximum of 12 mA.

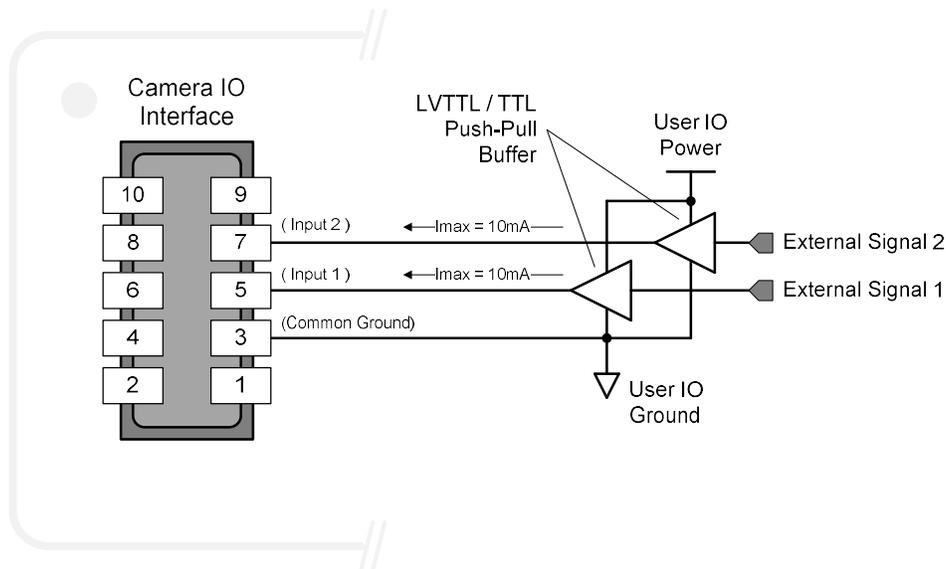


External Inputs: Using Common Collector NPN Drivers

- External Input maximum current is limited by the Falcon4 circuits to a maximum of 12 mA.

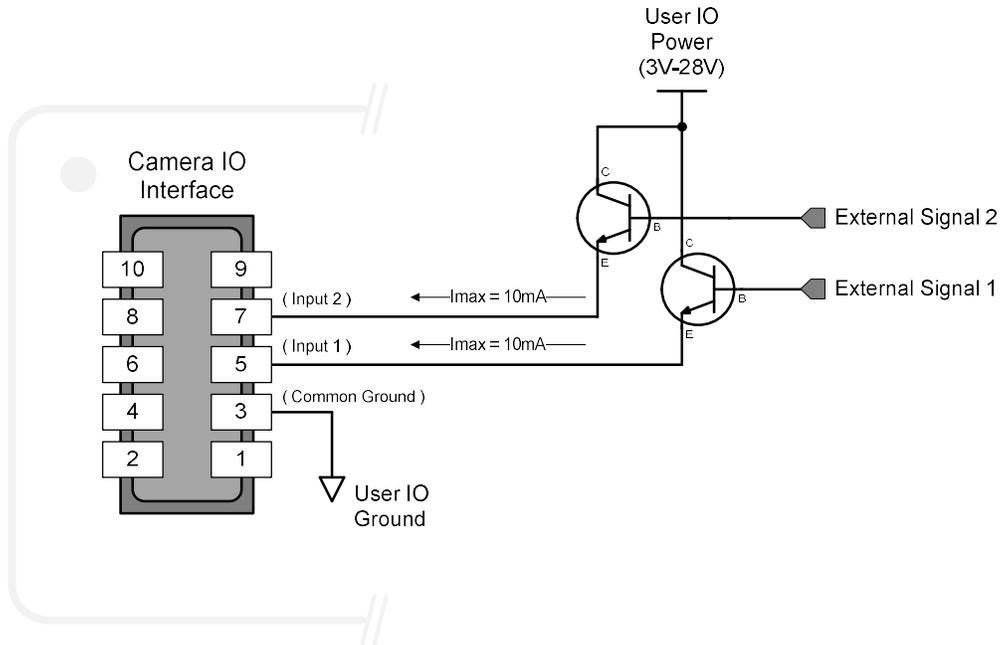


External Inputs: Using Common Emitter NPN Driver

- External Input maximum current is limited by the Falcon4 circuits to a maximum of 12 mA.
- Warning: Only one External Signal can be used (input 1 or input 2).

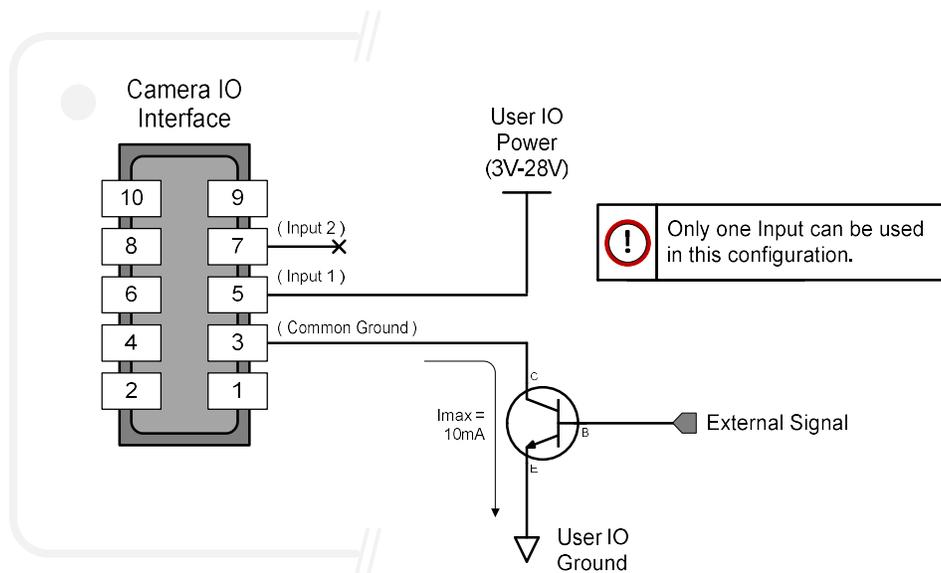


External Inputs: Using a Balanced Driver

- Warning: Only one External Signal can be used (input 1 or input 2).

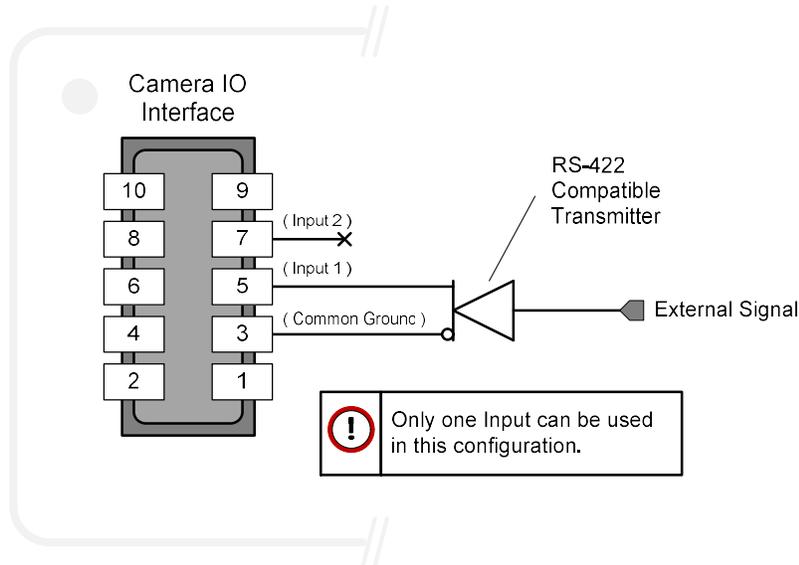

Output Signals Electrical Specifications

External Outputs Block Diagram

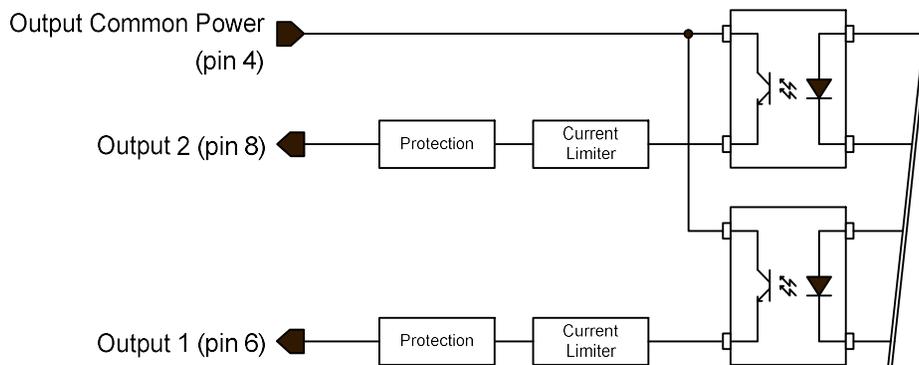


External Output Details and DC Characteristics

- Programmable output mode such as strobe, event notification, etc. (see [outputLineSource](#) feature)
- Outputs are open on power-up with the default factory settings
- A software reset will not reset the outputs to the open state if the outputs are closed
- A user setup configured to load on boot will not reset the outputs to the open state if the outputs are closed
- No output signal glitch on power-up or polarity reversal
- **Typical** Operating Common Power Voltage Range: +3V to 28Vdc at 24mA
- **Maximum** Common Power Voltage Range : ±30Vdc
- **Maximum** Output Current: 36mA

External Output AC Timing Characteristics

The graphic below defines the test conditions used to measure the Falcon4 external output AC characteristics, as detailed in the tables that follows.

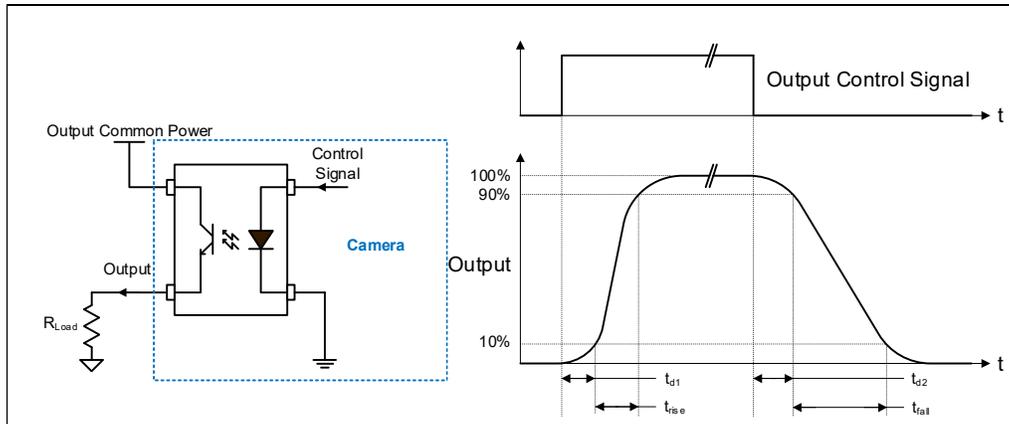

Output Characteristics, FA-HM00-M4485

Opto-coupled Output: AC Characteristics

Note: All measurements subject to some rounding.

The following tables describes **GPO 1** and **GPO 2** when the load is connected to a user-provided ground. Test conditions are with front plate temperature $\sim 60\text{C}$.

Output Common Power	Output Current	R _{load} Test (ohm)	t _{d1} (μs) Leading Delay	t _{rise} (μs) Rise Time	t _{d2} (μs) Trailing Delay	t _{fall} (μs) Fall Time	V _{out} (V)
3V	8 mA	240	0.459	3	11	20.41	2.17
	12mA	144	0.6	6.95	4.4	20	1.75
	16 mA	40	0.6	11	1	12.9	0.559
5V	8 mA	523	0.469	2.64	12	22	4.24
	16 mA	159	0.485	7.52	2.55	12	2.57
	24 mA	69	0.64	7.52	1	8.42	1.69
12V	8 mA	1400	0.52	3.28	10.6	25.64	11.23
	16 mA	595	0.52	3.28	4.12	13.86	9.61
	24 mA	360	0.531	3.76	2.48	13.8	8.72
24V	8 mA	2907	0.541	1.63	22.8	37.8	23.31
	16 mA	1346	0.556	2.2	7.4	18.32	21.58
	24 mA	861	0.567	2.5	6.61	12.93	20.72

General Purpose Output 3 Fast Switching

GPO 3 supports a fast switching mode with ground of the user load connected to pin 3 (General Input/Output Common Ground). Note, **GPO 1** and **GPO 2** do not support fast switching. Test conditions are with front plate temperature ~60C.

Output Common Power	Output	R _{load}	t _{d1} (us)	t _{rise} (μs)	t _{d2} (μs)	t _{fall} (μs)	V _{out} (V)
	Current	Test (ohm)	Leading Delay	Rise Time	Trailing Delay	Fall Time	
5V	8 mA	561	1	0.7	3.64	0.5	4.53
	16 mA	277	1	0.7	3.48	0.659	4.45
	24 mA	182	1	0.7	3.32	0.65	4.37
12V	8 mA	1444	0.934	0.2321	2.88	0.949	11.49
	16 mA	713	0.945	0.2563	2.86	0.42	11.41
	24 mA	467	0.952	0.2739	2.78	0.224	11.33
24V	8 mA	2930	0.81	0.2079	3.542	1.639	23.57
	16 mA	1464	0.803	0.2244	2.908	0.981	23.47
	24 mA	970	0.82	0.2222	2.6	0.616	23.39


Output Characteristics, FA-HM10-M4485, FA-HM11-M4405, FA-HM10-M8205

General Purpose Outputs 1, 2, 3 and 4 Fast Switching

On these models, all general-purpose outputs support a fast switching mode with ground of the user load connected to pin 3 (General Input/Output Common Ground). Test conditions are with front plate temperature ~60C.


Output Common Power	Output	R _{load}	t _{d1} (us)	t _{rise} (μs)	t _{d2} (μs)	t _{fall} (μs)	V _{out} (V)
	Current	Test (ohm)	Leading Delay	Rise Time	Trailing Delay	Fall Time	
5V	8 mA	561	1	0.7	3.64	0.5	4.53
	16 mA	277	1	0.7	3.48	0.659	4.45
	24 mA	182	1	0.7	3.32	0.65	4.37
12V	8 mA	1444	0.934	0.2321	2.88	0.949	11.49
	16 mA	713	0.945	0.2563	2.86	0.42	11.41
	24 mA	467	0.952	0.2739	2.78	0.224	11.33
24V	8 mA	2930	0.81	0.2079	3.542	1.639	23.57
	16 mA	1464	0.803	0.2244	2.908	0.981	23.47
	24 mA	970	0.82	0.2222	2.6	0.616	23.39

External Outputs: Using External TTL/LVTTL Drivers

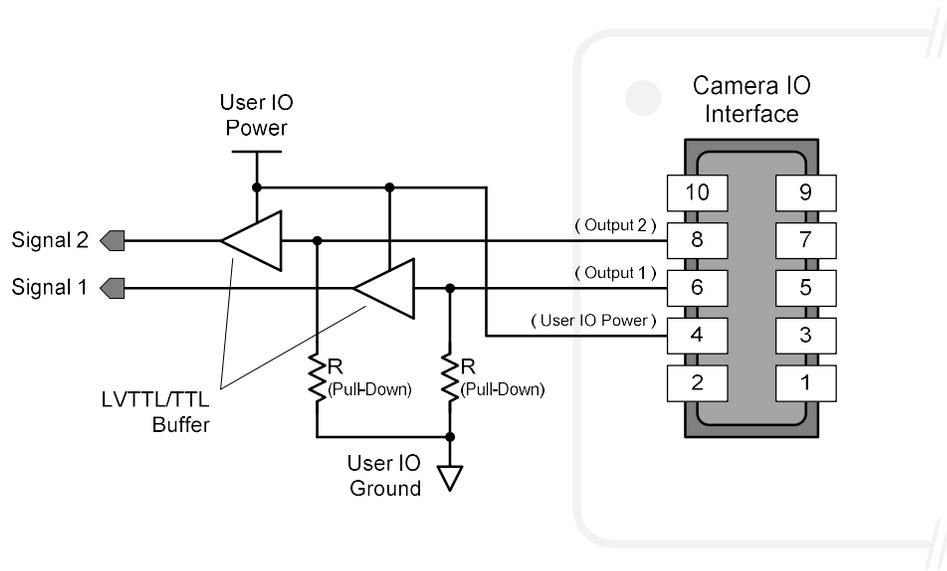


External Outputs: Using External LED Indicators

- Two external LEDs can be connected in the Common Cathode configuration.

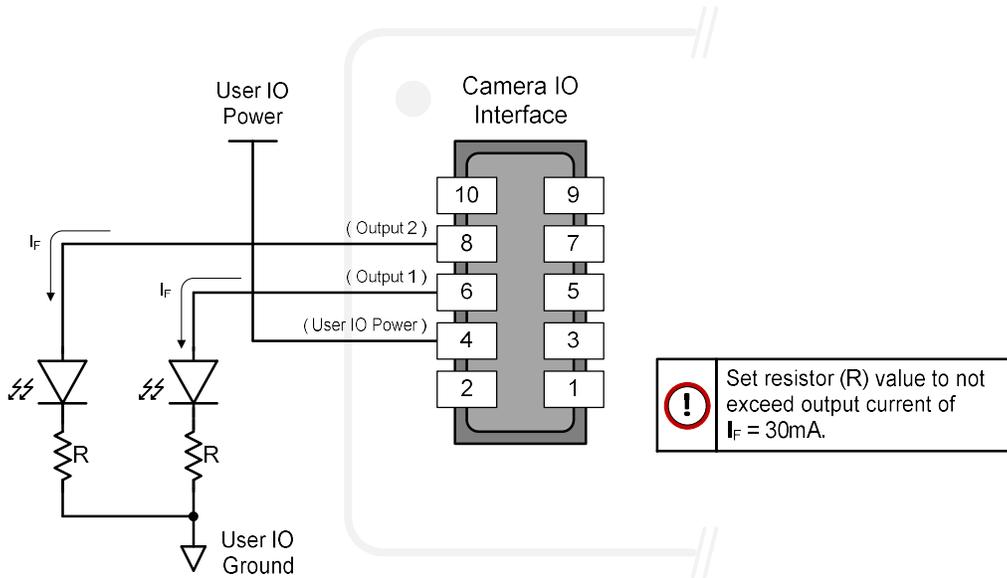


- Alternatively, one external LED can be connected in the Common Anode configuration.

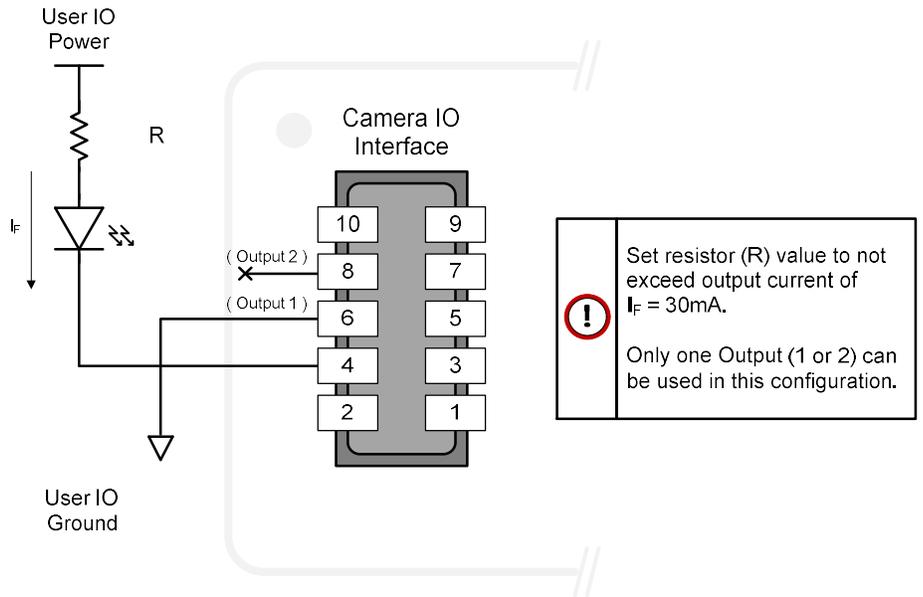

Using Falcon4 Outputs to drive other Falcon4 Inputs

- A synchronization method where one Falcon4 camera signals other Falcon4 cameras.
- Note: One Falcon4 output can drive a maximum of three Falcon4 inputs, as illustrated below.

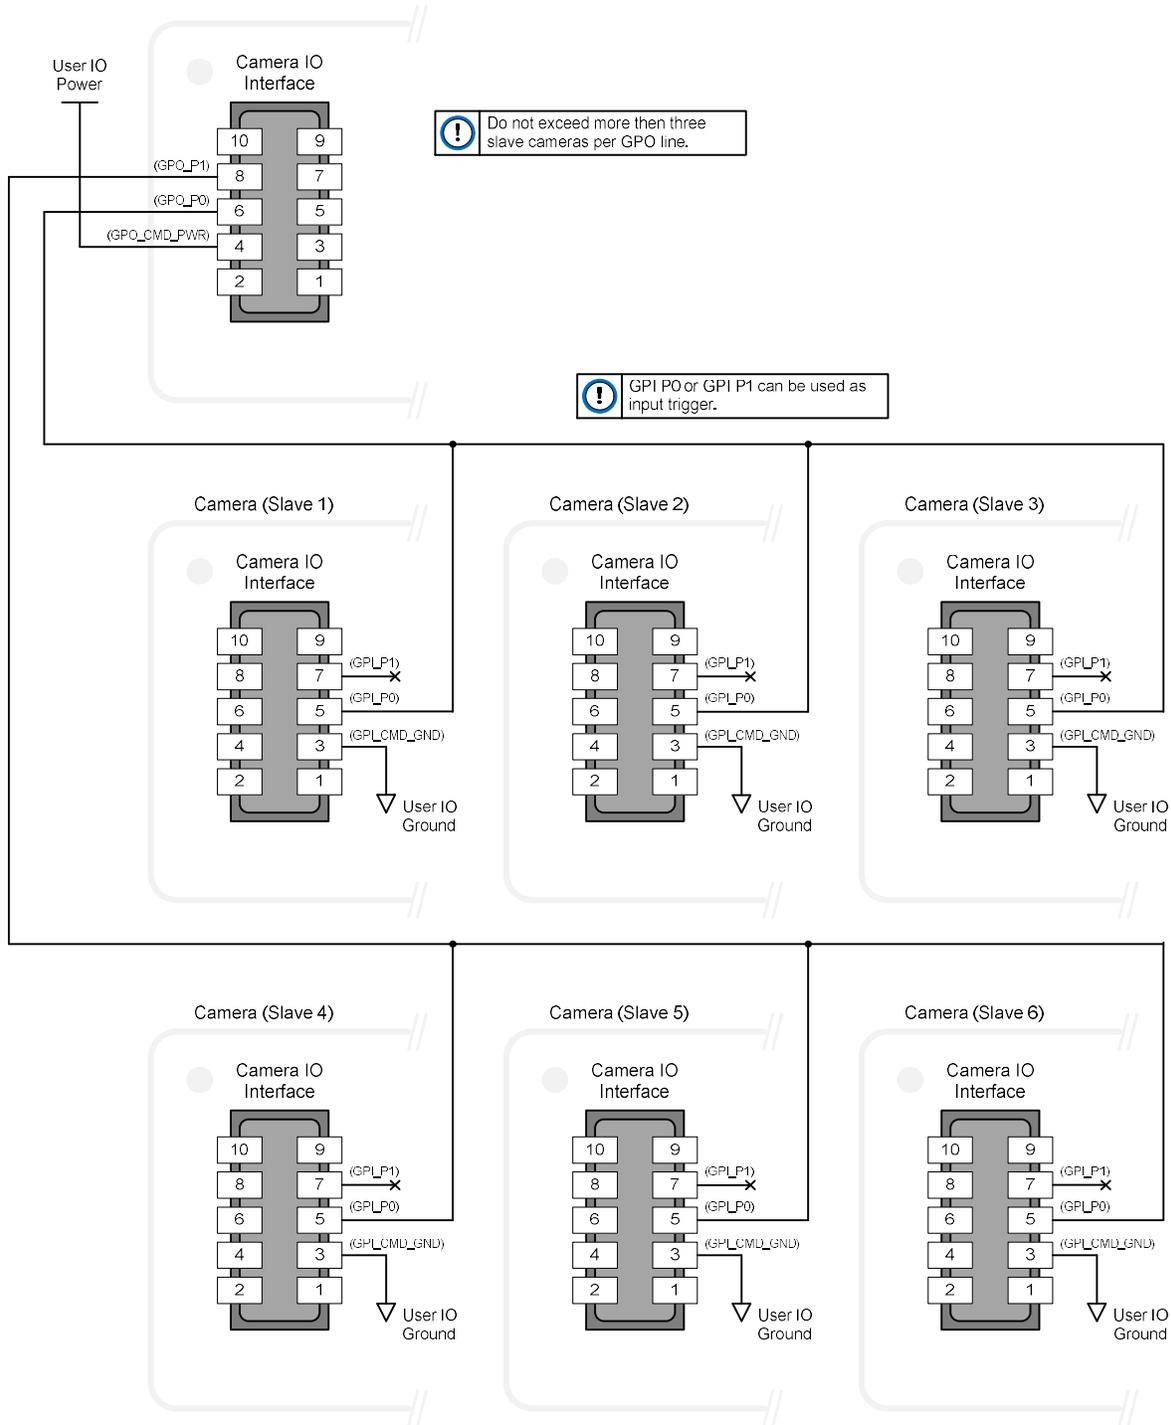

Declarations of Conformity

Copies of the Declarations of Conformity documents are available on the product page on the [Teledyne DALSA website](#) or by request.

FCC Statement of Conformance

This equipment complies with Part 15 of the FCC rules. Operation is subject to the following conditions:

1. The product may not cause harmful interference; and
2. The product must accept any interference received, including interference that may cause undesired operation.

FCC Class A Product

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment is intended to be a component of a larger industrial system.

EU and UKCA Declaration of Conformity

Teledyne DALSA declares that this product complies with applicable standards and regulations.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This product is intended to be a component of a larger system and must be installed as per instructions to ensure compliance.


Additional Reference Information

Choosing a Lens with the Correct Image Circle

Falcon4 requires a lens with an image circle specification to fully illuminate the sensor. The following section graphically shows the minimum lens image circle for each model along with alternative lens types. Brief information on other lens parameters to consider follows those sections.

Lens Options for Models with M42 Mounts

- The following figure shows the lens image circles relative to Falcon4-CLHS models using the Lince 11M sensor and Emerald 67M.
- Cameras with a M42 screw mount need image circles exceeding the diameter of the sensors.

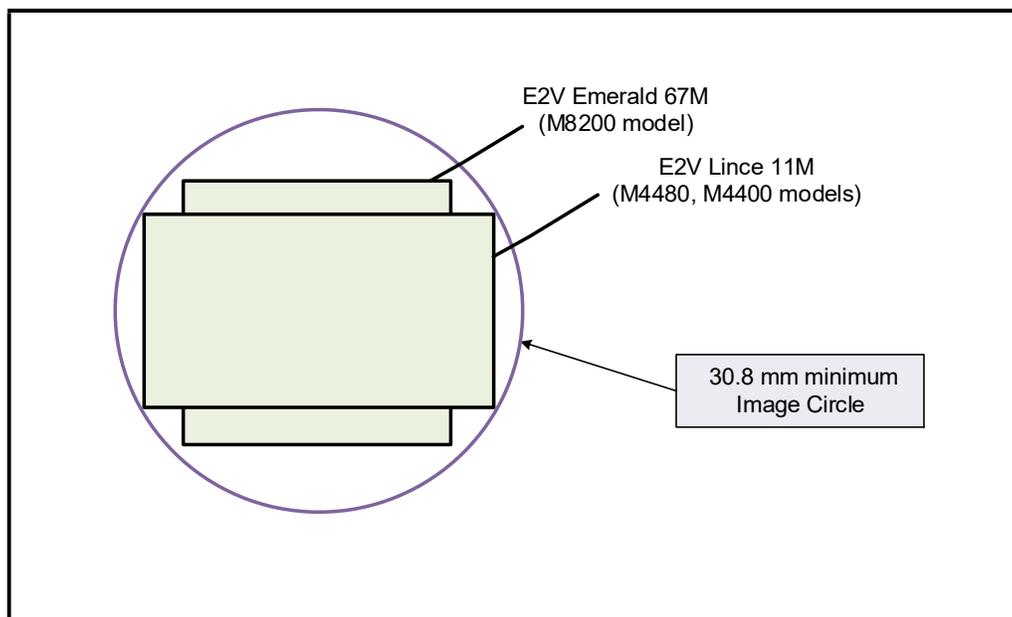

Additional Lens Parameters (application specific)

There are other lens parameters that are chosen to meet the needs of the vision application. These parameters are independent of the Falcon4. A vision system integrator or lens specialist should be consulted when choosing lenses since there is a tradeoff between the best lenses and cost. An abridged list of lens parameters follows – all of which need to be matched to the application.

- **Focal Length:** Defines the focus point of light from infinity.
See Camera Specifications — [Back Focal Distance](#).
- **Field of View:** A lens is designed to image objects at some limited distance range, at some positive or negative magnification. This defines the field of view.
- **F-Number (aperture):** The lens aperture defines the amount of light that can pass. Lenses may have fixed or variable apertures. Additionally, the lens aperture affects Depth of Field which defines the distance range which is in focus when the lens is focus at some specific distance.
- **Image Resolution and Distortion:** A general definition of image quality. A lens with poor resolution appears out of focus when used to image fine details.
- **Aberrations (defect, chromatic, spherical):** Aberrations are specific types of lens faults affecting resolution and distortion. Lens surface defects or glass faults distort all light or specific colors. Aberrations are typically more visible when imaging fine details.
- **Spatial Distortions:** Describes non-linear lens distortions across the field of view. Such distortion limits the accuracy of measurements made with that lens.

Optical Considerations

This section provides an overview to illumination, light sources, filters, lens modeling, and lens magnification. Each of these components contribute to the successful design of an imaging solution.

Illumination

The wavelengths and intensity of light required to capture useful images vary per application. The image will be affected by speed, spectral characteristics, exposure time, light source characteristics, environmental and acquisition system specifics, etc. Look at Teledyne DALSA's [Knowledge Center](#) for articles on this potentially complicated issue.

Exposure settings have more effect than illumination. The total amount of energy (which is related to the total number of photons reaching the sensor) is more important than the rate at which it arrives.

Example: $5 \mu\text{J}/\text{cm}^2$ can be achieved by exposing $5 \text{ mW}/\text{cm}^2$ for 1 ms or exposing $5 \text{ W}/\text{cm}^2$ for 1 μs .

Light Sources


Keep these guidelines in mind when selecting and setting up a light source:

- LED light sources are inexpensive and provide a uniform field with a longer life span compared to other light sources.
- Halogen and fiber-optic light sources provide very little blue relative to IR.
- Some light sources age and produce less illumination in some areas of the spectrum.

Back Focal Variance when using any Filter

Inserting a filter between a lens and sensor changes the back focal point of the lens used. A variable focus lens simply needs to be adjusted, but in the case of a fixed focus lens, the changed focal point needs correction.

The following simplified illustration describes this but omits any discussion of the optics, physics, and math behind the refraction of light through glass filter media.

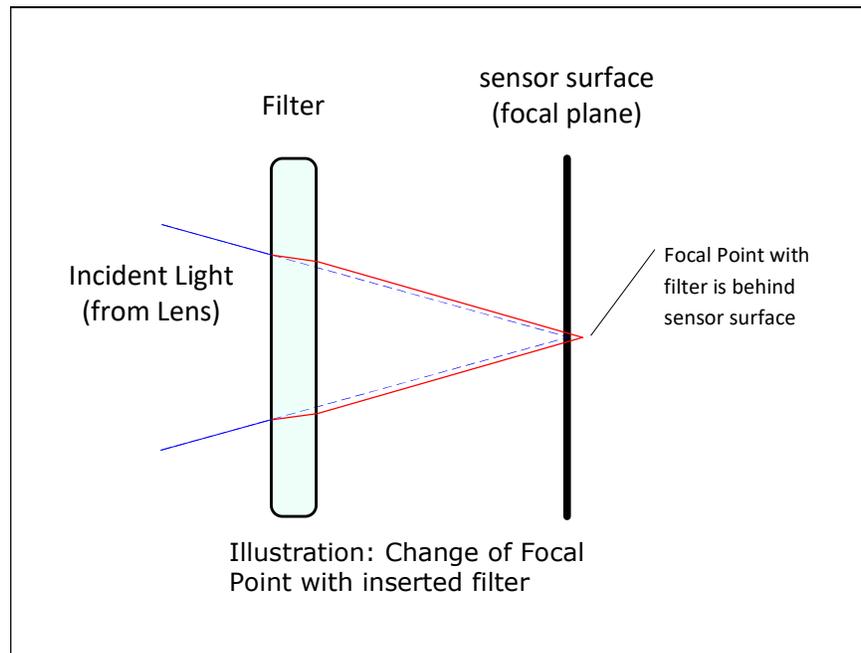

In this example when a glass filter is inserted between the lens and the camera sensor, the focal point is now about 1/3 of the filter thickness behind the sensor plane.

Lens Modeling

Any lens surrounded by air can be modeled for camera purposes using three primary points: the first and second principal points and the second focal point. The primary points for a lens should be available from the lens data sheet or from the lens manufacturer. Primed quantities denote characteristics of the image side of the lens. That is, h is the object height and h' is the image height.

The focal point is the point at which the image of an infinitely distant object is brought to focus. The effective focal length (f') is the distance from the second principal point to the second focal point. The back focal length (BFL) is the distance from the image side of the lens surface to the second focal point. The object distance (OD) is the distance from the first principal point to the object.

Primary Points in a Lens System

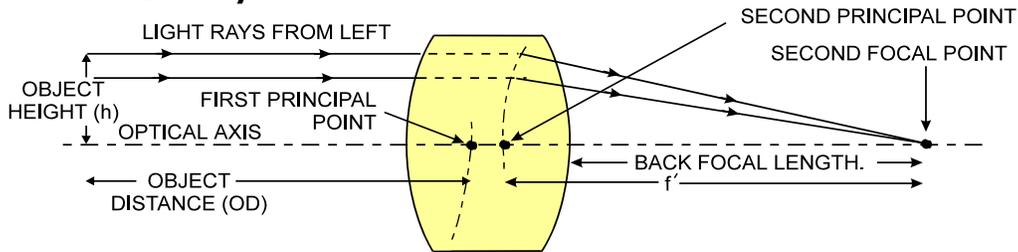


Figure 1: Primary Points in a Lens System

Magnification and Resolution

The magnification of a lens is the ratio of the image size to the object size:

$m = h'/h$	Where m is the magnification, h' is the image height (pixel size) and h is the object height (desired object resolution size).
------------	--

By similar triangles, the magnification is alternatively given by:

$m = f'/OD$	Where f' is the focal length and OD is the target object distance.
-------------	--

These equations can be combined to give their most useful form:

$h'/h = f'/OD$	This is the governing equation for many object and image plane parameters.
----------------	--

Example: An acquisition system has a 512 x 512-element 10 μm pixel pitch, a lens with an effective focal length of 45 mm. For each pixel in the image sensor to correspond to 100 μm in the object space, using the preceding equation, the object distance must be 450 mm (0.450 m).

$(10 \mu\text{m}) / (100 \mu\text{m}) = (45 \text{ mm}) / OD$	$OD = 450 \text{ mm } (0.450 \text{ m})$
---	--

Sensor Handling Instructions

This section reviews procedures for handling, cleaning or storing the camera. The sensor must be kept clean and away from static discharge to maintain design performance.

Electrostatic Discharge and the Sensor

Camera sensors containing integrated electronics are susceptible to damage from electrostatic discharge (ESD).

Electrostatic charge introduced to the sensor window can induce charge buildup on the underside of the window. The dry nitrogen gas in the sensor package cavity cannot readily dissipate the ESD. Problems such as higher image lag or non-uniform response may occur.



Note: The charge normally dissipates within 24 hours and the sensor returns to normal operation.

Important: Charge buildup will affect the camera's Flat-Field Correction calibration. To avoid an erroneous calibration, ensure that you perform Flat-Field Correction only after a charge buildup has dissipated over 24 hours.

Protecting Against Dust, Oil and Scratches

The sensor window is part of the optical path and must be handled with extreme care.

Dust can obscure pixels producing dark patches on the sensor image. Dust is most visible when the illumination is collimated. The dark patches shift position as the angle of illumination changes. Dust is normally not visible when the sensor is positioned at the exit port of an integrating sphere where illumination is diffused.

Blowing compressed air on the window will remove dust particles unless they are held by an electrostatic charge. In this case, either an ionized air blower or a wet cleaning is necessary.

Touching the surface of the window will leave oily residues. Using rubber finger cots and rubber gloves can prevent oil contamination. Avoid friction between the rubber and window or electrostatic charge build up may damage the sensor.

When handling or storing the camera without a lens always install the protective cap.



Note: When exposed to uniform illumination a scratched window will normally have brighter pixels adjacent to darker pixels. The location of these pixels will change with the angle of illumination.

Cleaning the Sensor Window

The following steps describe various cleaning techniques to clean minor dust particles and accidental fingerprints.



Important: Avoid using canned air as it contains particulates that can increase the contamination of the sensor window.

- DALSA recommends the use of an ionized air gun and compressor to blow off the sensor.
- Use compressed air to blow off loose particles. This step alone is usually sufficient to clean the sensor window. Avoid moving or shaking the compressed air container and use short bursts of air while moving the camera in the air stream. Agitating the container will cause condensation to form in the air stream.



Note: Extended airbursts will chill the sensor window causing more condensation. Condensation when left to dry naturally will deposit particles on the sensor.

- Use lint-free ESD-safe cloth wipers. The Anticon Gold 9"x 9" wiper made by Milliken is both ESD safe and suitable for class 100 environments. Another ESD acceptable wiper is the TX4025 from Texwipe.
- An alternative to ESD-safe cloth wipers is Transplex swabs that have desirable ESD properties. There are several varieties available from Texwipe.
- Wipe the window carefully and slowly when using these products.



Note: Do not use regular cotton swabs, since these can introduce static charge to the window surface.

I/O Cable Accessories

Teledyne DALSA provides optional I/O cable assemblies. Users wishing to build their I/O cabling by starting from available cable packages should consider these popular assemblies described below. Contact Sales for pricing and delivery.

Users also may order cable assembly quantities directly from Alysium-Tech or Hewtech. In such cases use the manufacturer's part number shown on the cable assembly engineering drawing.

Cable Manufacturers Contact Information

For Information contact: <i>(see their web site for worldwide offices)</i>	Alysium-Tech 101 Montgomery Street, Suite 2050 San Francisco, CA 94104 Phone: 415 248 7807 Fax: 415 248 7800 https://www.alysium.com/
	HIRAKAWA HEWTECH CORP Sales Division. 3-28-10 Minami-Ooi, Shinagawa, Tokyo 140-8551 Tel: 03-5493-1711 https://www.hewtech.co.jp/e/index.html

Cable Assembly G5-AIOC-BLUNT2M

A+
what you expect + More.

Cable Assembly:

DRAWING REF: **LPR 0002(Header-P End).001**
 DRAWING REF: Packaging Details (MON 200422) Initial Issue

FRONT VIEW:

BACK VIEW:

Orientation Instruction Sheet Details:

ALYSIUM CE LABEL DETAIL
Mark to indicate the "ALY CE" format

Specify ATP Part Number

ATPA
 Alysium Tech GmbH
 Industriemacher Str. 31b, 90411 Nuremberg, Germany

NOTE:
 Label position must be as the top left side before the opening line of the AT Bag

Front

Back

Connection Guidelines

Pin 1: Black
 Pin 2: Red
 Pin 3: Brown
 Pin 4: Orange
 Pin 5: Yellow
 Pin 6: Green
 Pin 7: Blue
 Pin 8: Purple
 Pin 9: Grey
 Pin 10: White

Making Pin View

Packaging Content:

- 1) Basic Assembly 1pc
- 2) Magic Tie/ Cable Tie 2pcs
- 3) White Pad Print on Cable
- 4) Label On Bag Pad Print (White Background With Black Letter Printing)
- 5) Orientation Instruction Sheet
- 6) Label On Bag (ALY CE)

Table 1: Assembly Coiling Inner Diameter (Unless Otherwise Specified)

Type of Cable [Jacket OD(mm)]	Coil ID (mm)
A11-8404[OD4.50]	150

Cable Label Guideline

PAD PRINT <WHITE >
Mark to indicate the "ALY CE" format

XX-XXM-XYZ-(2)
Specified Cable Length
 Week
 Year

RoHS COMPLIANT

ALYSIUM

This document is the property of Alysium-Tech. It must not be copied or otherwise disclosed without prior written consent.



Troubleshooting

Overview

In rare cases an installation may fail or there are problems in controlling and using the camera. This section highlights issues or conditions which may cause installation problems. Emphasis is on the user to perform diagnostics with the tools provided plus methods are described to correct the problem.

Problem Type Summary

Problems are either installation issues due to cabling or power, or setup errors with the frame grabber configuration.

Before Contacting Technical Support

Carefully review the issues described in this Troubleshooting section. To aid Teledyne DALSA personnel when support is required, the following should be included with the request for support.

- From the **Start** menu, select **Teledyne Dalsa Sapera LT > Sapera Log Viewer**. From its **File** menu click on **Save Messages** to generate a log text file.
- Report the version of camera Firmware and Sapera version used.
- Report the frame grabber brand and model used. Provide specifications for any third party frame grabber used.

Device Available with Operational Issues

This section considers issues with frame grabbers, cabling, multiple cameras and camera exposure.

Firmware Updates

As a general rule any installation must include the firmware update procedure to ensure having the latest build (see [Updating Firmware via File Access in CamExpert](#)).

Note:

- A Falcon4 that had a fault with a firmware update will automatically recover by booting with the previous firmware version.



Important: New cameras installed in previously deployed systems are fully backward compatible with the older vision application.

Power Failure during a Firmware Update—Now What?

Don't panic! There is far greater chance that the host computer OS is damaged during a power failure than any permanent problems with the Falcon4. When power returns and the computer restarts, follow the procedure below to complete the firmware update.

- Connect power to the camera. The processor knows that the firmware update failed.
- The camera will boot with the previous version of firmware and will operate normally.
- Perform the firmware update procedure again.

Cabling and Communication Issues

Power supply problems:

- Verify the DC power supply voltage and I/O cable wiring.

Communication Problems:

- Use quality CX4 AOC (Active Optical Cable) cables. For I/O, use quality shielded I/O cables. This can eliminate issues in a high EMI environment. Purchase CX4 cables from certified sources.
- Use the Sapera Log Viewer tool for error conditions:
 - From the **Start** menu, select **Teledyne Dalsa Sapera LT > Sapera Log Viewer**.
 - Start an acquisition program, such as CamExpert.
 - Review the log output for error messages.

Camera is functional, frame rate is as expected, but image is black

- Using CamExpert, set the Falcon4 to output its Internal Pattern Generator (with external trigger Off). This step is typically done for any camera installation to quickly verify the camera and its software package.
- If using an external trigger exposure (via the frame grabber), verify the trigger source rate and pulse width coming from the grabber parameters.
- Verify that the lens iris is open.
- Aim the camera at a bright light source.
- Check that the programmed exposure duration is not too short or set it to maximum.

Revision History

Revision	Date	Major Change Description
03-032-20295-00	August 18, 2021	Initial release.
03-032-20295-01	February 2, 2022	Binning and Lens Shading Correction.
03-032-20295-02	July 18, 2022	New Long Exposure Mode feature. Update of Output Dynamic Range and Full Well charge values. Update of Responsivity graph.
03-032-20295-03	September 29, 2022	Additional model. New features: Cycling Preset, Metadata, Multi ROI, LUT, Digital Gain.
03-032-20295-04	December 5, 2022	New M8200 model. Updates in metadata (factory gain).

Contact Information

Sales Information

Visit our web site:	http://www.teledynedalsa.com/en/products/imaging/
Email:	mailto:info@teledynedalsa.com

Canadian Sales	
Teledyne DALSA — Head office 605 McMurray Road Waterloo, Ontario, Canada, N2V 2E9 Tel: 519 886 6000 Fax: 519 886 8023	Teledyne DALSA — Montreal office 880 Rue McCaffrey Saint-Laurent, Quebec, Canada, H4T 2C7 Tel: (514) 333-1301 Fax: (514) 333-1388
USA Sales	European Sales
Teledyne DALSA — Billerica office 700 Technology Park Drive Billerica, Ma. 01821 Tel: (978) 670-2000 Fax: (978) 670-2010	Teledyne DALSA GMBH Lise-Meitner-Str. 7 82152 Krailling (Munich), Germany Tel: +49 – 89 89545730 sales.europe@teledynedalsa.com
Asian Sales	
Teledyne DALSA Asia Pacific Ikebukuro East 6F 3-4-3 Higashi Ikebukuro, Toshima-ku, Tokyo, Japan Tel: +81 3 5960 6353 Fax: +81 3 5960 6354 sales.asia@teledynedalsa.com	Teledyne DALSA Asia Pacific Room 904, Block C, Poly West Bund Center 75 Rui Ping Road Shanghai 200032 Tel: +86-21-60131571 sales.asia@teledynedalsa.com

Technical Support

Submit any support question or request via our web site:

Technical support form via our web page: Support requests for imaging product installations, Support requests for imaging applications	http://www.teledynedalsa.com/mv/support
Camera support information	
Product literature and driver updates	